

PLUGIN 280

The lay-by pins are placed in the lower part of the ECU. Micro SH7059

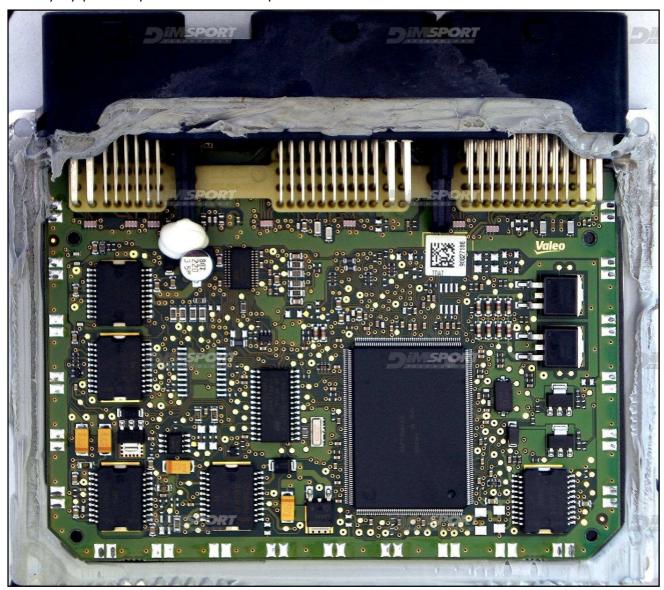


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. Use the same power connection with the DIMA too.

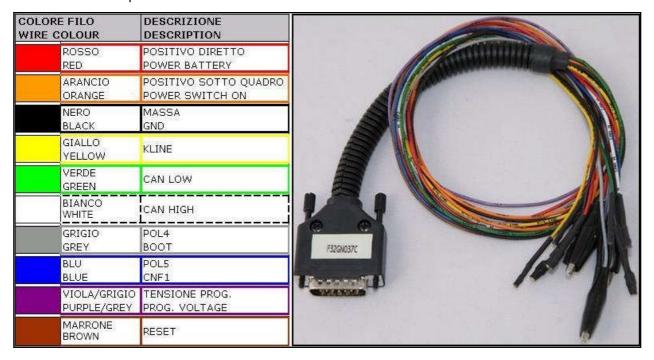

ECU CONNECTOR

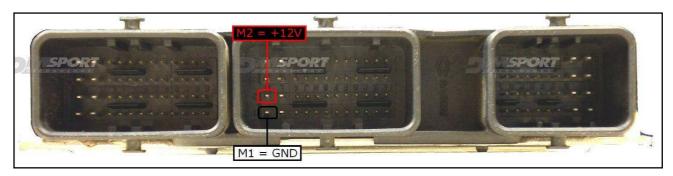


WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

The second secon	25 12 26	
Pin	Colore	
	Colour	
11	Non usato	
Market III	Not used Non usato	
12	Not used	
10	Non usato	
13	Not used	
14	Non usato	
	Not used Non usato	
15	Not used	
16	Blu	
10	Blue	
17	Viola	
	Violet Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero	
	Black	
21	Marrone	
	Brown	
22	Rosso	
Brew	Red Arancio	
23	Orange	
24	Giallo	
6000	Yellow Verde	
25	Green	
26	Non usato	
26	Not used	

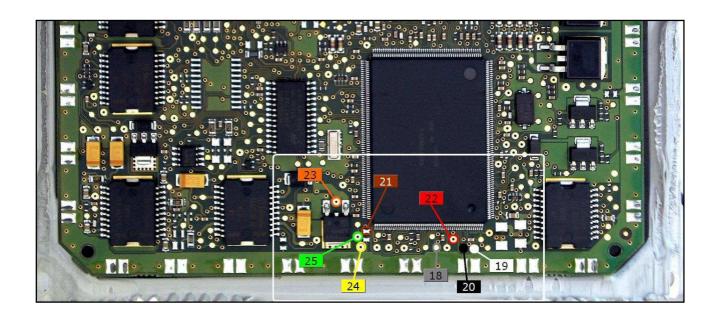

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

