

PLUGIN 251

Lay-by pins are placed in the lower side of the ECU. Micro SH7058.

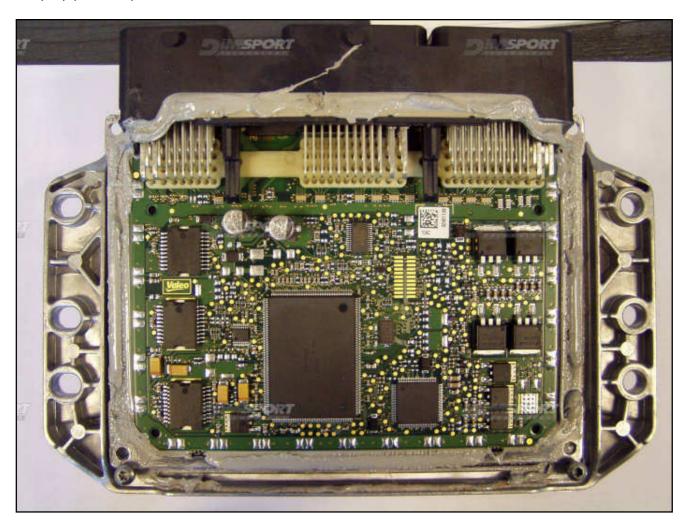

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

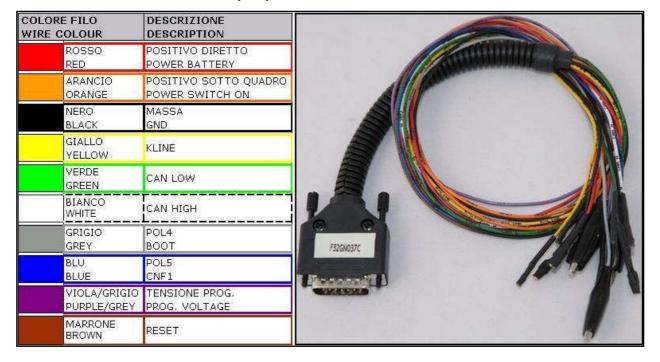

ECU CONNECTOR




WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore	
	Colour	
11	Non usato	
AND THE RESERVE OF THE PERSON	Not used	
1.2	Non usato Not used	
12	Non usato	
13	Not used	
14	Non usato	
17	Not used	
15	Non usato Not used	
4.5	Blu	
16	Blue	
17	Viola	
	Violet	
18	Grigio Grey	
2.4	Bianco	
19	White	
20	Nero	
20	Black	
21	Marrone	
	Brown	
22	Rosso	
876	Red Arancio	
23	Orange	
24	Giallo	
CONTRA	Yellow Verde	
2.5	Green	
36	Non usato	
26	Not used	

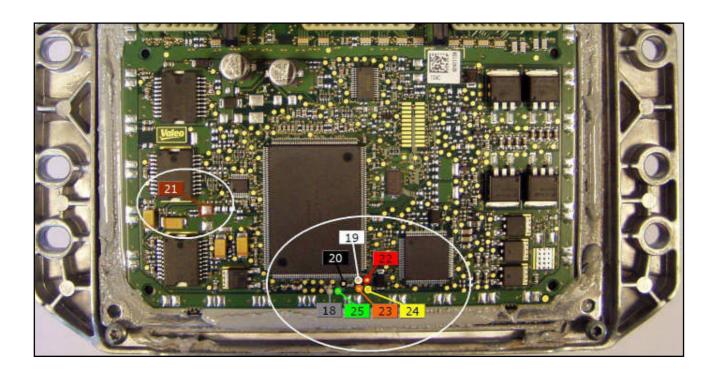

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

