plugin 1559

DIRECT CONNECTION
In order to connect to the ECU use the cable F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHYTE	CAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
	MARRONE GREY	RESET
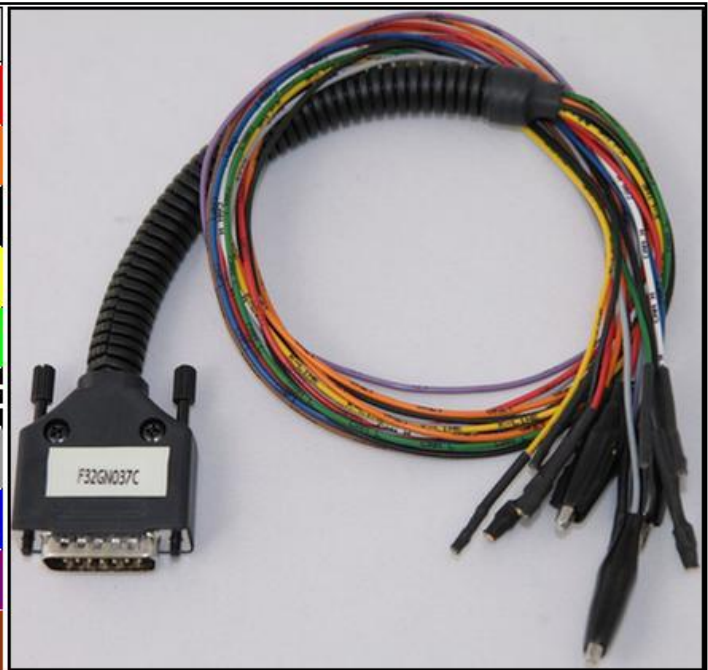
WARNING:
Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.
The ECU must be powered through the Trasdata using the F32GN037C/D cable.

ECU CONNECTOR

PIN 05, 47 = +12V

PIN 54 = CAN H

PIN 41 = CAN L

PIN 34 = VKEY

PIN 01 = GND