BOSCH EDC17CP09 XROM TC1796 BMW

plugin 156

On this ECU it is possible ONLY the DIRECT CONNECTION




BOSCH EDC17CP09 XROM TC1796 BMW

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	THURSDAY AND A DECIMAL OF A DEC
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F320x037C
BLU BLUE	POL5 CNF1	Personal II
VIOLA/GRIGI PURPLE/GREY	PROG. VOLTAGE	- WHATELS
MARRONE BROWN	RESET	

ECU CONNECTOR

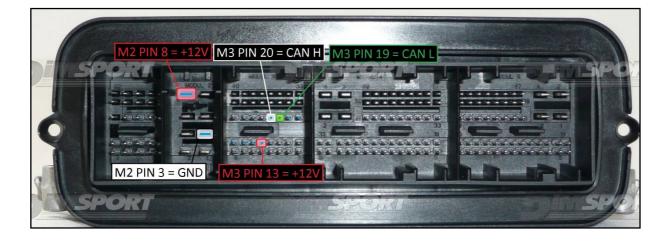

BOSCH EDC17CP09 XROM TC1796 BMW

BOOT/POL4 CONNECTION Connect the GREY wire of the cable F32GN037C as described here below :

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
GRIGIO GREY	POL4 BOOT	

