

plugin **206 – 363 - 588**

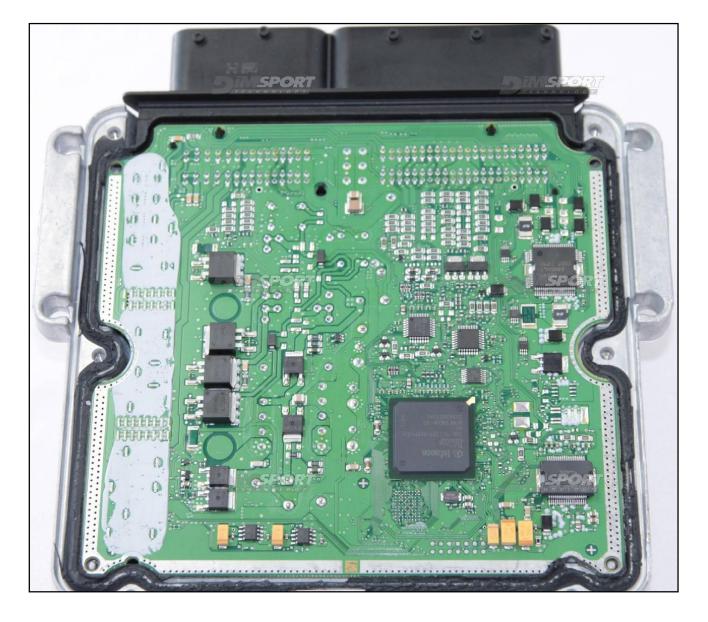

ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. DO NOT use this connection for the DIMA KIT.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F320/037C
BLU BLUE	POL5 CNF1	Breese all A
	IO TENSIONE PROG. Y PROG. VOLTAGE	CHARMS .
MARRONE BROWN	RESET	

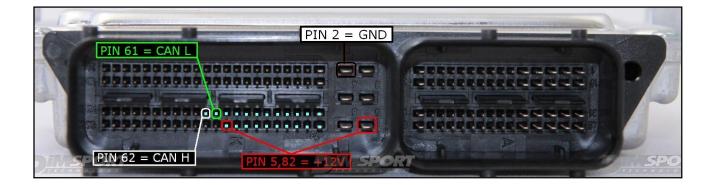

BOOT CONNECTION

Connect the GREY wire of the F32GN037C cable as shown here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

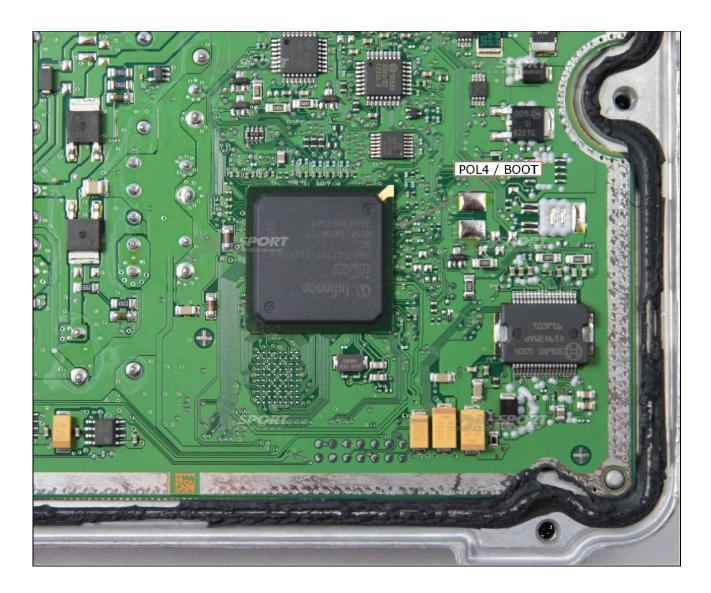

DIMA CONNECTION

Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.

