

BOSCH EDC17U05 XROM TC1796 VAG

PLUGIN 207





## BOSCH EDC17U05 XROM TC1796 VAG

### ECU CONNECTOR


In order to connect to the ECU use the CABLE F32GN037C.  
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

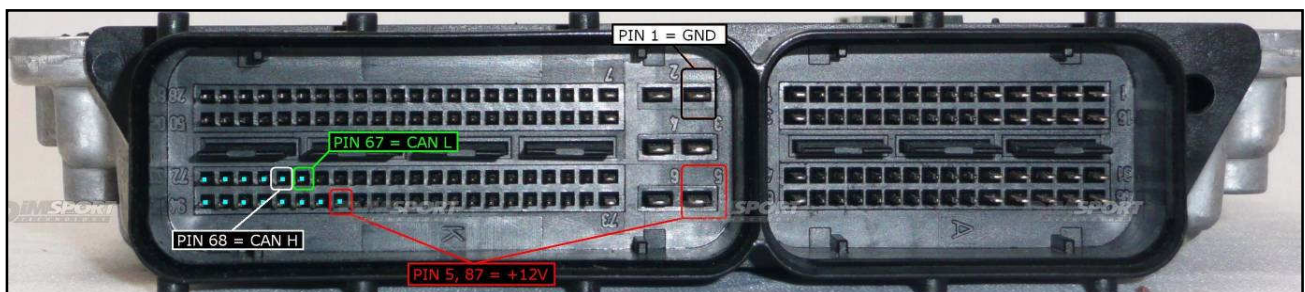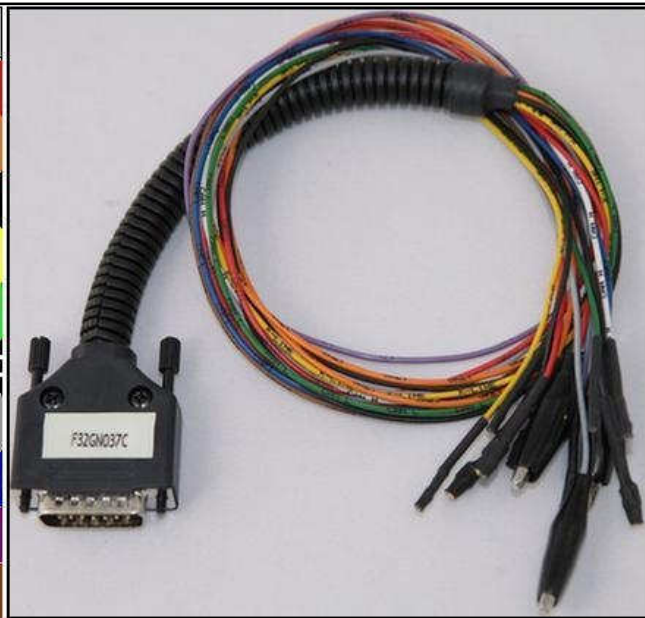

# BOSCH EDC17U05 XROM TC1796 VAG

## DIRECT CONNECTION

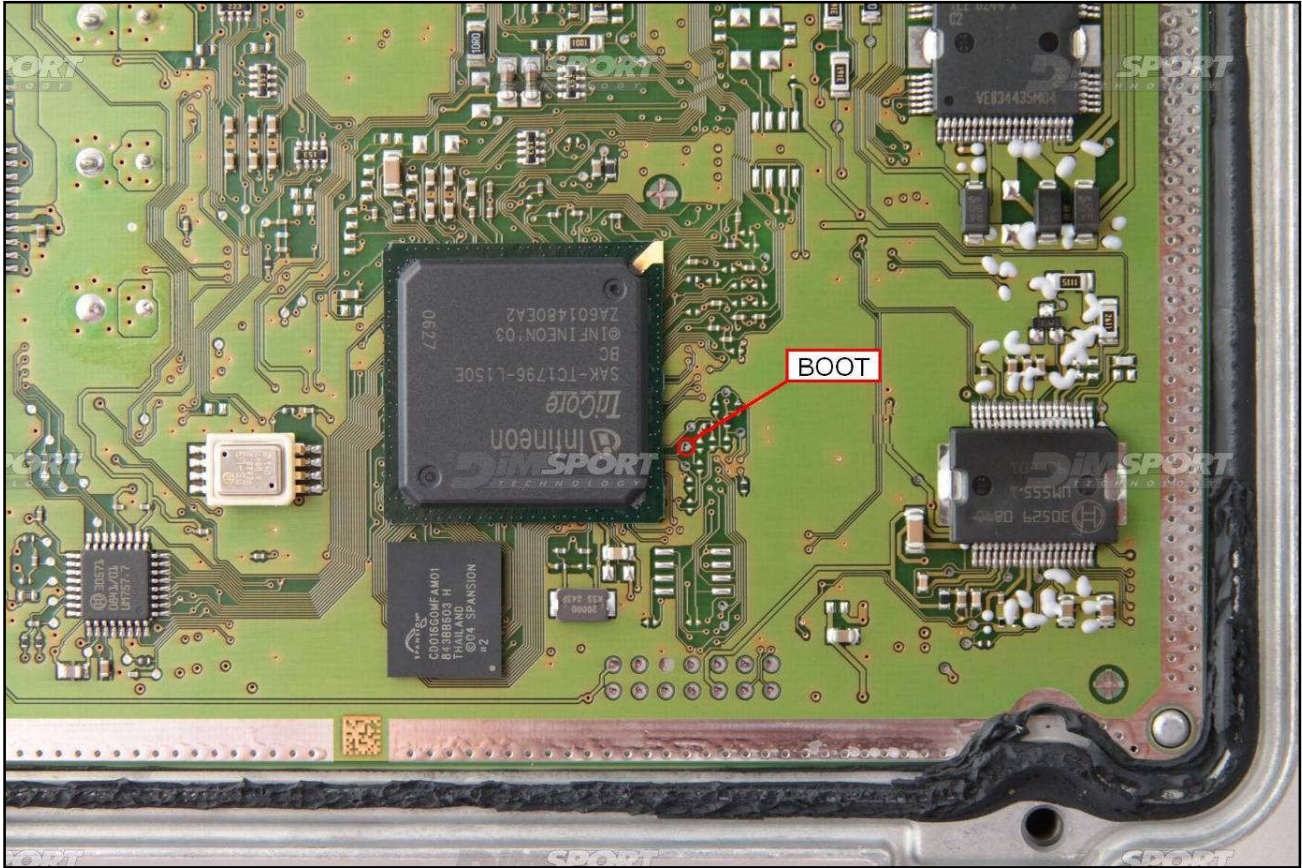

## BOSCH EDC17U05 XROM TC1796 VAG

### DIMA CONNECTION

Connect the boot pin to the pad n.10 of the soldering lay-by pins.

