

BOSCH ME 17.5.20 IROM TC1767 VAG

plugin 472



BOSCH ME 17.5.20 IROM TC1767 VAG



BOSCH ME 17.5.20 IROM TC1767 VAG





## BOSCH ME 17.5.20 IROM TC1767 VAG

### ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.  
 Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

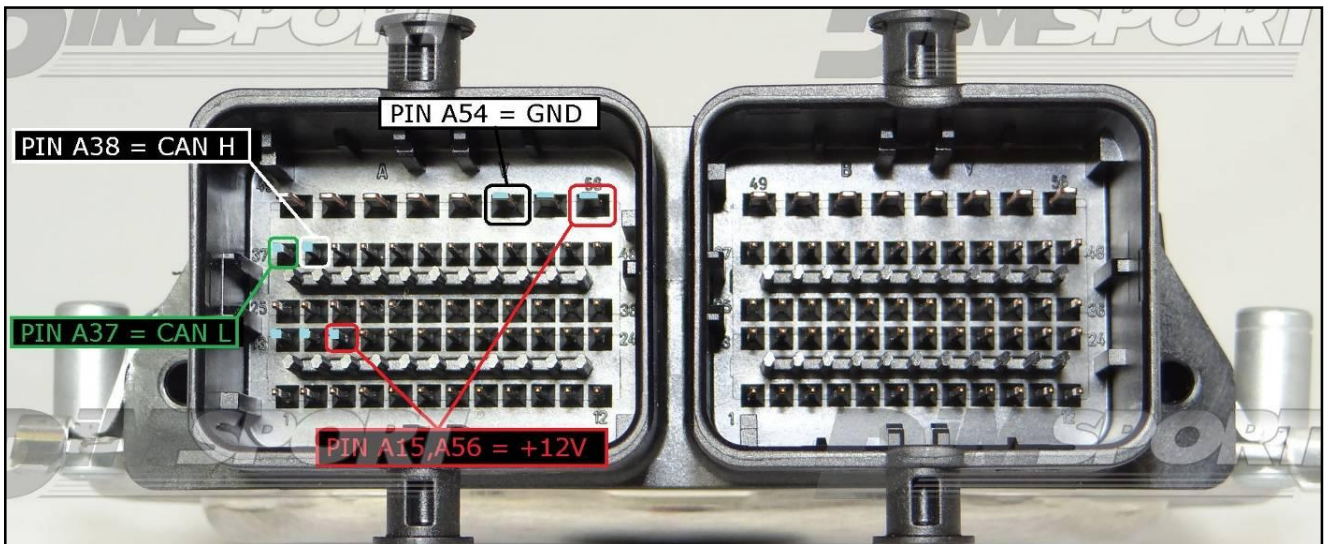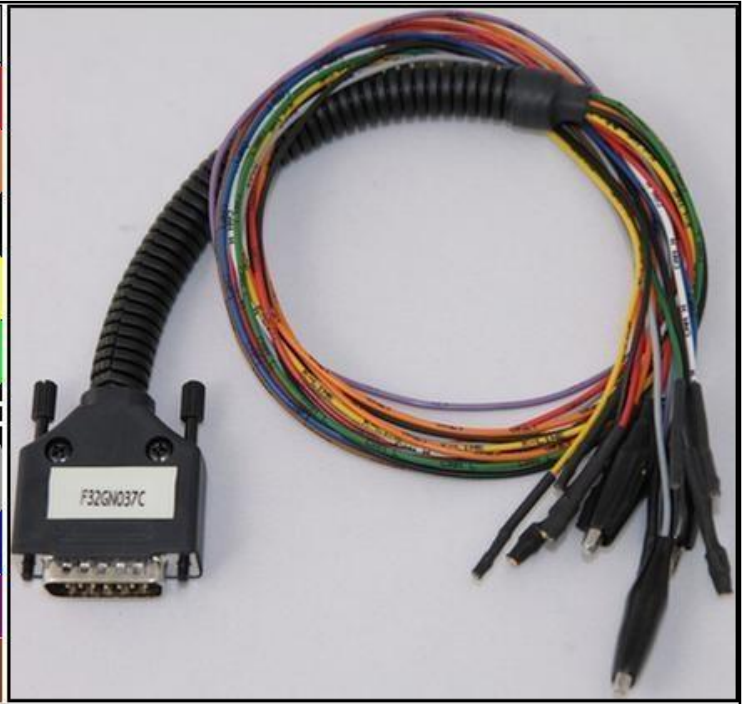

## BOSCH ME 17.5.20 IROM TC1767 VAG

### BOOT/CNF1 CONNECTION

Connect the GREY and BLUE wires of the cable F32GN037C as described here below, The BOOT wire must be connected on both sides of the board.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1



BOSCH ME 17.5.20 IROM TC1767 VAG

