

# plugin **891**




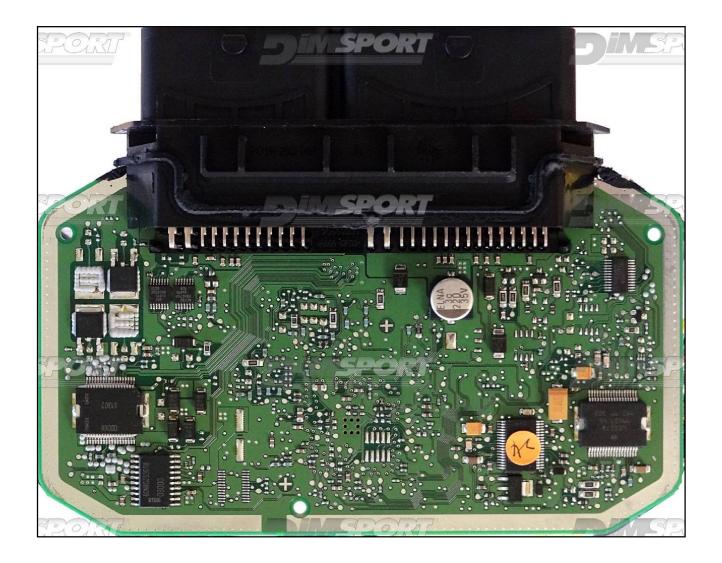

#### ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

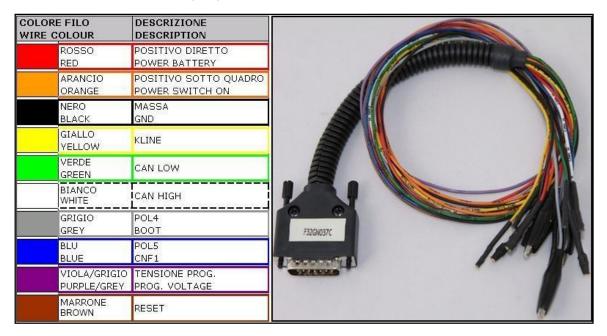

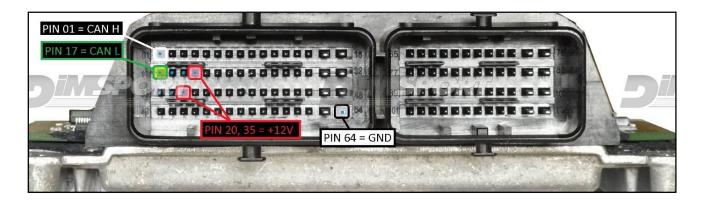

### **BOOT/CNF1 CONNECTION**

Connect the GREY and BLUE wires of the cable F32GN037C as described here below

| COLORE FILO<br>WIRE COLOUR |                | DESCRIZIONE<br>DESCRIPTION |  |
|----------------------------|----------------|----------------------------|--|
|                            | GRIGIO<br>GREY | POL4<br>BOOT               |  |
|                            | BLU<br>BLUE    | POL5<br>CNF1               |  |

