
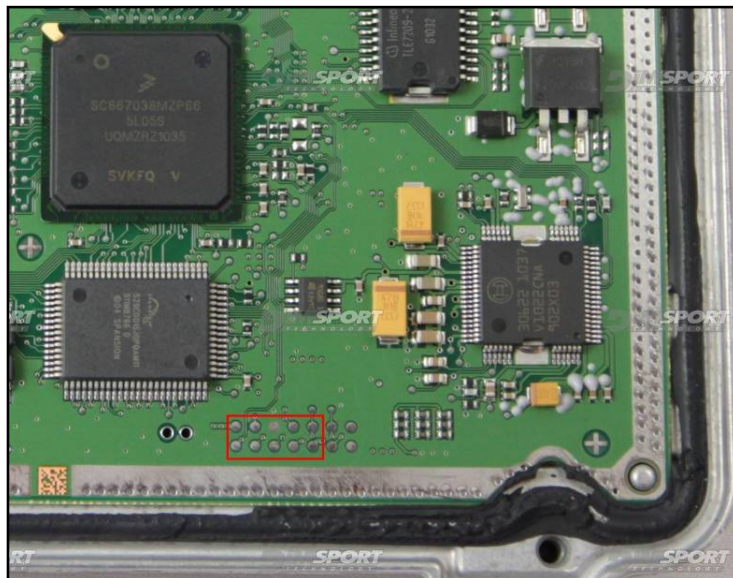


BOSCH ME9.6 OPEL

plugin 225,309

The lay-by pins are placed in the lower part of the ECU.

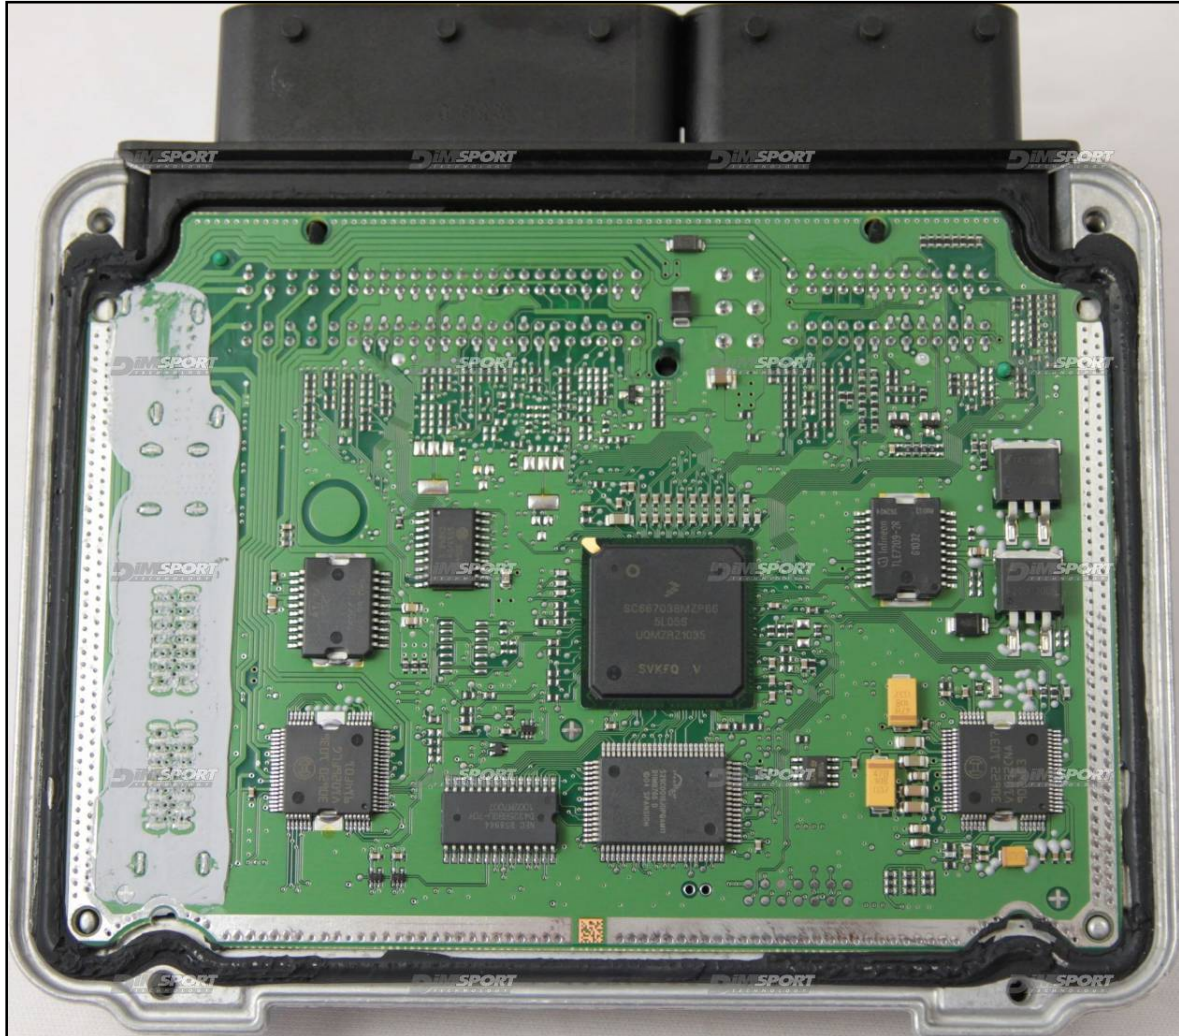



BOSCH ME9.6 OPEL

DIRECT CONNECTION

Among the 14 pads you will use only the first 10's from the left, solder the guiding pin strips in which you will place the strips otherwise you can solder directly the strips.

Place the ECU with the connector upwards and connect the flat cable F34NTF01 on the strips having care to place the violet wire on the left side.


The following pictures are merely indicative.

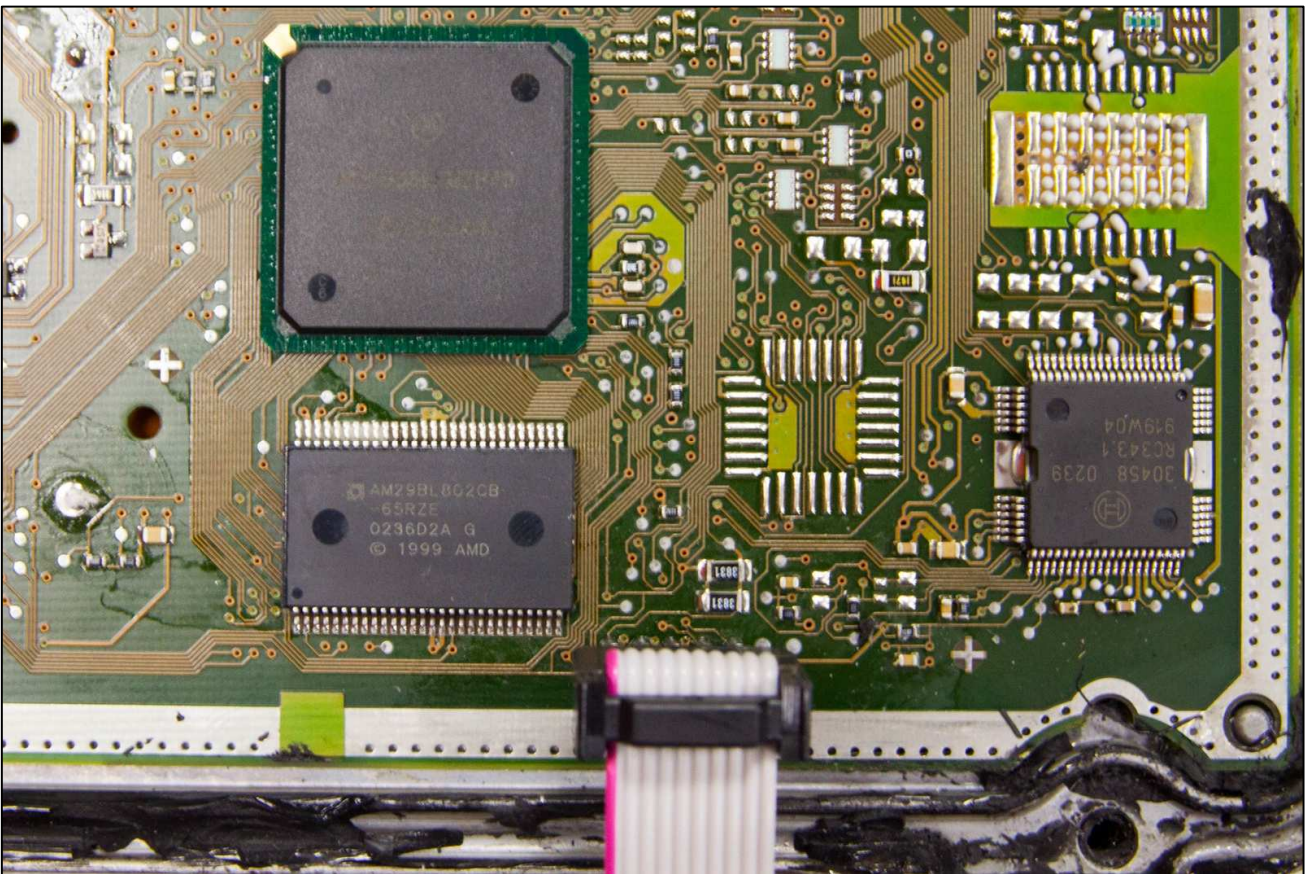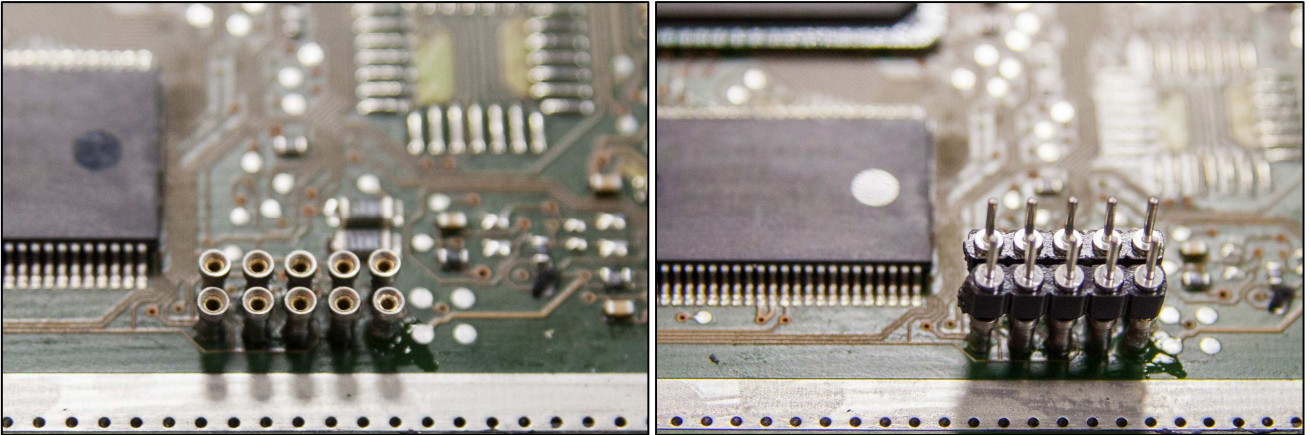

BOSCH ME9.6 OPEL

METAL POSITIONING FRAME

Use the metal positioning frame adapter F34DM002.

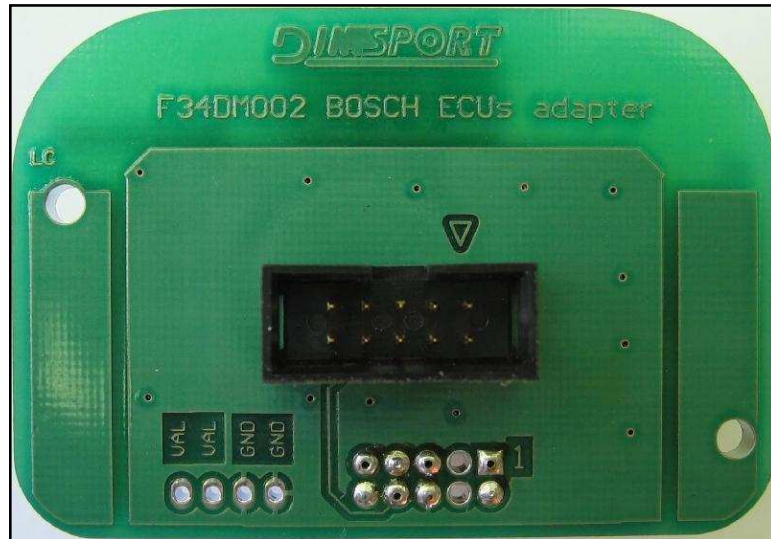

The following picture of the DIMA connection is merely indicative.

