

BOSCH MED17.5.1 XROM TC1796 VAG

plugin 147

On this ECU it is possible ONLY the DIRECT CONNECTION. It is NOT possible the DIMA CONNECTION because there are NOT the three essential power lay-by-pins.





BOSCH MED17.5.1 XROM TC1796 VAG

ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.
 Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

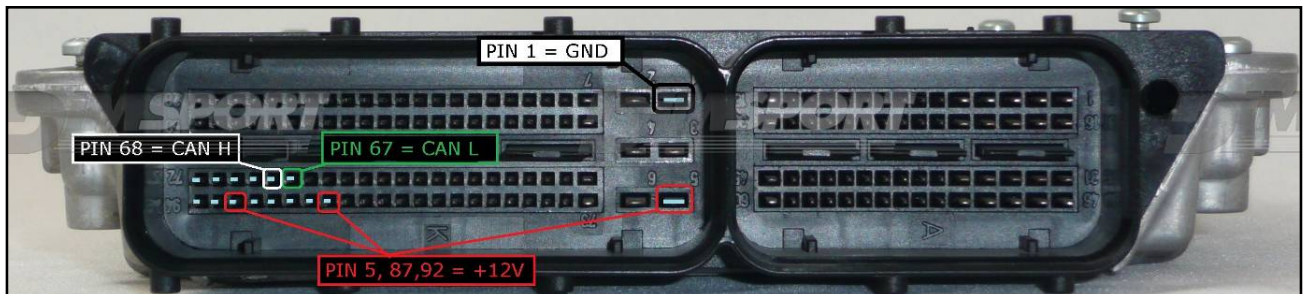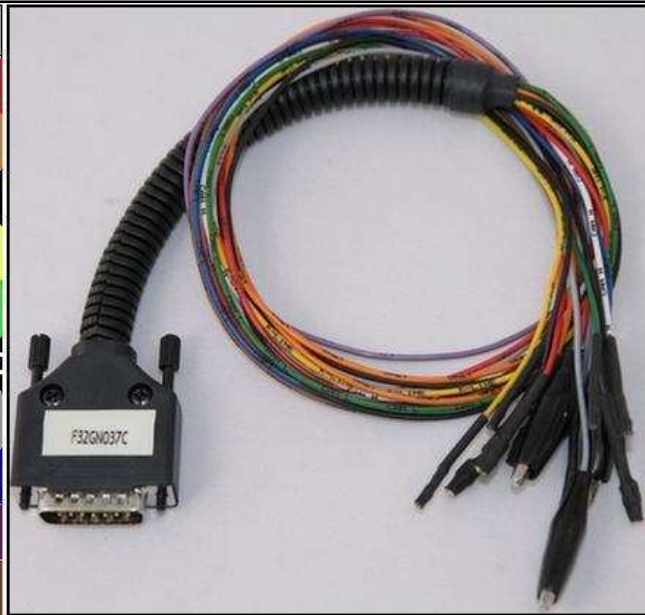

To the power feeding pins 5, 87, 92 you can connect both wires red and orange, they both have 12 Volt signal.

BOSCH MED17.5.1 XROM TC1796 VAG

BOOT/POL4 CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below :

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO	POL4
GREY	BOOT

