# plugin 1543






#### **ECU CONNECTOR**

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	FERGINISTC
BLU BLUE	POL5 CNF1	The second secon
VIOLA/GRIGI PURPLE/GRE	O TENSIONE PROG. / PROG. VOLTAGE	CMASSES .
MARRONE BROWN	RESET	

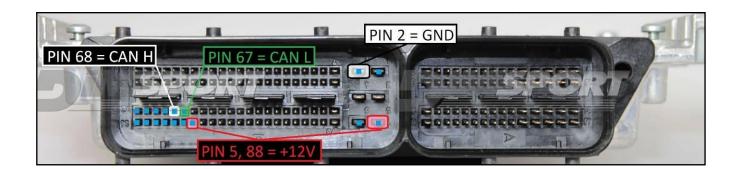

#### **DIRECT BOOT CONNECTION**

Connect the GREY&BLUE wires of the cable F32GN037C/D as described here below:

