


BOSCH MED17.8.31 IROM TC1797 JAGUAR

plugin **685**


On this ECU it is possible ONLY the DIRECT CONNECTION



BOSCH MED17.8.31 IROM TC1797 JAGUAR

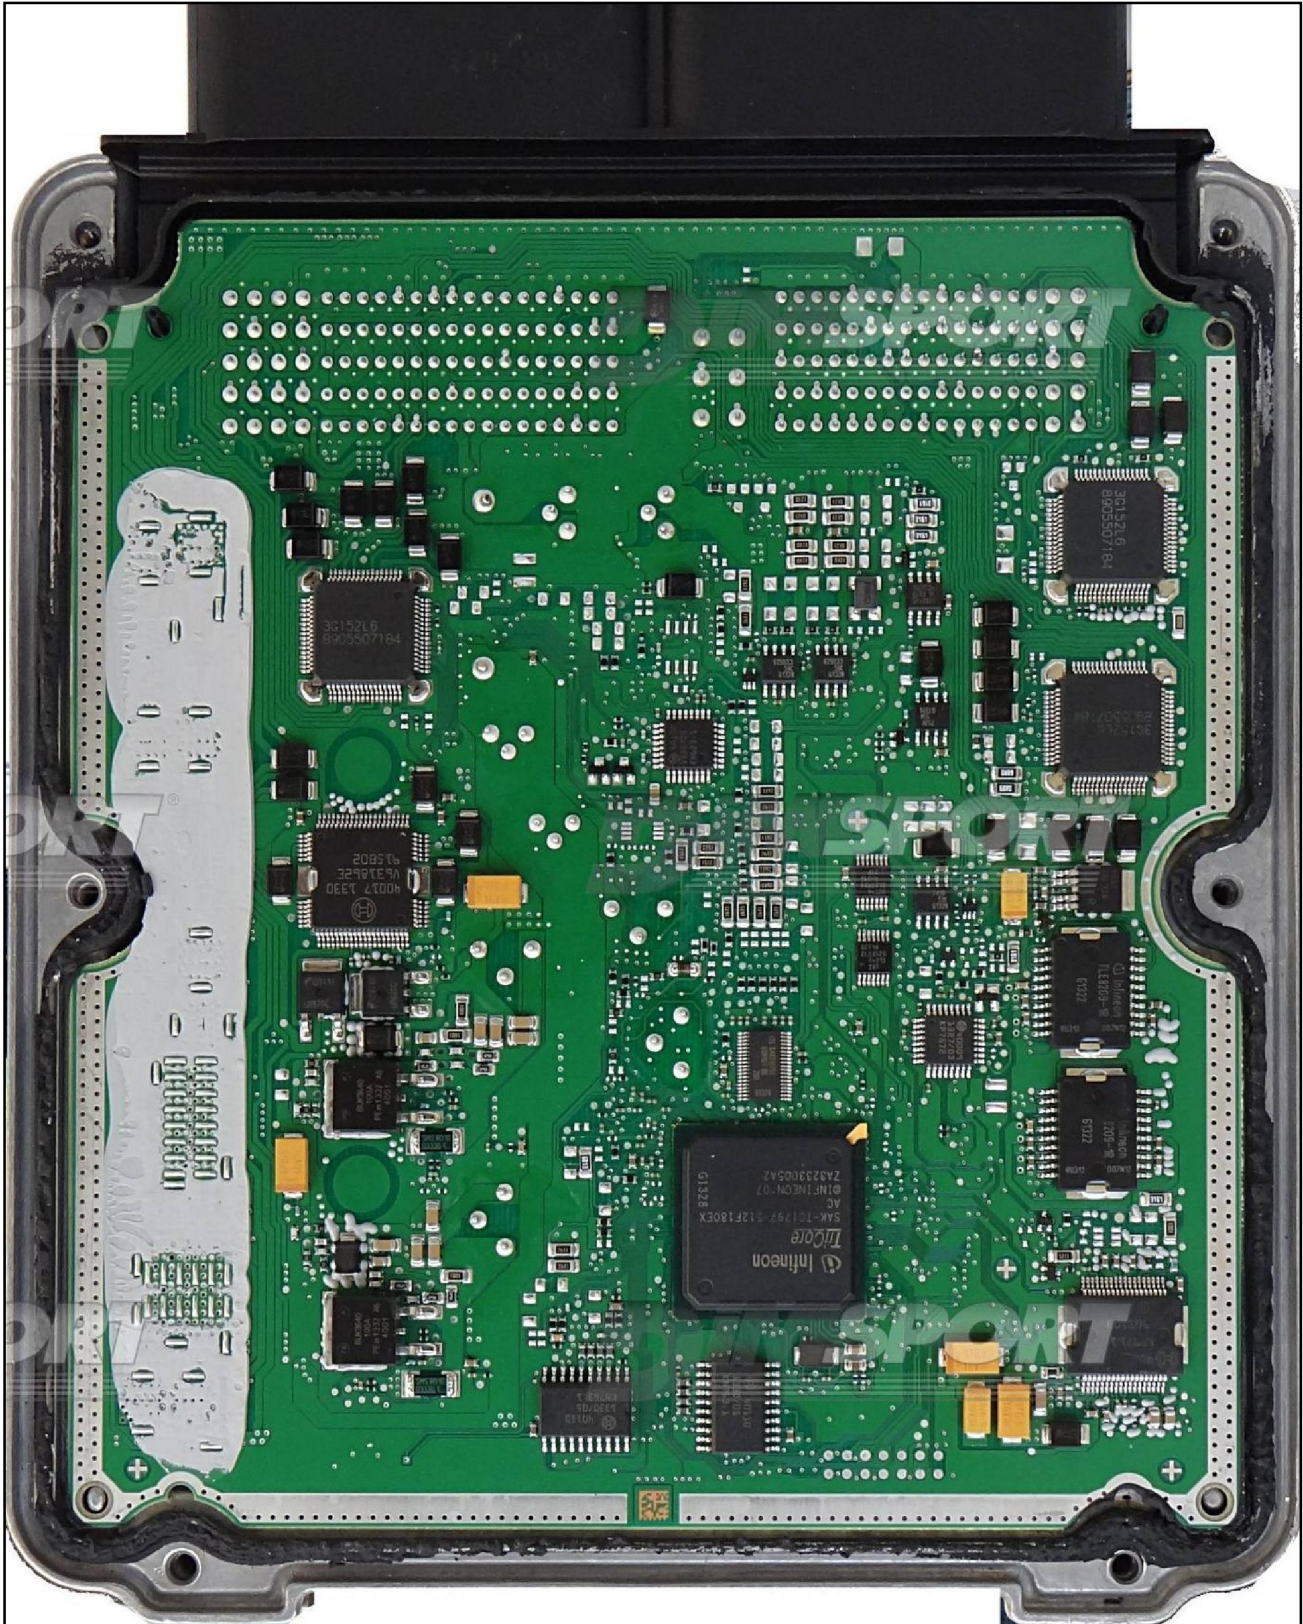

BOSCH MED17.8.31 IROM TC1797 JAGUAR


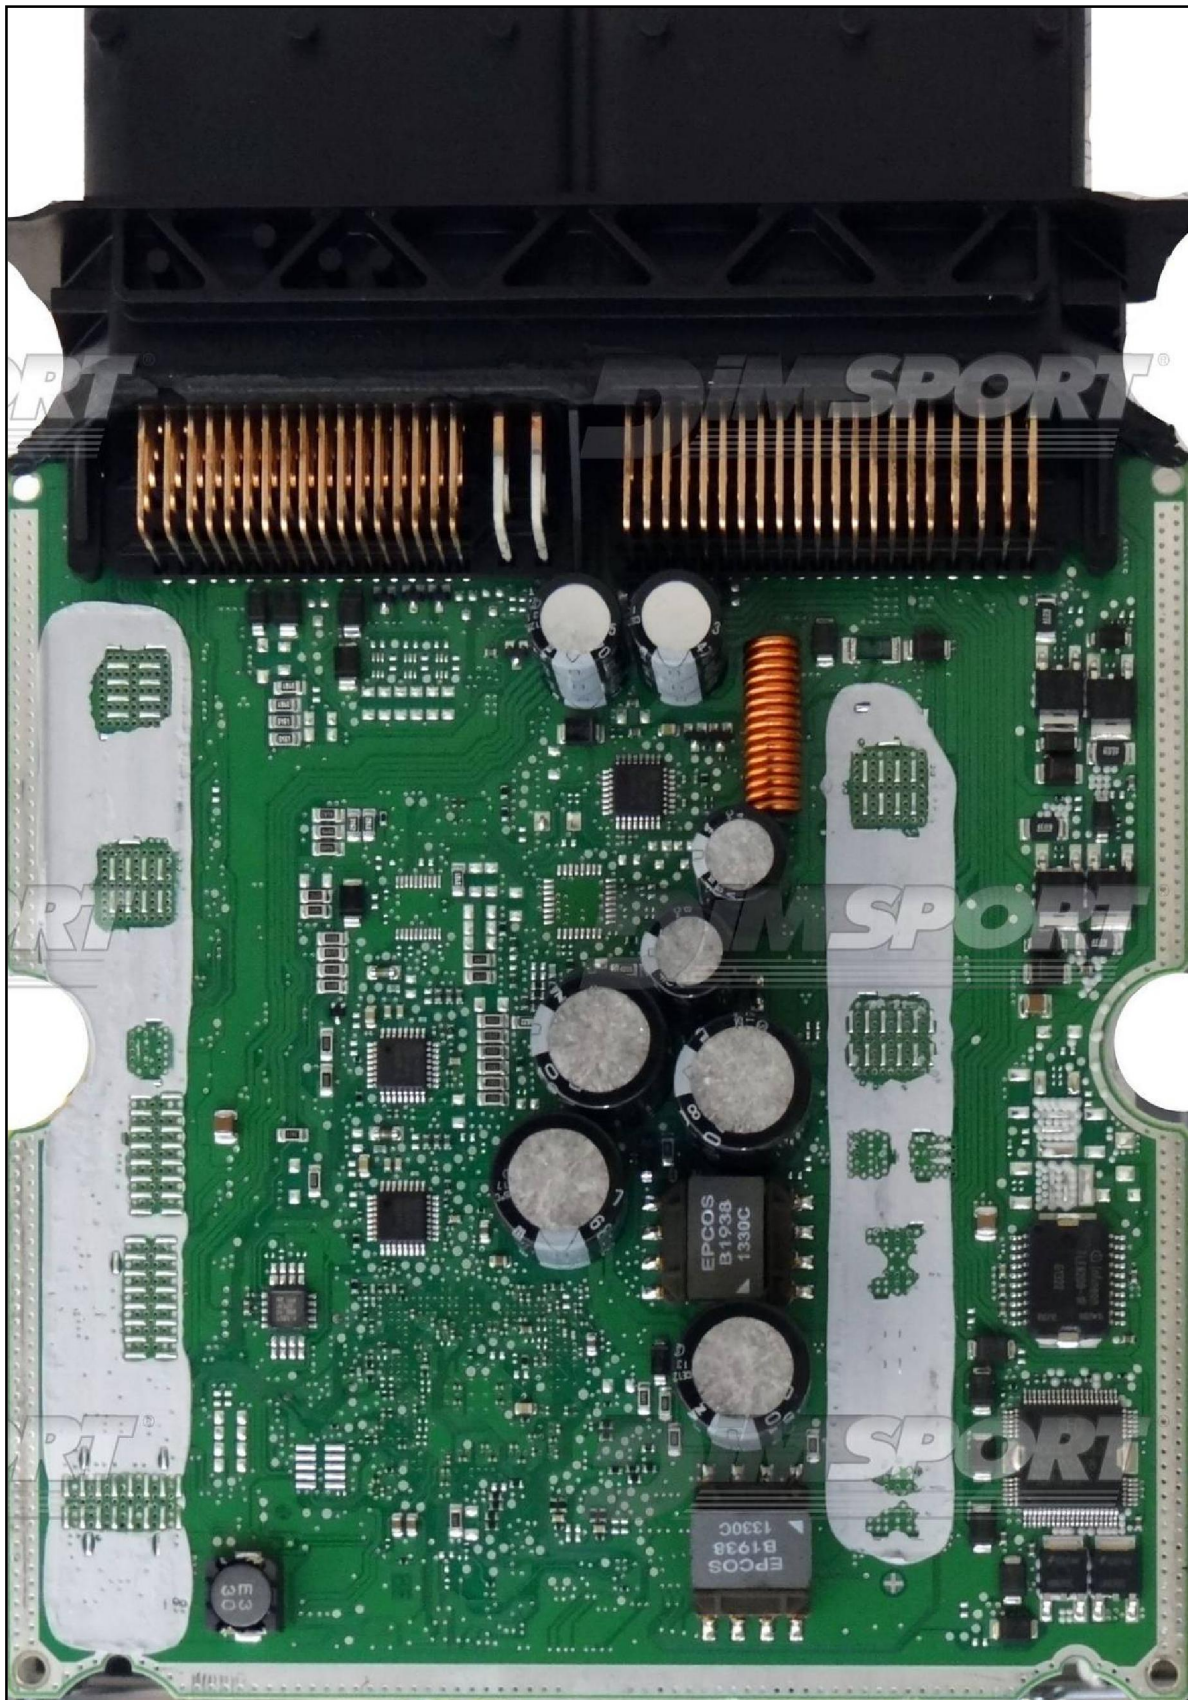


BOSCH MED17.8.31 IROM TC1797 JAGUAR

ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on Trasdata is ON.

| COLORE FILO WIRE COLOUR | DESCRIZIONE DESCRIPTION |
|-----------------------------|--|
| ROSSO RED | POSITIVO DIRETTO POWER BATTERY |
| ARANCIO ORANGE | POSITIVO SOTTO QUADRO POWER SWITCH ON |
| NERO BLACK | MASSA GND |
| GIALLO YELLOW | KLINE |
| VERDE GREEN | CAN LOW |
| BIANCO WHITE | CAN HIGH |
| GRIGIO GREY | POL4 BOOT |
| BLU BLUE | POL5 CNF1 |
| VIOLA/GRIGIO PURPLE/GREY | TENSIONE PROG. PROG. VOLTAGE |
| MARRONE BROWN | RESET |

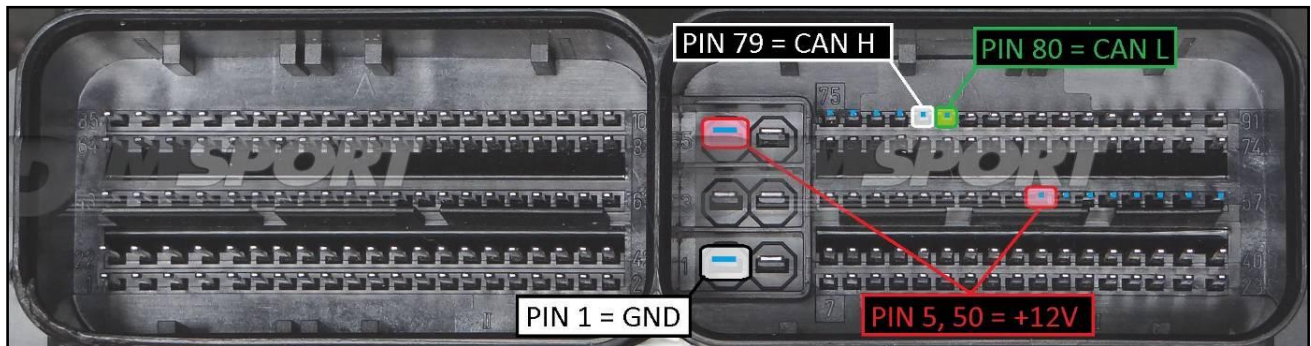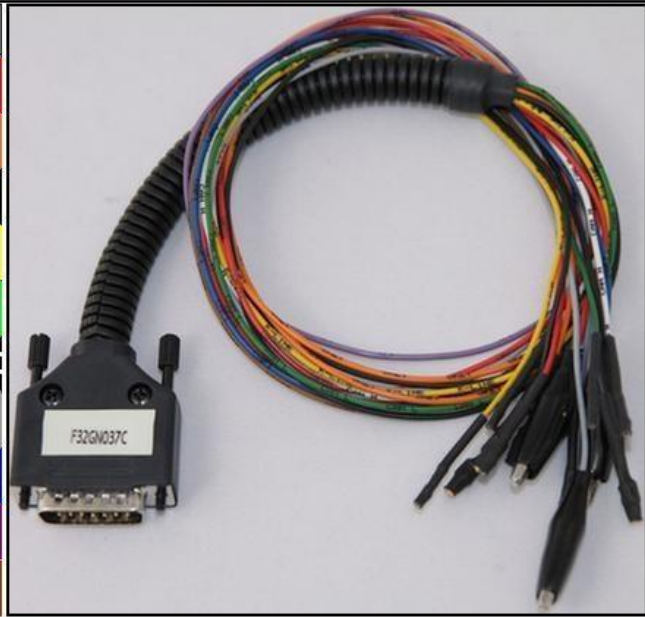

BOSCH MED17.8.31 IROM TC1797 JAGUAR

BOOT/CNF1 DIRECT CONNECTION

Connect the GREY and BLUE wires of the cable F32GN037C as described here below.

| COLORE FILO WIRE COLOUR | DESCRIZIONE DESCRIPTION |
|----------------------------|----------------------------|
| GRIGIO GREY | POL4 BOOT |
| BLU BLUE | POL5 CNF1 |

