

BOSCH MED1798 IROM TC1767 KIA

plugin 496




BOSCH MED1798 IROM TC1767 KIA


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.
 Make sure that the POWER led (red) on Trasdata is ON.
 ONLY the DIRECT CONNECTION is possible.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHYTE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE GREY	RESET

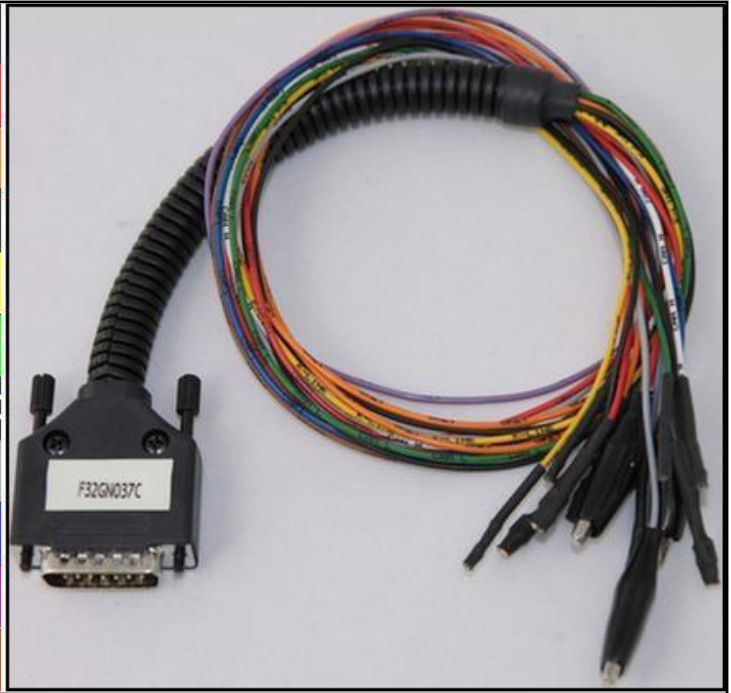

ECU CONNECTOR

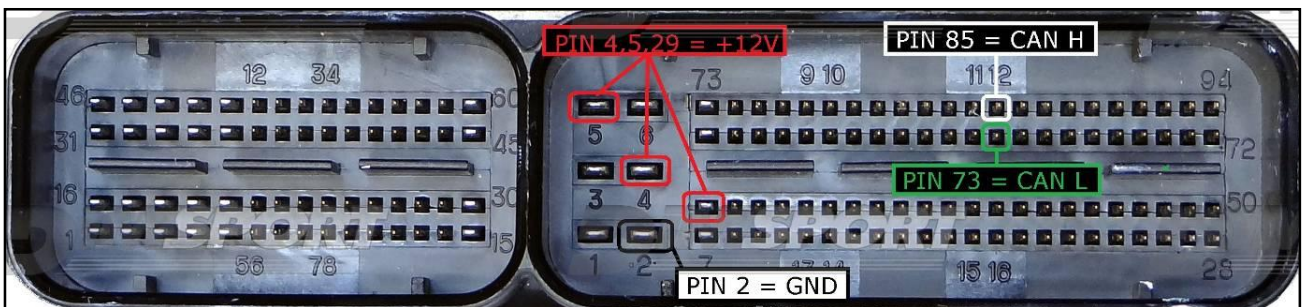

To connect to the pin 4,5,29 it is possible to use the red and orange wires, they both are 12V.

BOSCH MED1798 IROM TC1767 KIA

BOOT/CNF1 CONNECTION

Connect the BLU and GREY wires of the cable F32GN037C as described:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

