



BOSCH MEVD1784 IROM TC1797 BMW

plugin 1065 BOSCH MEVD1784 IROM TC1797 GPT
BMW

MEVD1784

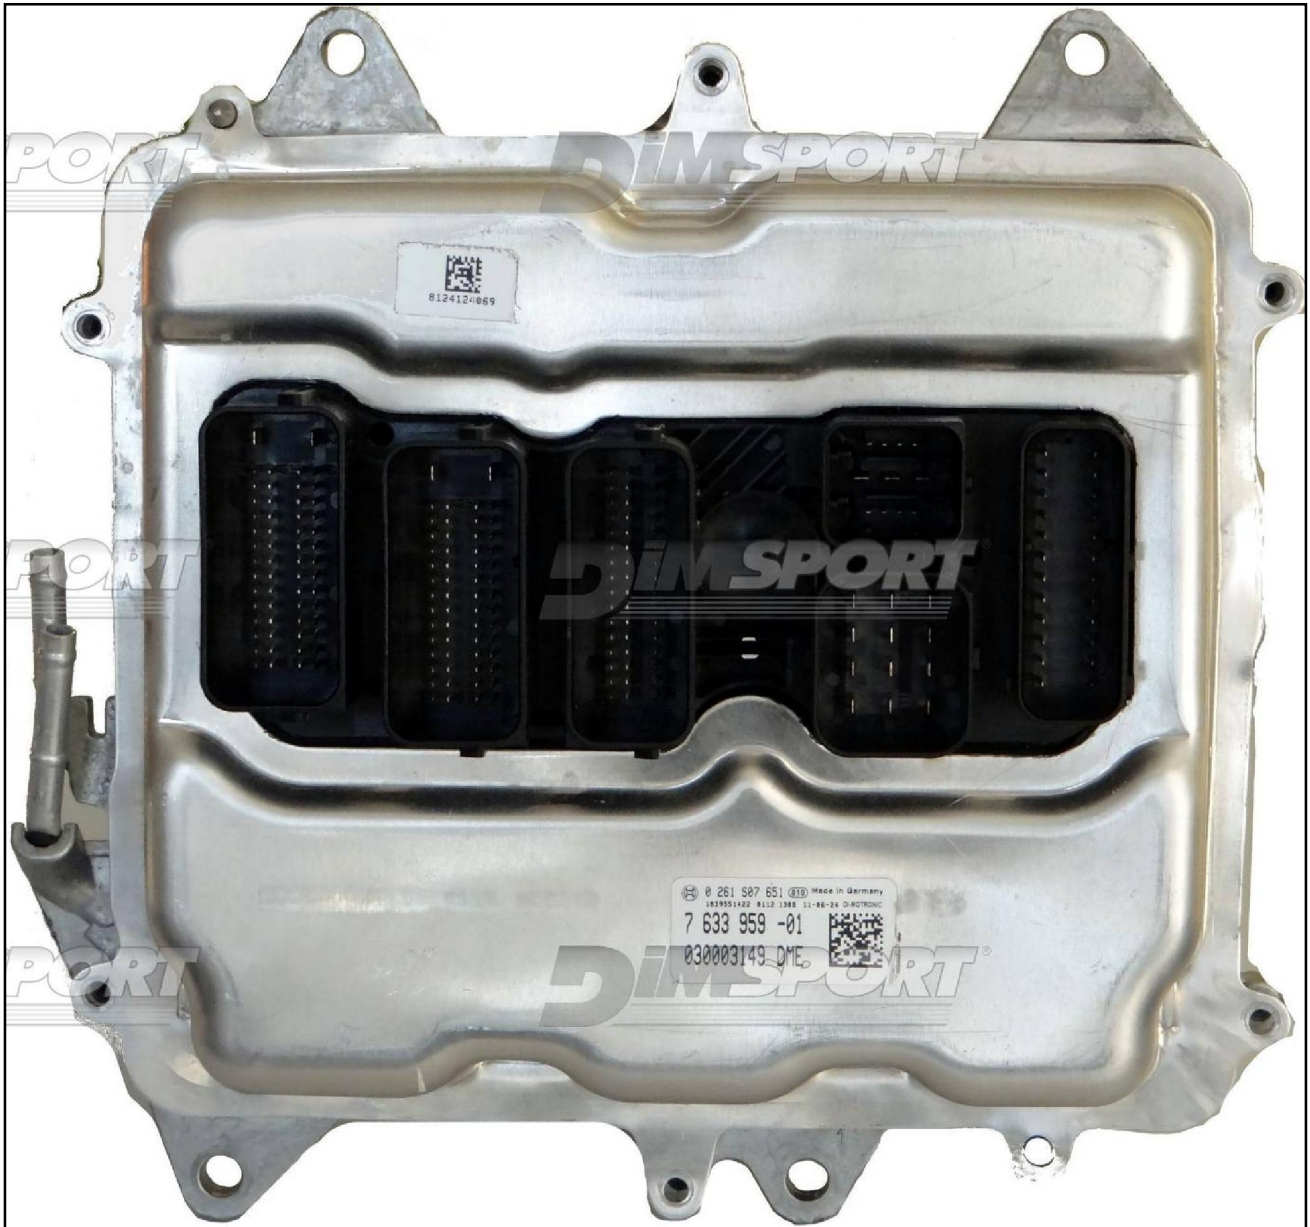

BOSCH MEVD1784 IROM TC1797 BMW


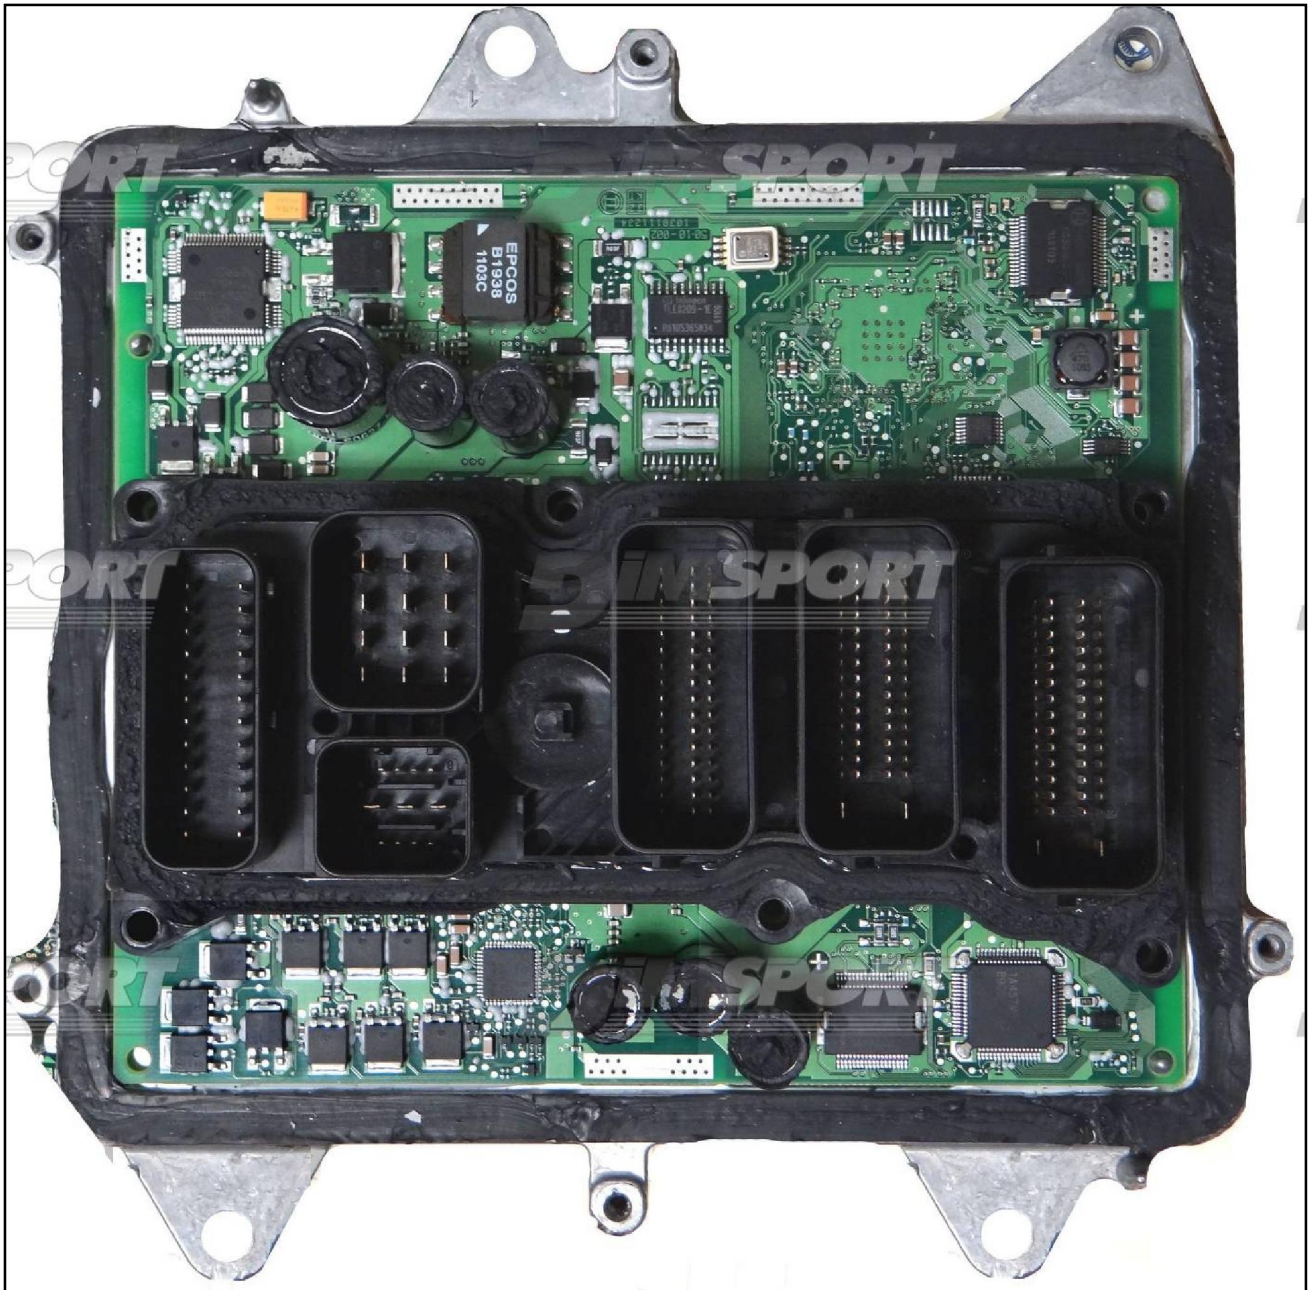


BOSCH MEVD1784 IROM TC1797 BMW

ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.
Make sure that the POWER led (red) on Trasdata is ON.

| COLORE FILO WIRE COLOUR | DESCRIZIONE DESCRIPTION |
|-----------------------------|--|
| ROSSO RED | POSITIVO DIRETTO POWER BATTERY |
| ARANCIO ORANGE | POSITIVO SOTTO QUADRO POWER SWITCH ON |
| NERO BLACK | MASSA GND |
| GIALLO YELLOW | KLINE |
| VERDE GREEN | CAN LOW |
| BIANCO WHITE | CAN HIGH |
| GRIGIO GREY | POL4 BOOT |
| BLU BLUE | POL5 CNF1 |
| VIOLA/GRIGIO PURPLE/GREY | TENSIONE PROG. PROG. VOLTAGE |
| MARRONE BROWN | RESET |

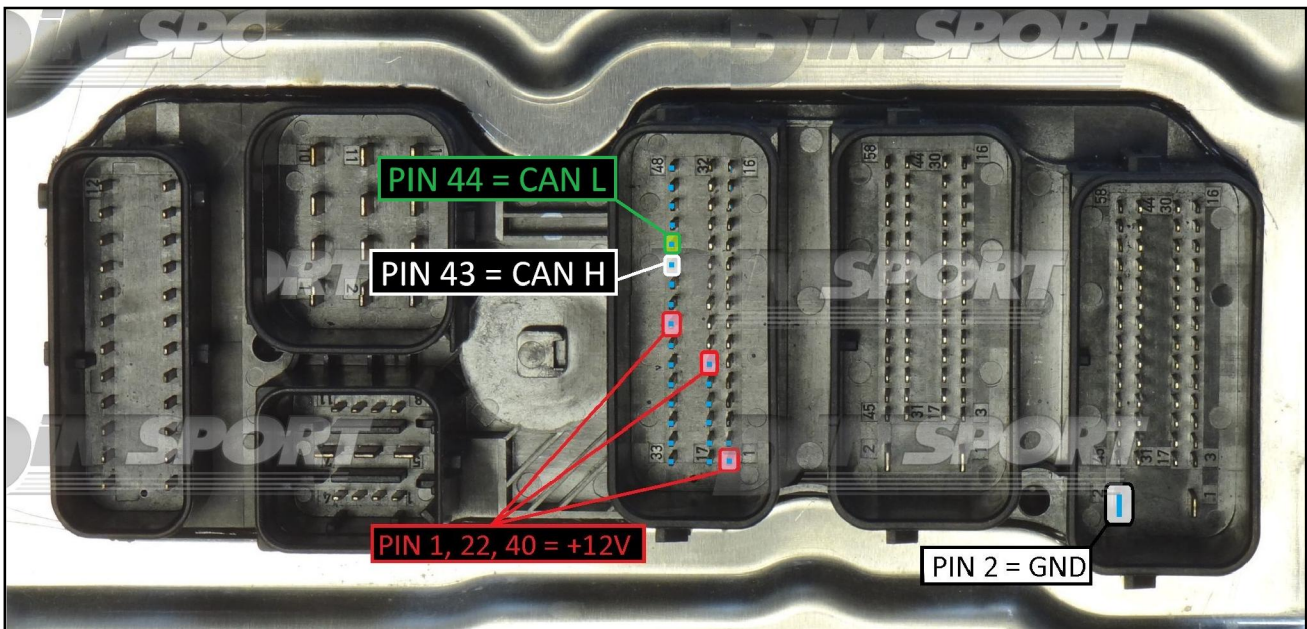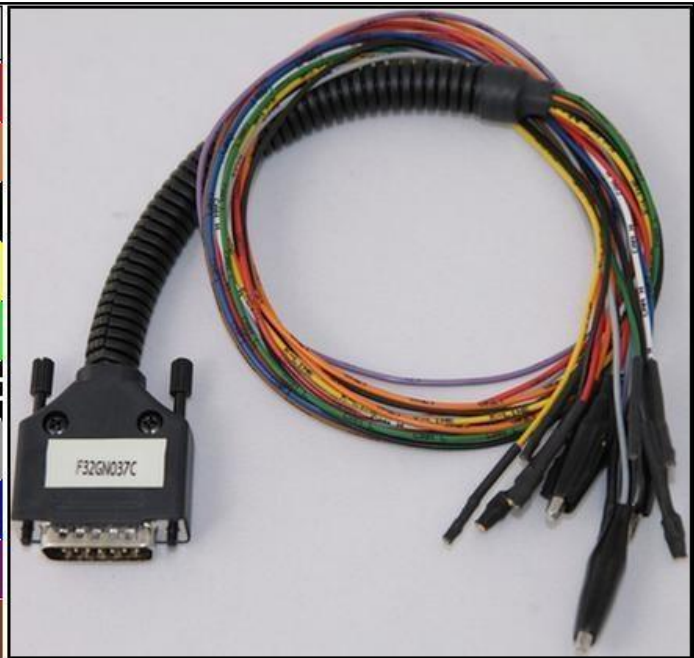

To the power feeding pins 1,22,40 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.

BOSCH MEVD1784 IROM TC1797 BMW

DIRECT BOOT CONNECTION

Connect the GREY wires of the cable F32GN037C as described here below:

| COLORE FILO WIRE COLOUR | DESCRIZIONE DESCRIPTION |
|----------------------------|----------------------------|
| GRIGIO | POL4 |
| GREY | BOOT |

