

CONTINENTAL SDI21xx IROM TC1791 SSM PORSCHE

plugin **1036**



CONTINENTAL SDI21xx IROM TC1791 SSM PORSCHE

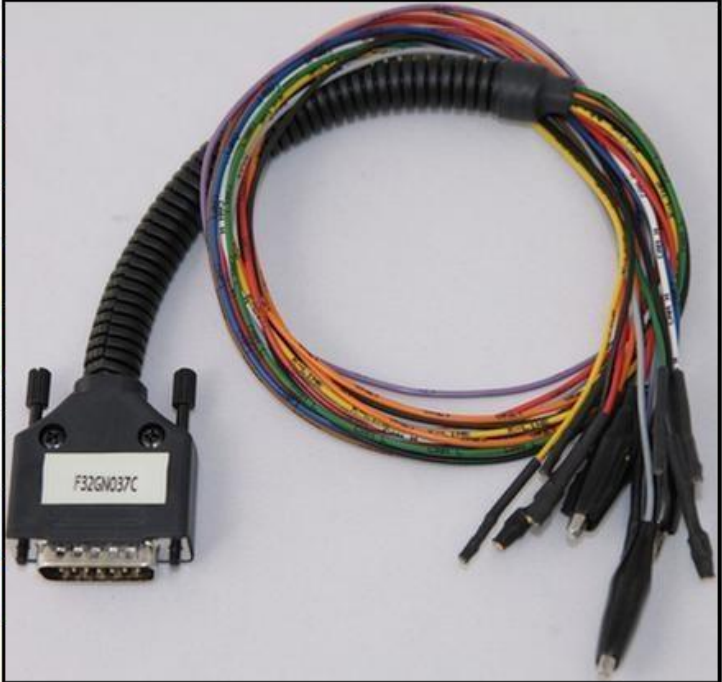
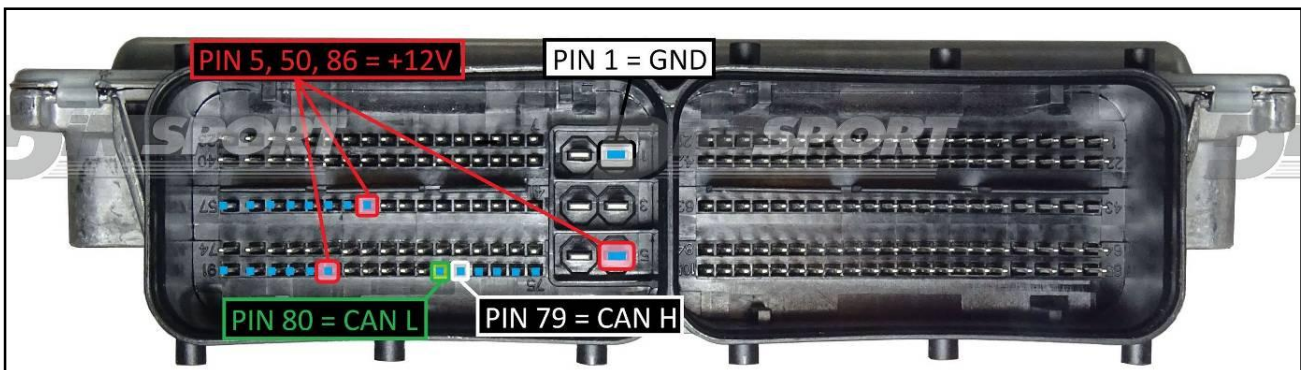


CONTINENTAL SDI21xx IROM TC1791 SSM PORSCHE

ECU CONNECTOR

For the connection use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
■ ROSSO RED	POSITIVO DIRETTO POWER BATTERY
■ ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
■ NERO BLACK	MASSA GND
■ GIALLO YELLOW	KLINE
■ VERDE GREEN	CAN LOW
■ BIANCO WHITE	CAN HIGH
■ GRIGIO GREY	POL4 BOOT
■ BLU BLUE	POL5 CNF1
■ VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
■ MARRONE BROWN	RESET

To the power feeding pins 5,50,86 (+12V) you must connect only the red wires (VECU) of the F32GN037C cable.

CONTINENTAL SDI21xx IROM TC1791 SSM PORSCHE

BOOT & CNF1 DIRECT CONNECTION

Connect the GREY and BLUE wires of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

