# plugin 808 DELPHI CRD 3.40 TC1797 IROM MEB









DELPHI CRD 3.40 TC1797 IROM MEB

#### DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

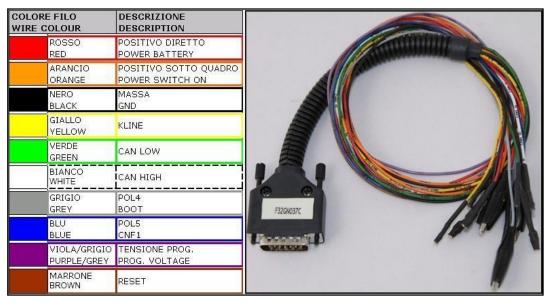

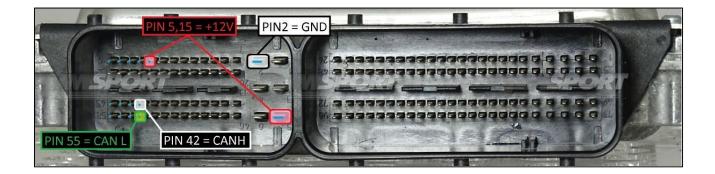

### **BOOT & CNF1 CONNECTION**

Connect the BLUE and GREY wires of the cable F32GN037C as shown here below:

10000000	ORE FILO E COLOUR	DESCRIZIONE DESCRIPTION
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1



### WARNING

If instead of the 14-pin component, used for CNF1 signal, it is present a 8 pins component, the CNF1 connection must NOT be carried out, it is necessary the BOOT connections ONLY.

