plugin 809 DELPHI CRD 3.50 TC1797 IROM MEB








DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	FERCHOSTC
BLU BLUE	POL5 CNF1	
	TENSIONE PROG. PROG. VOLTAGE	- WARNA
MARRONE BROWN	RESET	

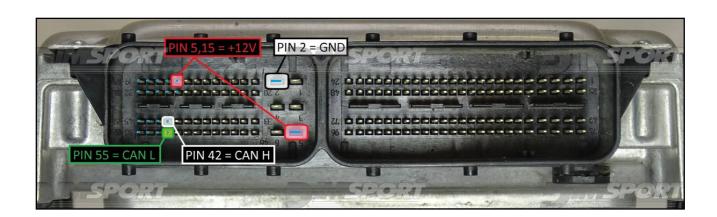

BOOT & CNF1 CONNECTION

Connect the BLUE and GREY wires of the cable F32GN037C as shown here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	



WARNING

If instead of the 14-pin component, used for CNF1 signal, it is present a 8 pins component, the CNF1 connection must NOT be carried out, it is necessary the BOOT connections ONLY.

