plugin 819









DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

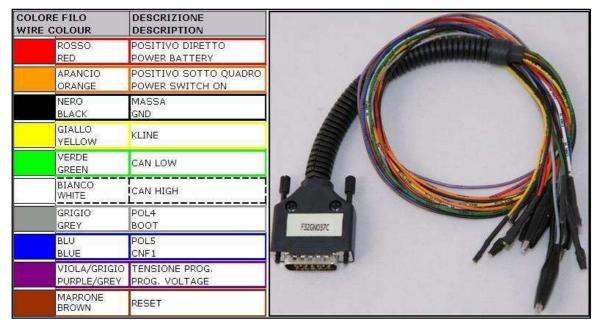


ECU CONNECTOR

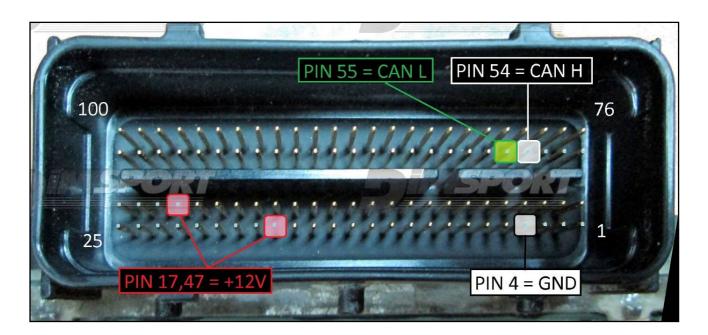

BOOT/CNF1 CONNECTION

Warning: for a correct communication it is necessary to lift (desolder and lift a little bit) the Microprocessor pin shown in the following picture. Resolder the pin before setting the ECU into the vehicle.

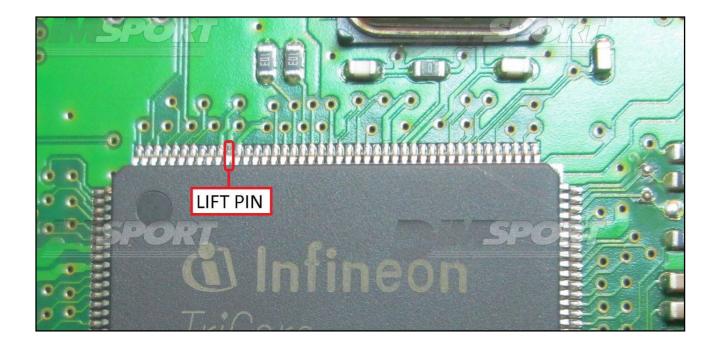

Connect the GREY and BLUE wires of the cable F32GN037C as described here below

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

