

# Plugin **1056 / 1572**

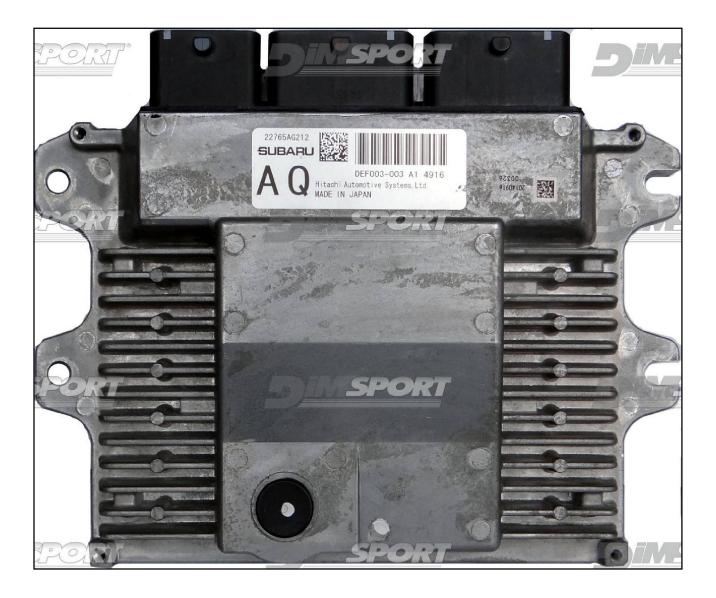

# PROCESSOR SIDE

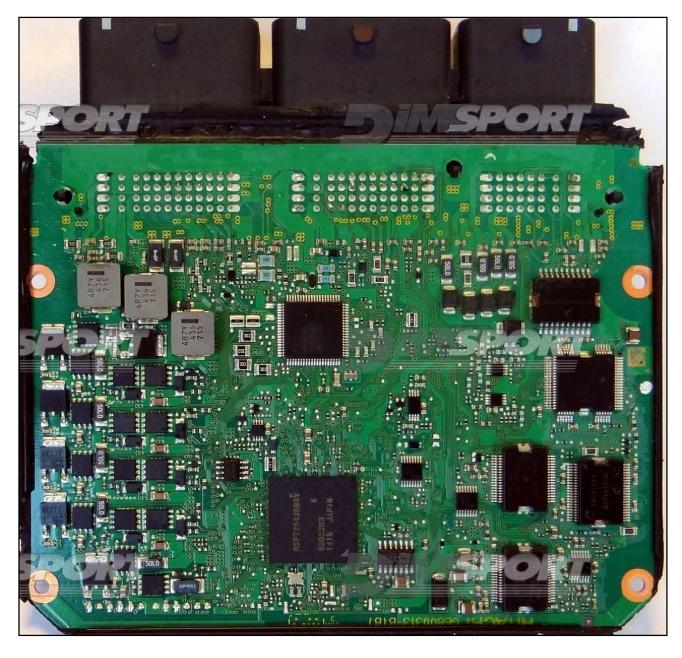


# CONDENSERS' SIDE




#### **ECU CONNECTOR**

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	ICAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
	RIGIO TENSIONE PROG. GREY PROG. VOLTAGE
MARRONE BROWN	RESET <sup>®</sup>

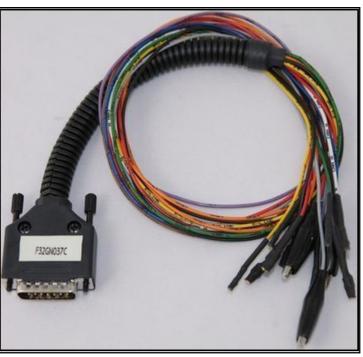

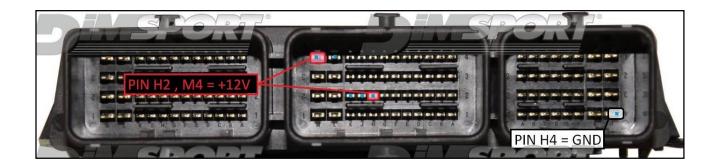

### **J-TAG LOOSE WIRES CONNECTION**

For the reading & writing procedures use the FLAT cable F34NTF53

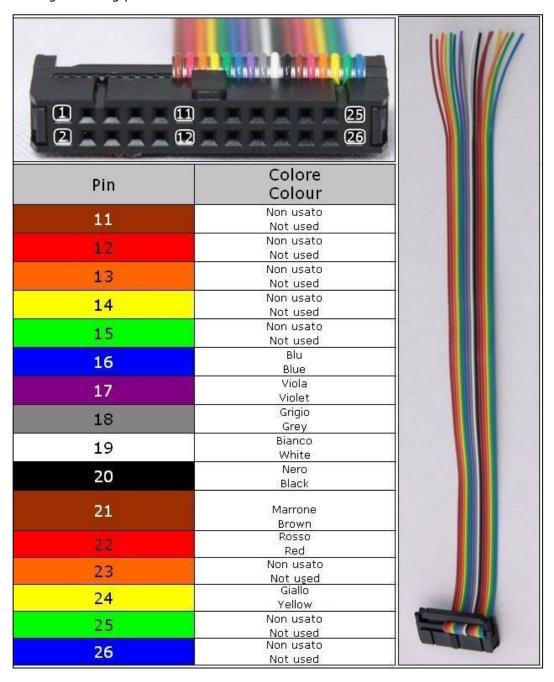

Connect the wires on the pads avoiding any short circuits.

### WARNING

In order to read&write properly the ECU it is necessary to perform a LINK1, LINK2, LINK3, remove them before placing back the ECU into the vehicle.

### CONDENSERS' SIDE

