


KEFICO CPEGP2.10.1 IROM TC1728 TPROT KIA HYUNDAI

plugin 1693




KEFICO CPEGP2.10.1 IROM TC1728 TPROT KIA HYUNDAI

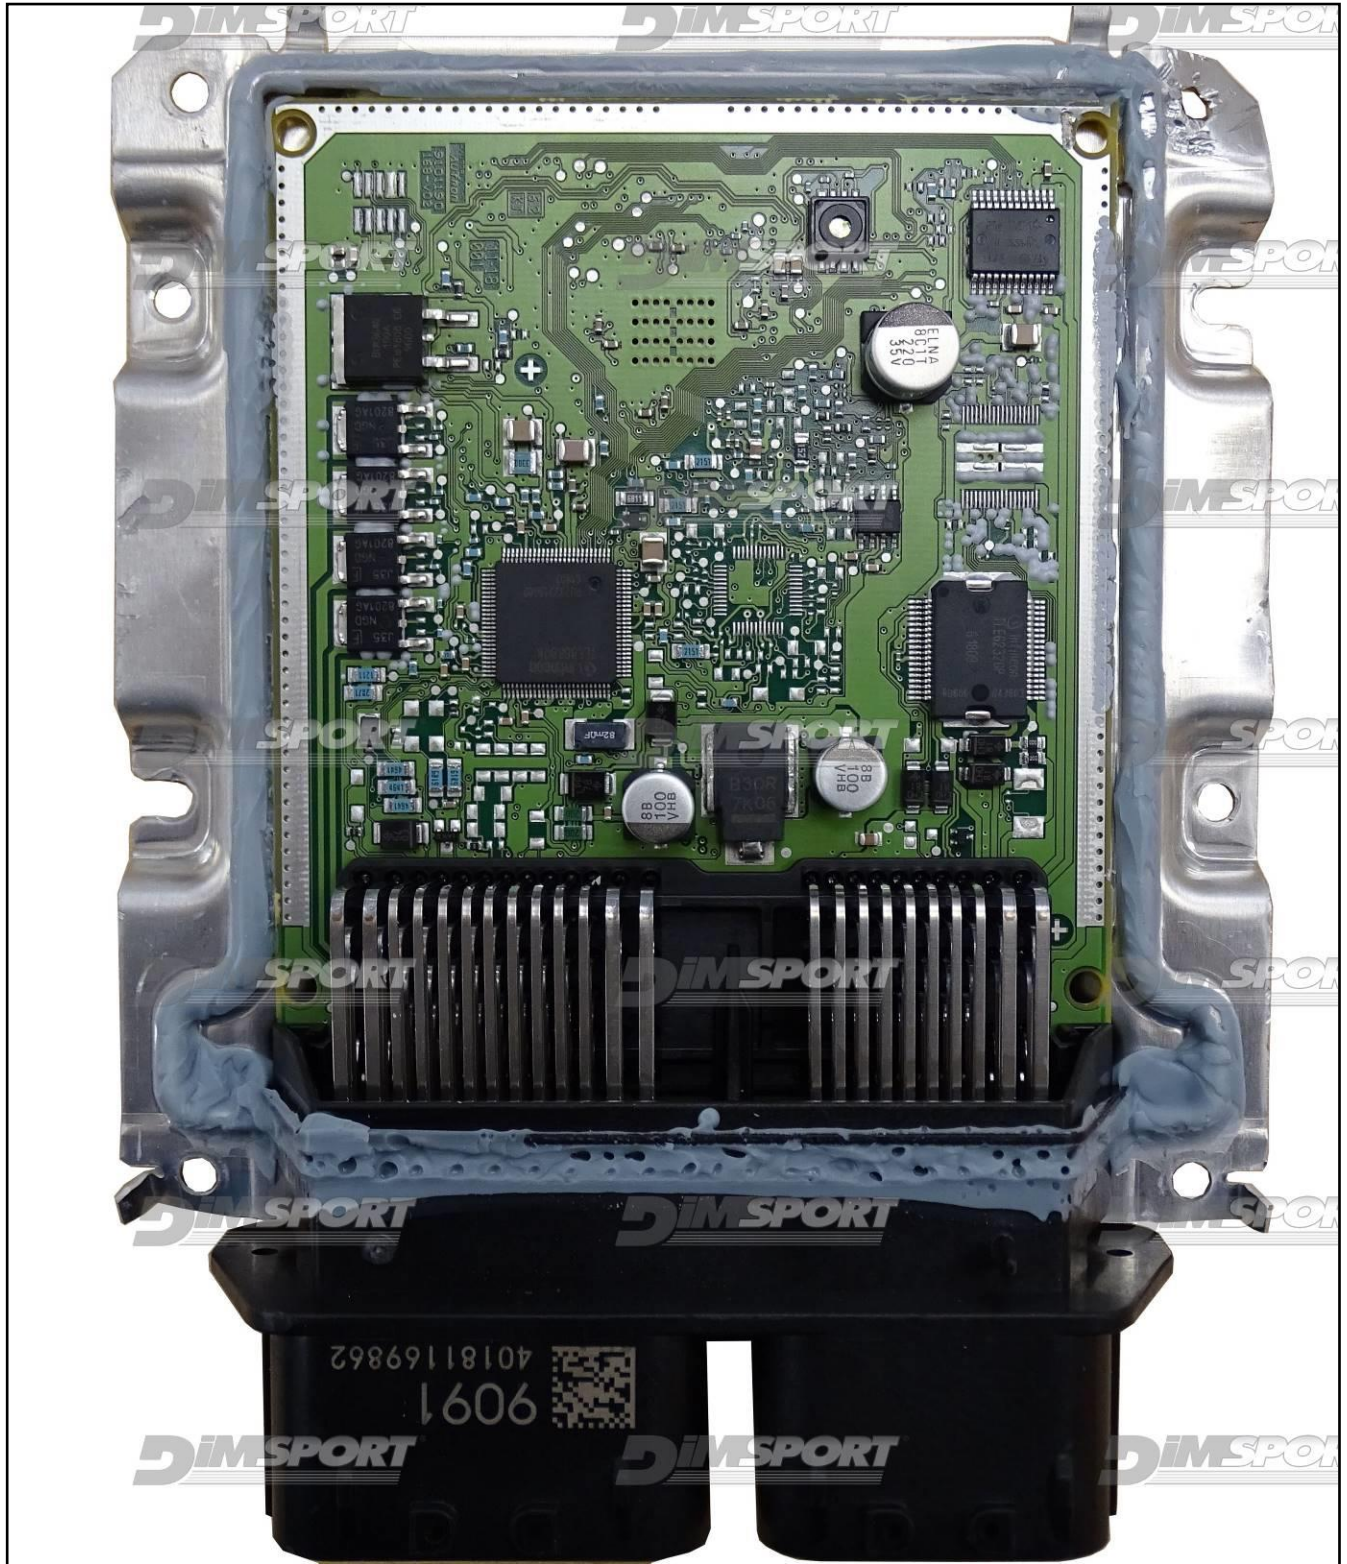


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.
 Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHYTE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE GREY	RESET

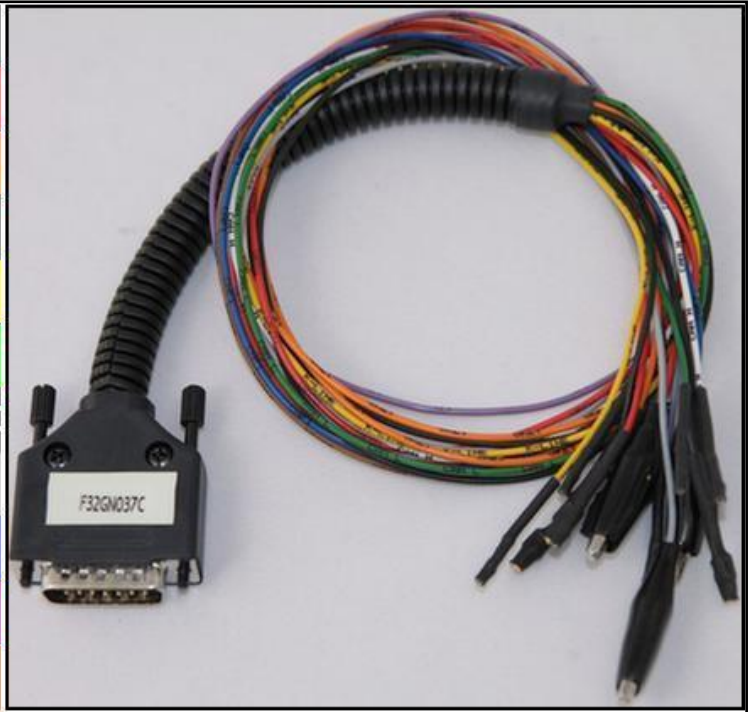

ECU CONNECTOR

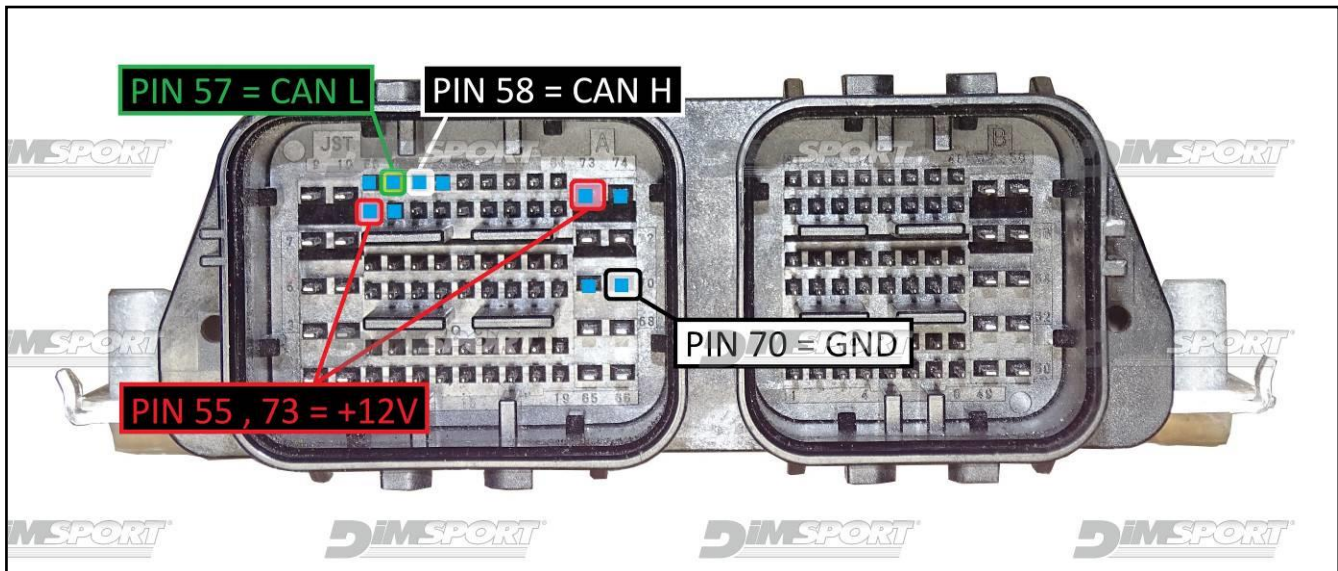

BOOT/CNF1 CONNECTIONS

Connect the GREY&BLUE wires of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

