
plugin 974 MARELLI 9GV BAM VAG






DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON

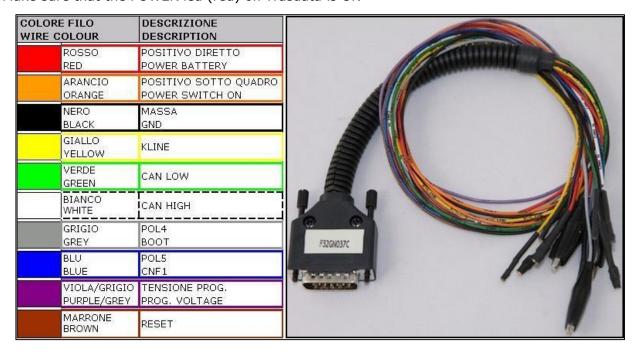

ECU CONNECTOR

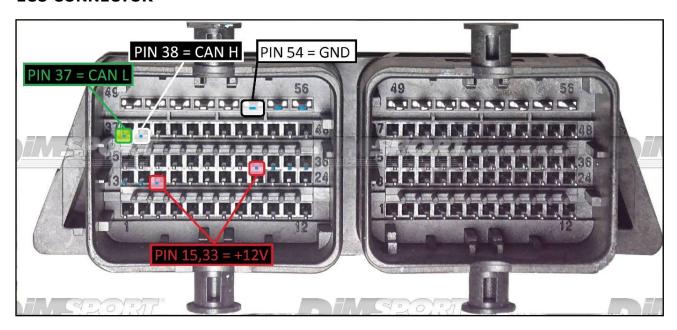

DIRECT CONNECTION CNF1

Connect the BLUE wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	BLU BLUE	CNF1	

