
plugin **953**

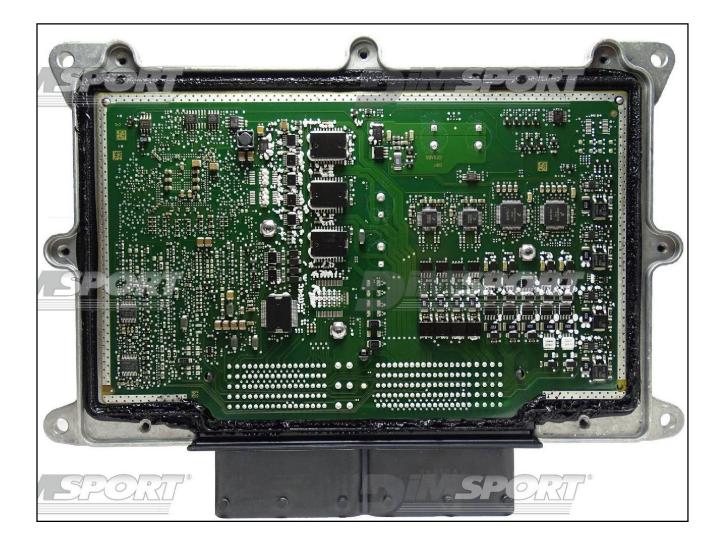




ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32QN037C
BLU BLUE	POL5 CNF1	Barran (1979)
	TENSIONE PROG. PROG. VOLTAGE	CHANNE
MARRONE BROWN	RESET	

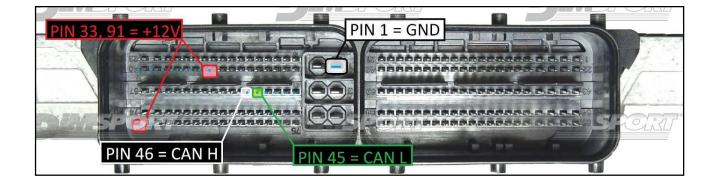

CNF1 DIRECT CONNECTION

Connect the BLUE wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	88) - S	DESCRIZIONE DESCRIPTION	
BLU BLUE		CNF1	

