MBE958 CATERHAM

plugin 392




MBE958 CATERHAM

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	ICAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
		TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

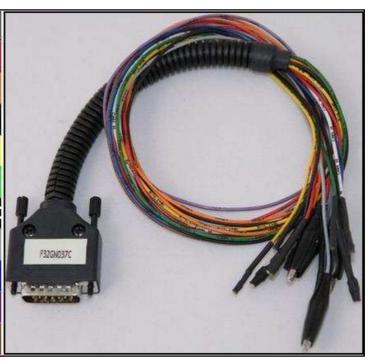

ECU CONNECTOR



MBE958 CATERHAM

Warning: in order to work on the ECU (both reading and writing operations) it is necessary to make the little bridge (LINK) between the 2 TEST POINT B and O; it is then required a 1000hm resistor connected as shown in the picture. All these connections must be removed before restoring the ECU into the vehicle.

