## MOTOROLA NGC4 CHRYSLER


### **PLUGIN 371**



### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	ICAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
		TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

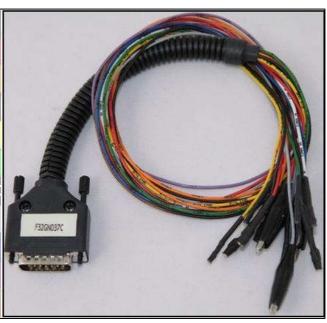


#### MOTOROLA NGC4 CHRYSLER

#### **ECU CONNECTOR**



To pin A10,A11,A12,A29 it is possible to connect RED and ORANGE wires, they both are 12V.  ${f J-TAG}$  FREE WIRING CONNECTION

Connect the F34NTF53 wiring as explained here below:

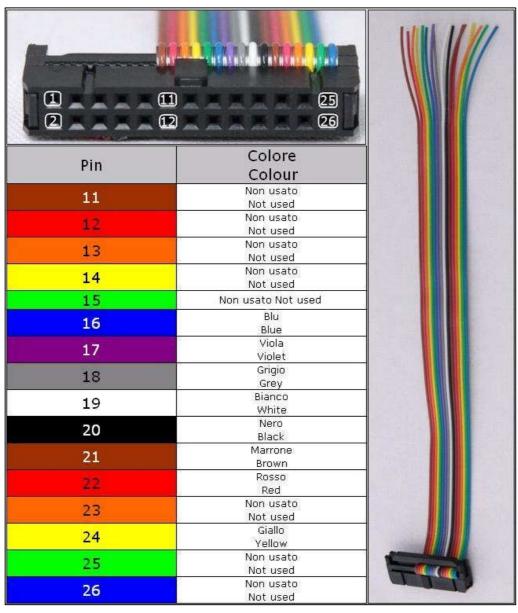

# MOTOROLA NGC4 CHRYSLER

**WARNING**: solder the wires by paying attention NOT to short circuit the signals of the wires.

