



PLUGIN 1106:NEW TRASDATA

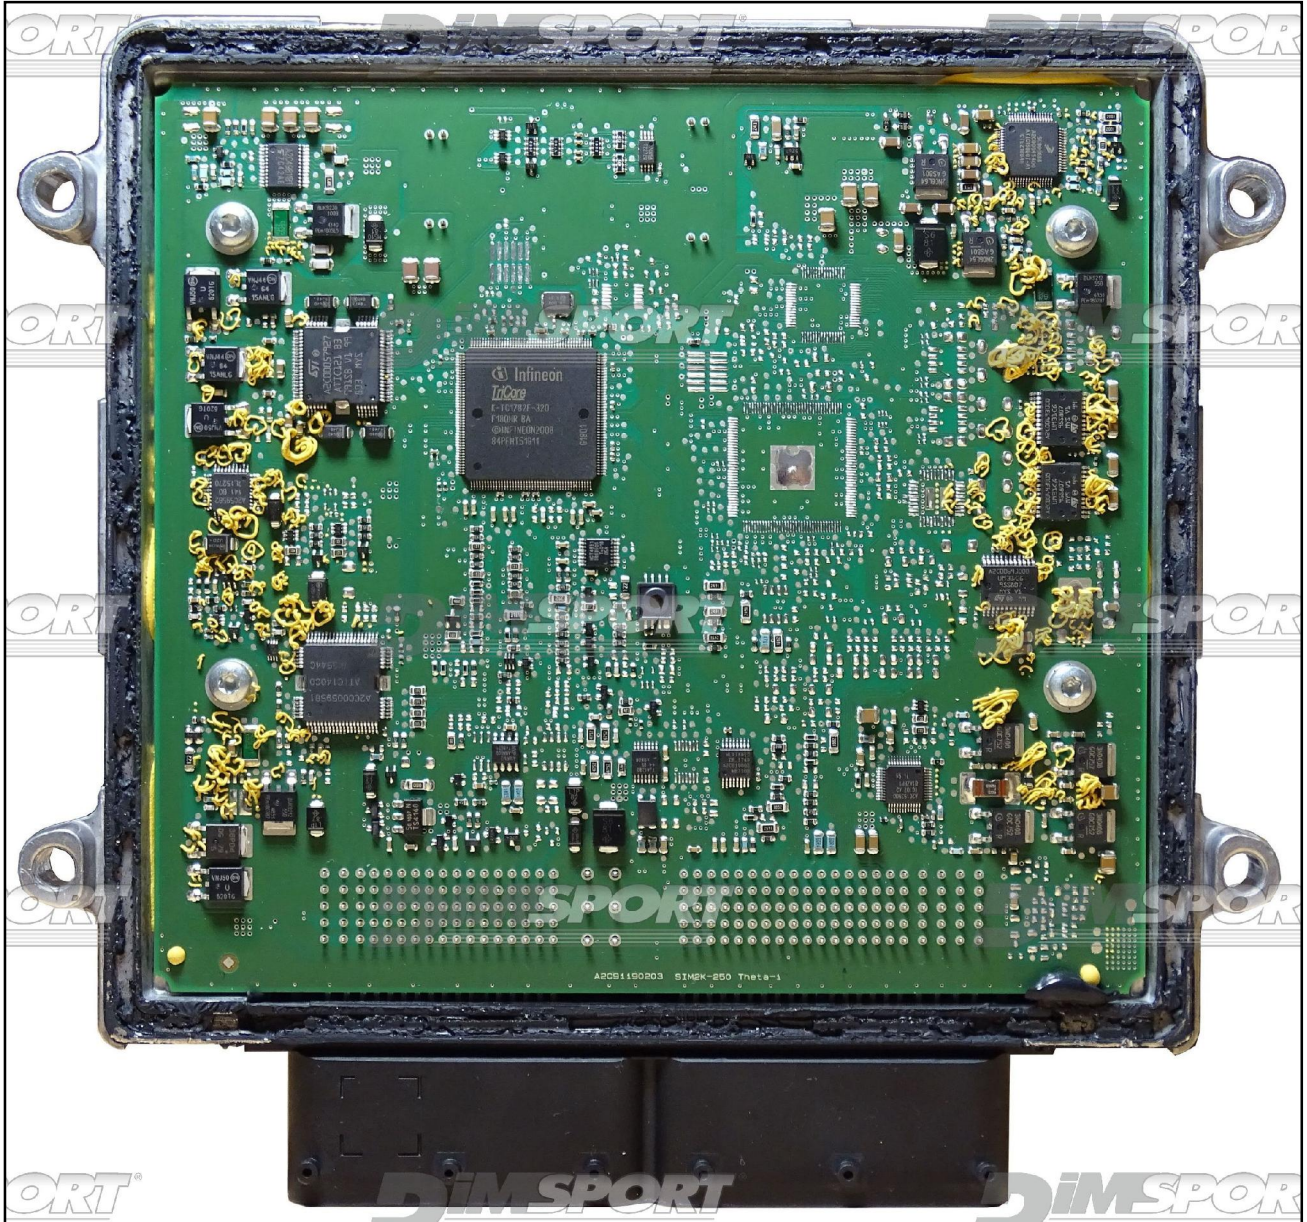

ECU TYPE 1
1 processor



ECU TYPE 2
2 processors


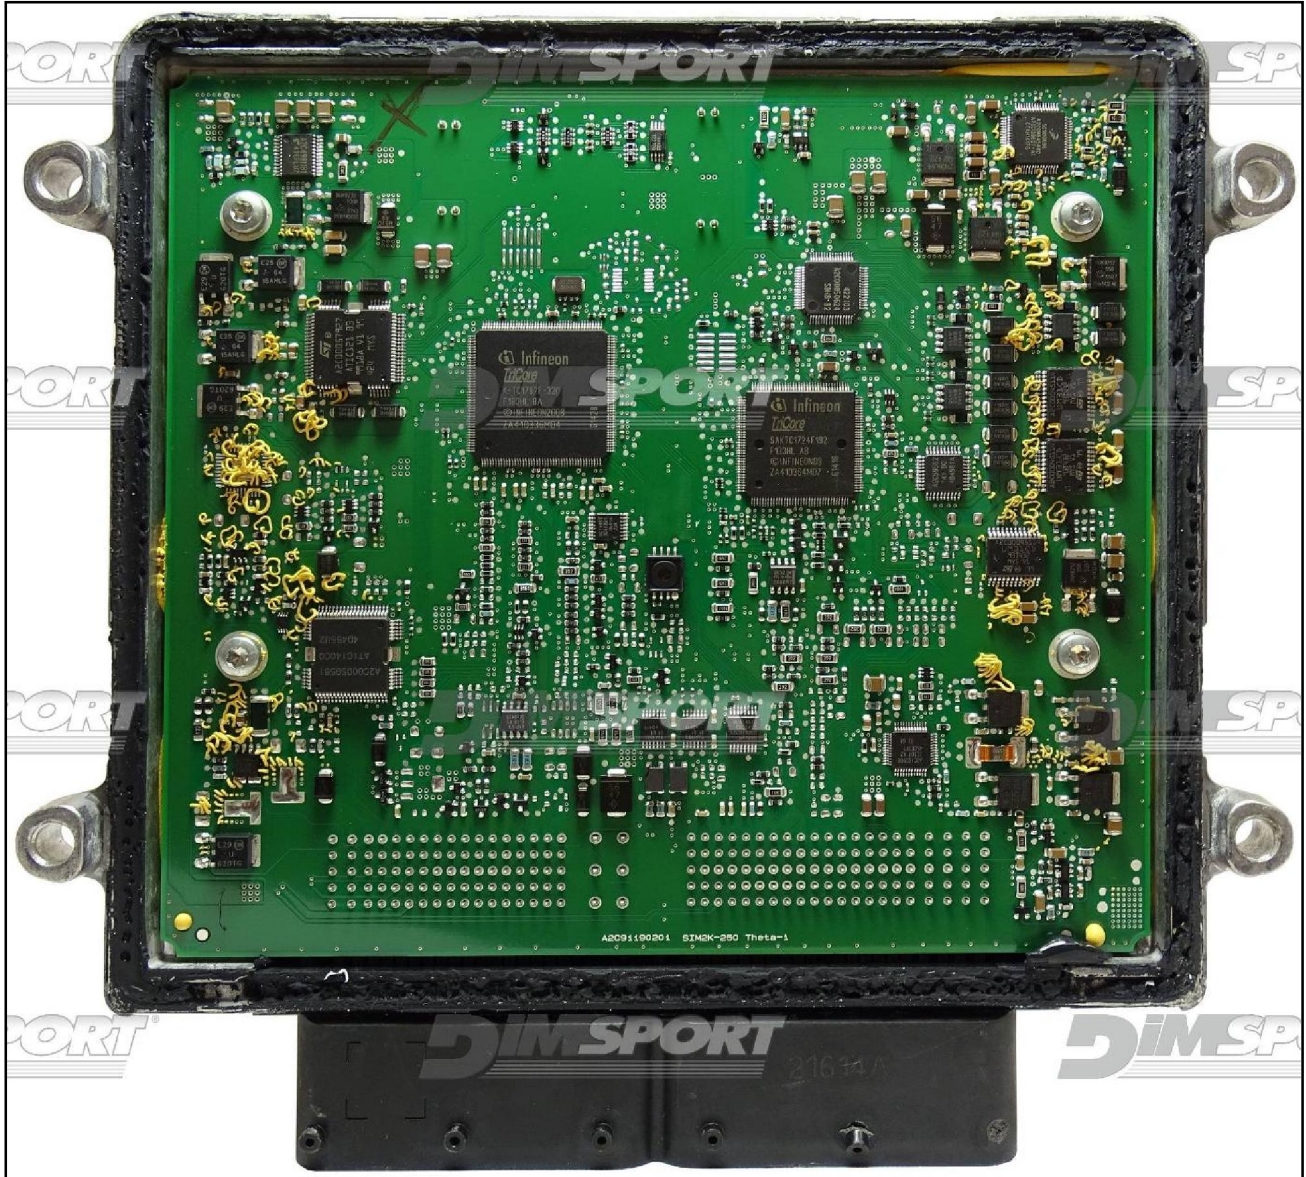


CONNECTOR ECU TYPE 1&2

In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

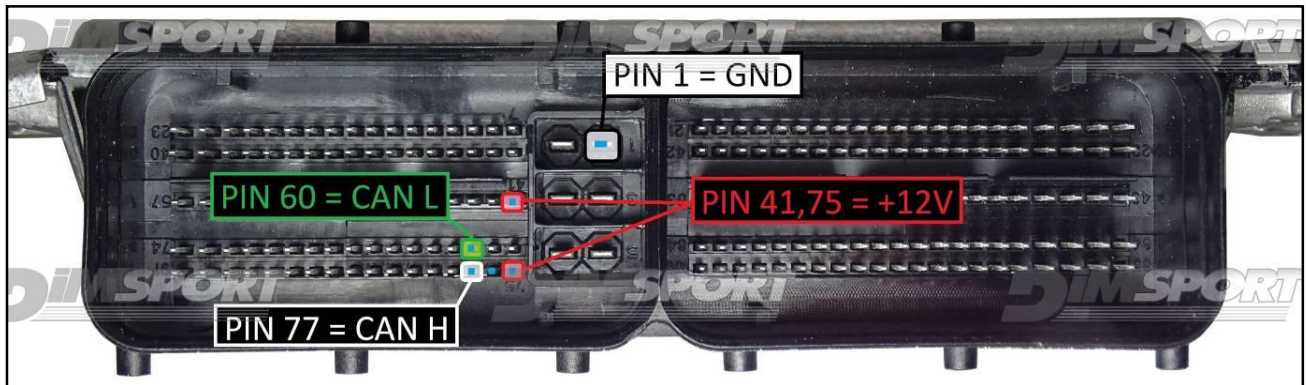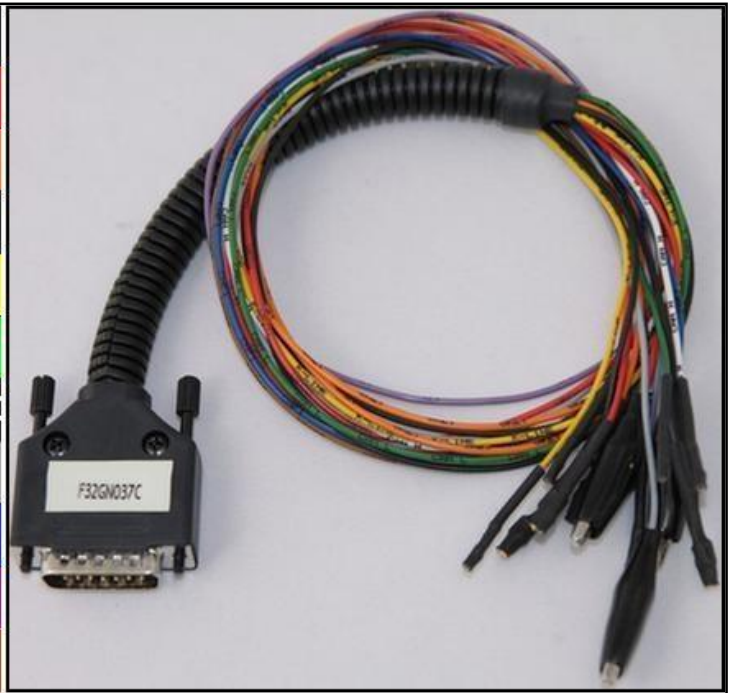


DIRECT BOOT/CNF1/RESET CONNECTION ECU TYPE 1

Connect the GREY, BLUE & BROWN wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT
BLU BLUE	CNF1
MARRONE BROWN	RESET

Warning: in order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

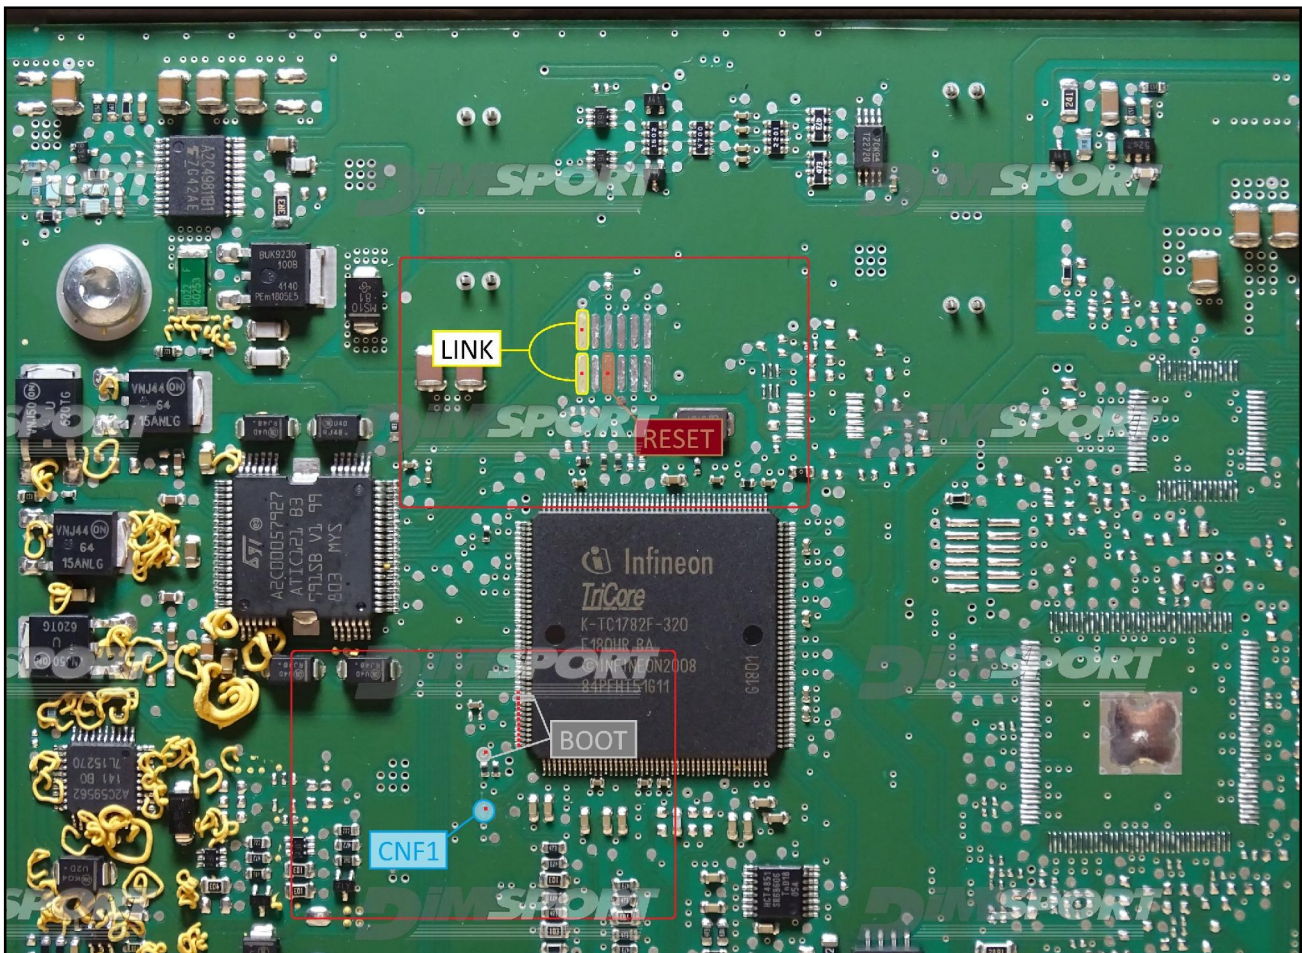

DIRECT BOOT/CNF1/RESET CONNECTION ECU TYPE 2

Connect the GREY, BLUE & BROWN wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT
BLU BLUE	CNF1
MARRONE BROWN	RESET

Warning: in order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

