


# CONTINENTAL SIMOS15.3x BAM VAG

plugin 1764

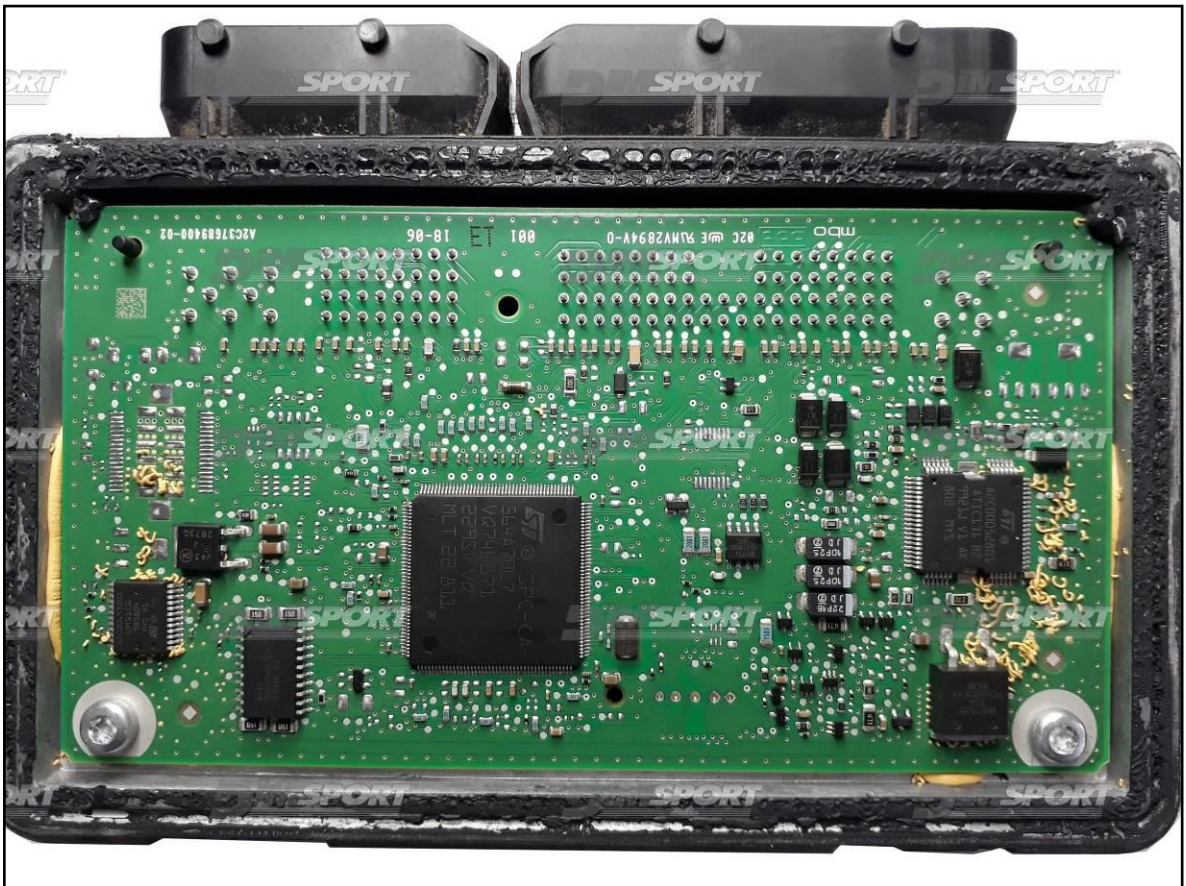


# CONTINENTAL SIMOS15.3x BAM VAG

## DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D.  
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

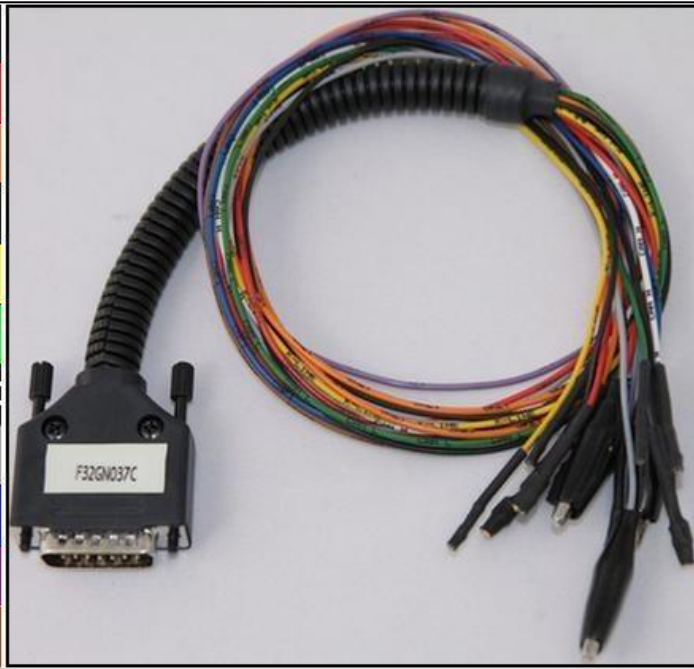

## ECU CONNECTOR



# CONTINENTAL SIMOS15.3x BAM VAG

## DIRECT CNF1 CONNECTION

Connect the BLUE wire of the cable F32GN037C/D as described here below

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
BLU BLUE	CNF1

**Warning:** LINK1, LINK2, are mandatory connections for a correct communication.  
Remove the LINKS before placing the ECU back into the vehicle.

