
plugin 1708


TRANSTRON M5.2.1





TRANSTRON M5.3S

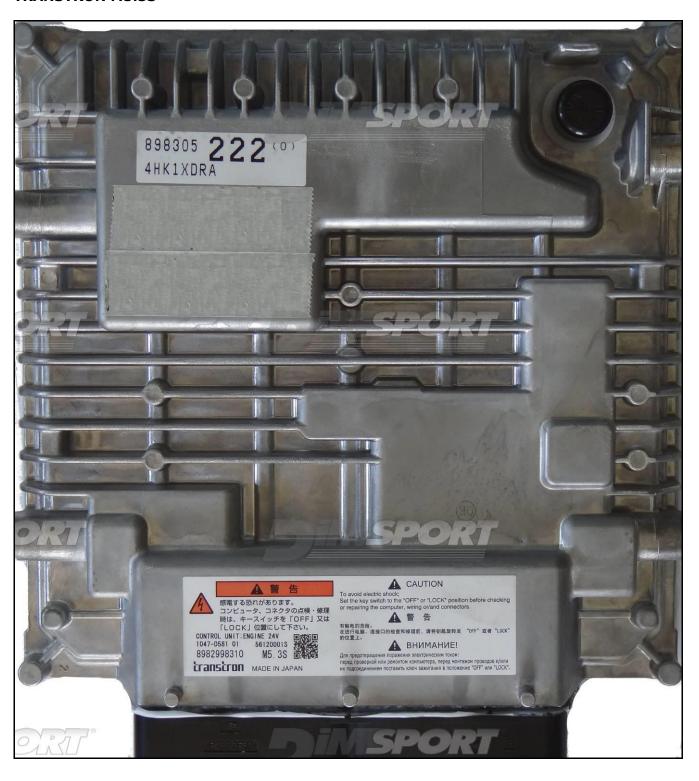


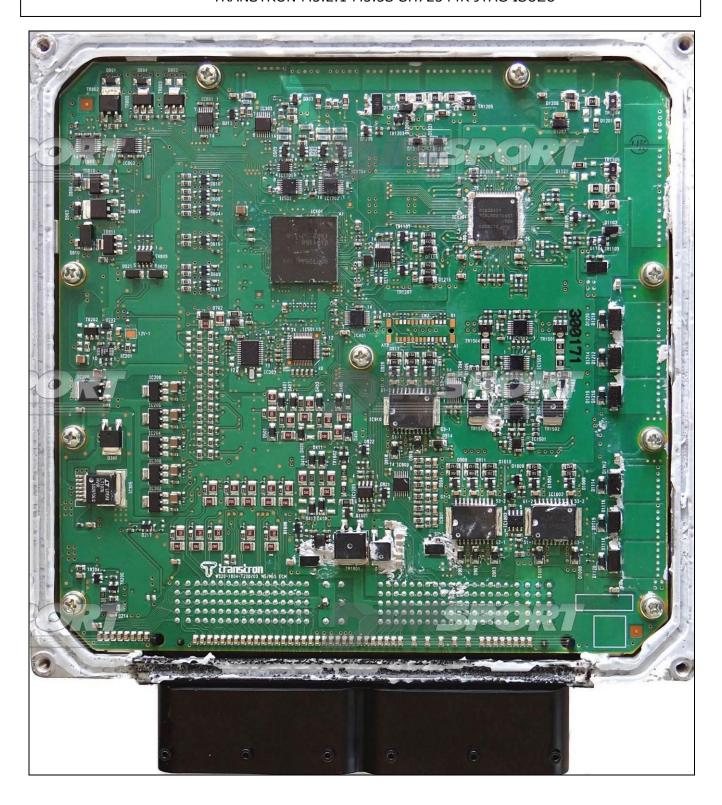


DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	All
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GV037C
BLU BLUE	POL5 CNF1	Finance III
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	CHARLES .
MARRONE BROWN	RESET	

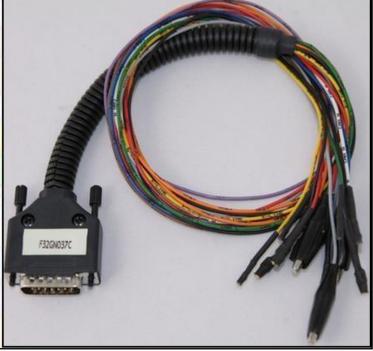

ECU CONNECTOR

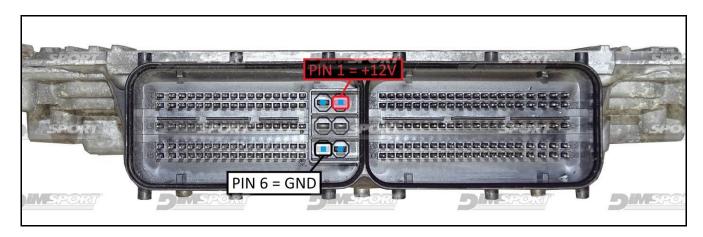

J-TAG LOOSE WIRES CONNECTION

For the reading & writing procedures use the FLAT cable F34NTF53

	26 /	
Pin	Colore	
	Coulor	
11	Non usato Not used	
4.8	Non usato	
12	Not used	
13	Non usato	
	Not used	
14	Non usato Not used	
A CONTRACTOR OF THE PROPERTY O	Non usato	
15	Not used	
16	Blu	
16	Blue	
17	Viola	
	Violet	
18	Grigio Grey	
4.0	Bianco	
19	White	
20	Nero	
20	Black	
21	Marrone Brown	
	Rosso	
22	Red	
23	Arancio	
and the second s	Orange Giallo	
24	Yellow	
25	Non usato	
25	Not used	
26	Non usato	
	Not used	

Connect the wires on the pads avoiding any short circuits.

WARNING: in order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

