
plugin 1055

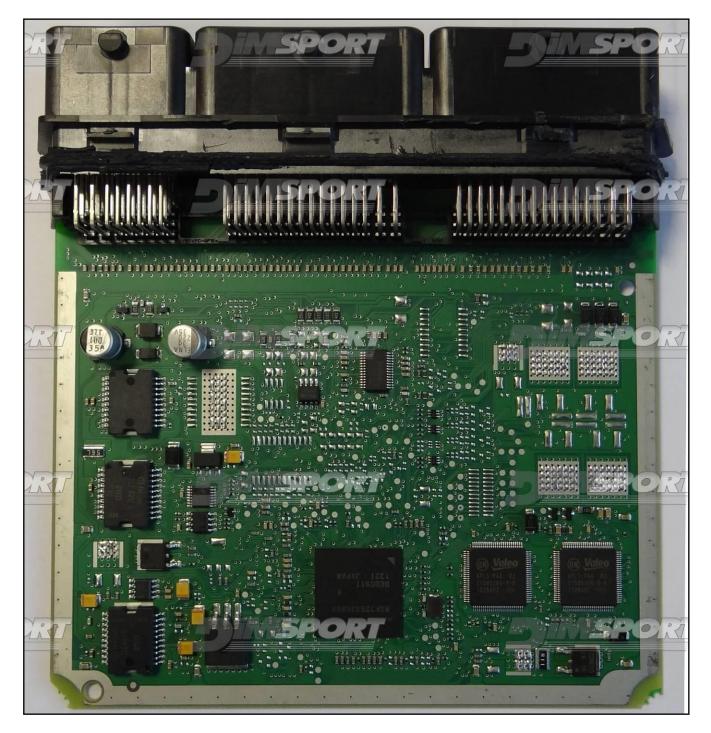

PROCESSOR SIDE



COVER SIDE



ECU CONNECTOR

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	
	P TENSIONE PROG. PROG. VOLTAGE	SHARE -
MARRONE BROWN	RESET	




J-TAG LOOSE WIRES CONNECTION

For the reading & writing procedures use the FLAT cable F34NTF53

Pin	Colore Colour	
11	Non usato Not used	
1.2	Non usato	
+ 4	Not used	
13	Non usato Not used	
14	Non usato	
14	Not used	
15	Non usato Not used	
10	Blu	
16	Blue	
17	Viola Violet	
	Grigio	
18	Grey	
19	Bianco	
19 408-01	White Nero	
20	Black	
21	Marrone Brown	
22	Rosso Red	
	Arancio	
23	Orange	
24	Giallo Yellow	
	Verde	
25	Green	
26	Non usato Not used	

Connect the wires on the pads avoiding any short circuits. Connections are required on both sides of the ECUs.



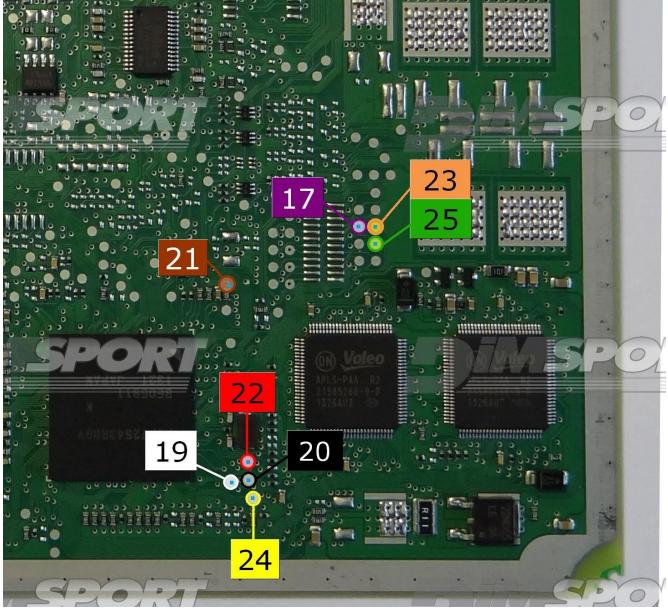

COVER SIDE

