


BOSCH ME17974 IROM TC1762 POLARIS

plugin 673

On this ECU it is possible ONLY the DIRECT CONNECTION.



BOSCH ME17974 IROM TC1762 POLARIS

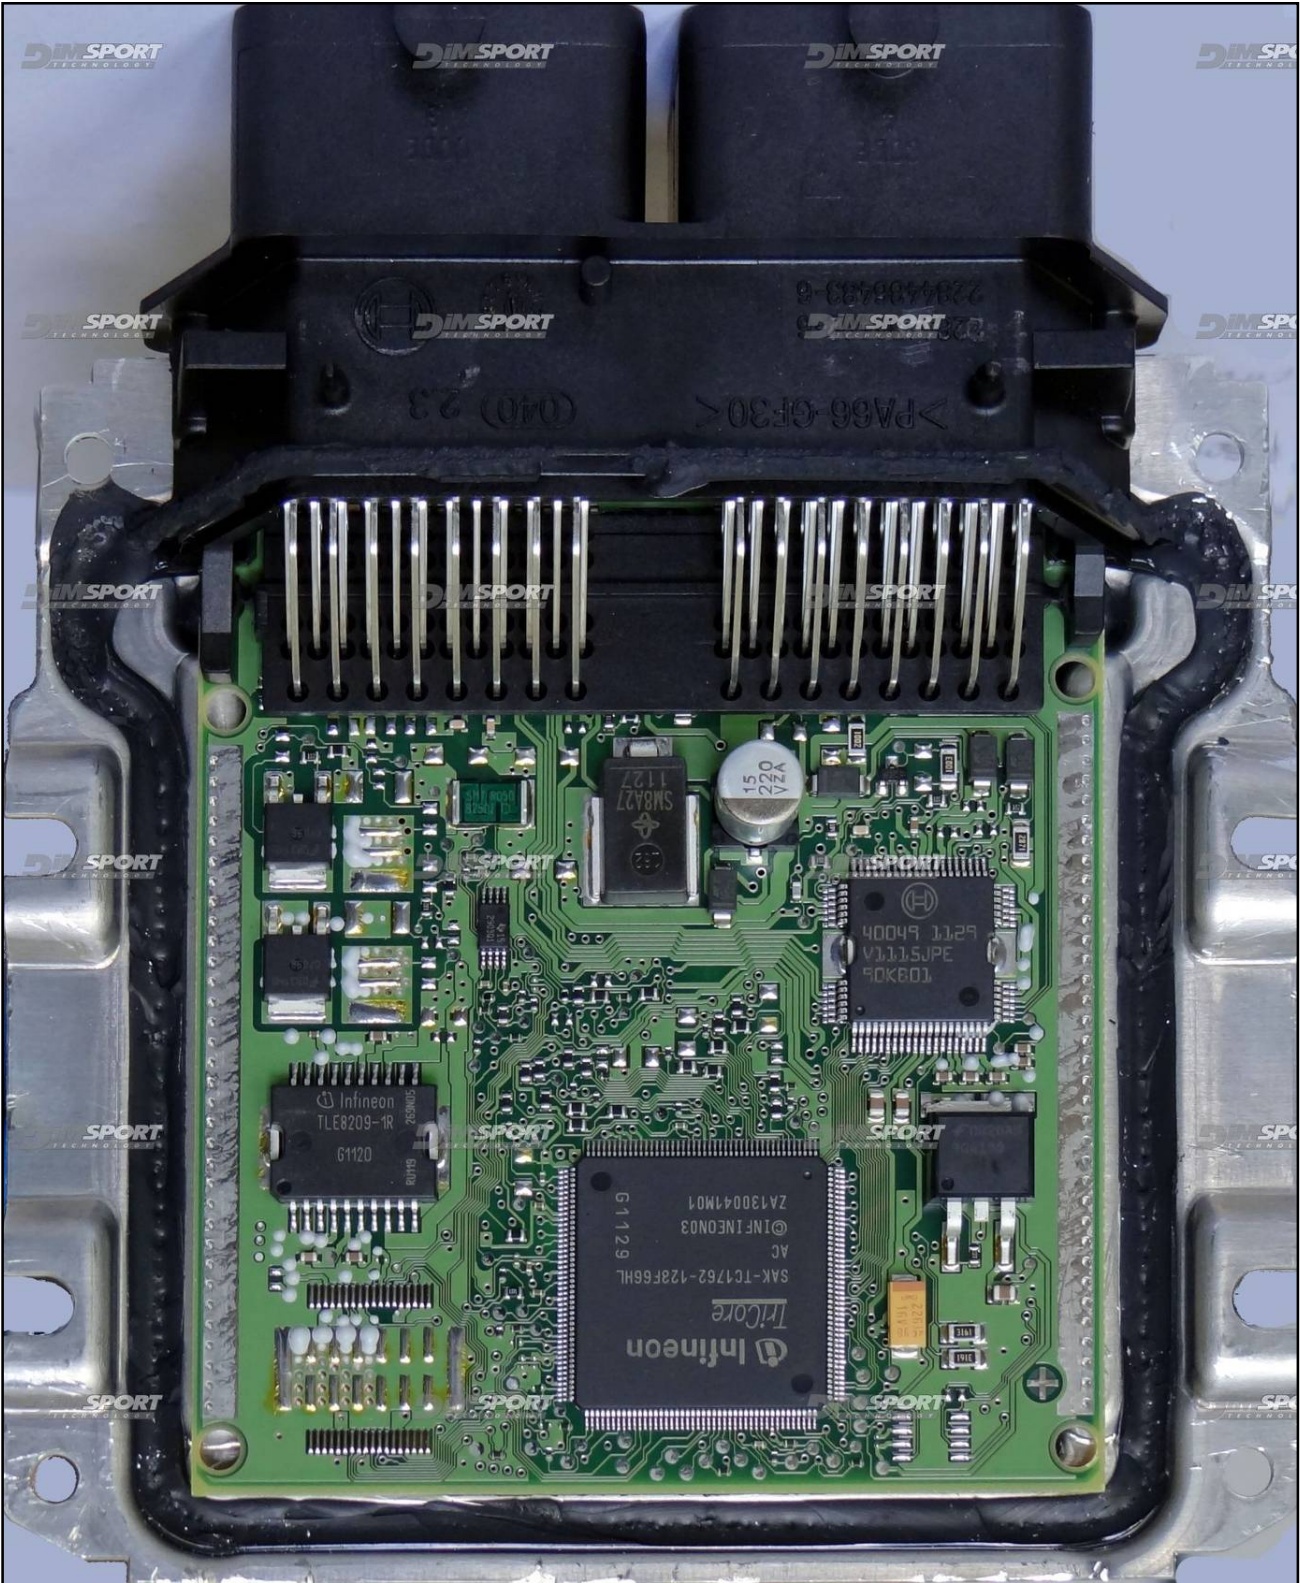


BOSCH ME17974 IROM TC1762 POLARIS


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.
 Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHYTE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE GREY	RESET

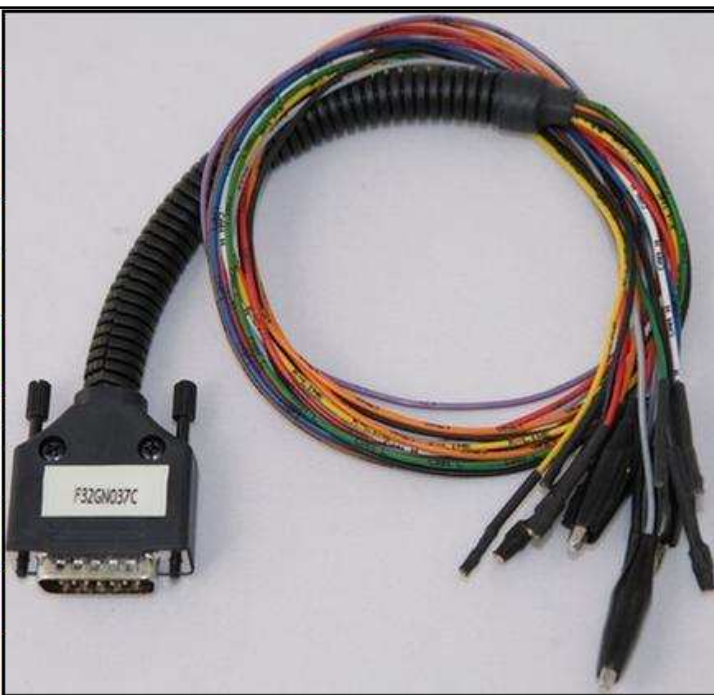

ECU CONNECTOR

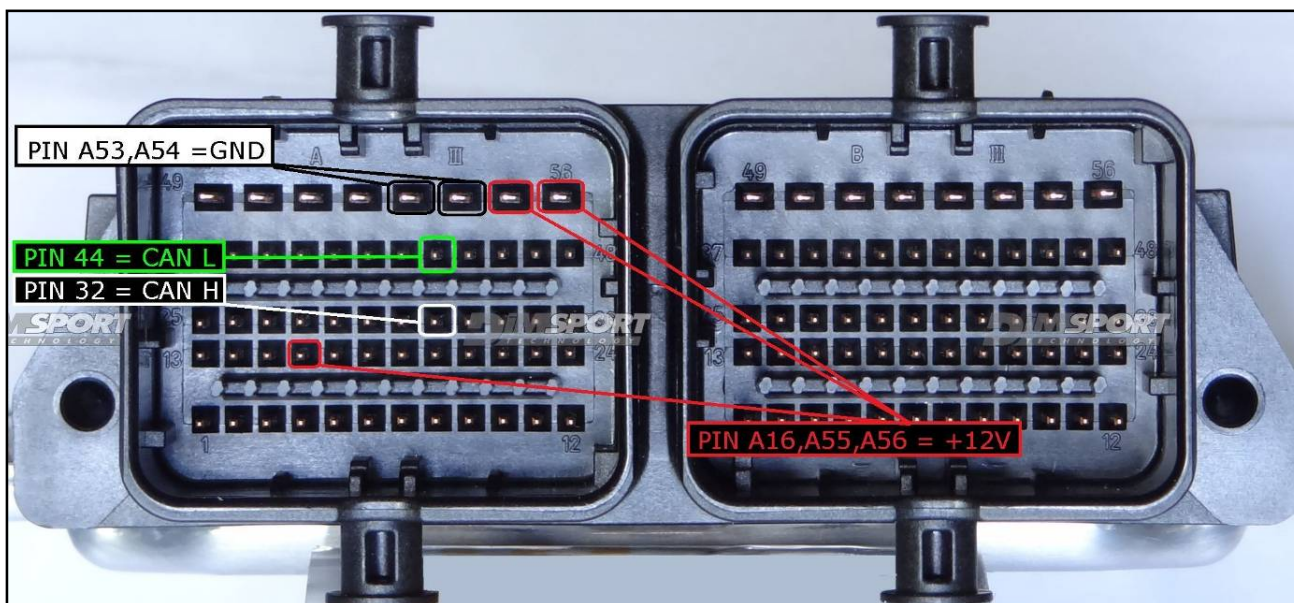

To the power feeding pins A16,A55,A56 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C/D cable, they both have 12V signal.

BOSCH ME17974 IROM TC1762 POLARIS

BOOT DIRECT CONNECTION

Connect the GREY wire of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT

