
plugin **428** On this ECU it is possible only the DIRECT CONNECTION





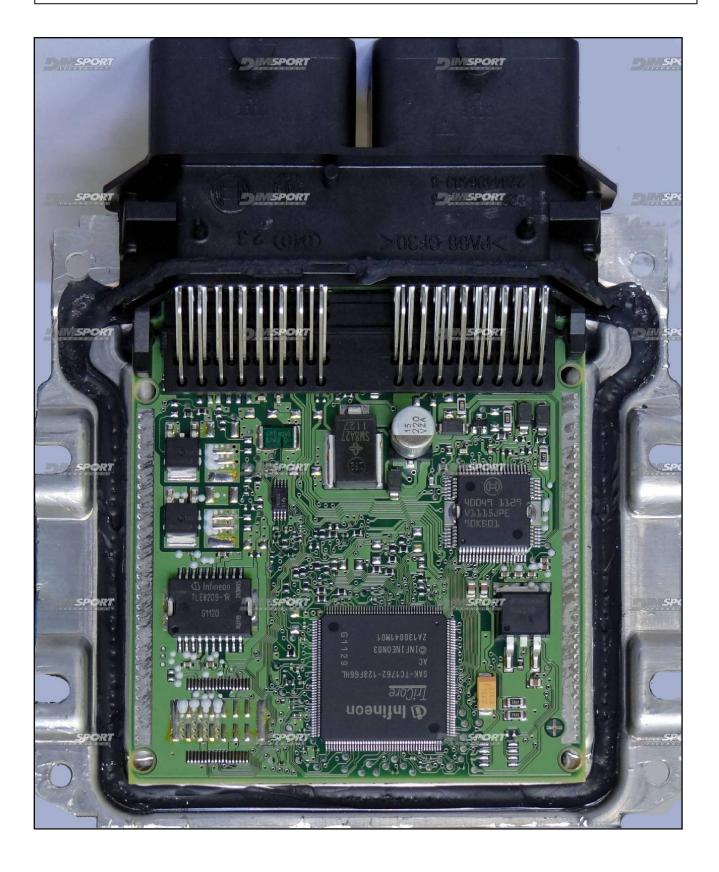


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHYTE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	Personal I
	TENSIONE PROG. PROG. VOLTAGE	- SHANNE
MARRONE GREY	RESET	

ECU CONNECTOR

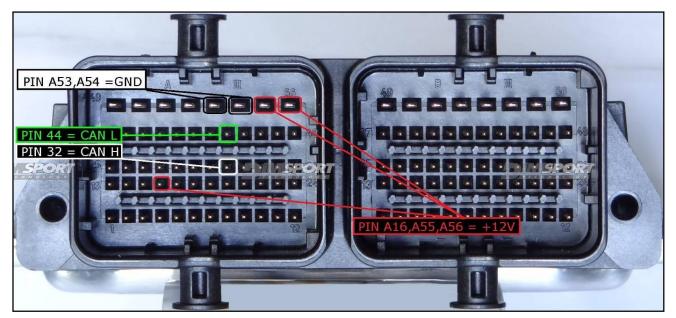

It is possible to use RED and ORANGE wirings for the pins A16,A55,A56, they all are +12V signals.

POL4/BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below :

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

