


DENSO FUJITSU NEC76F0039AGD 275036-1152 TOYOTA

plugin **1016**

WARNING : on this ECU it is NOT present the DENSO identification number, please check that the motherboard of your ECU is exactly the same as the one displayed here below.



DENSO FUJITSU NEC76F0039AGD 275036-1152 TOYOTA

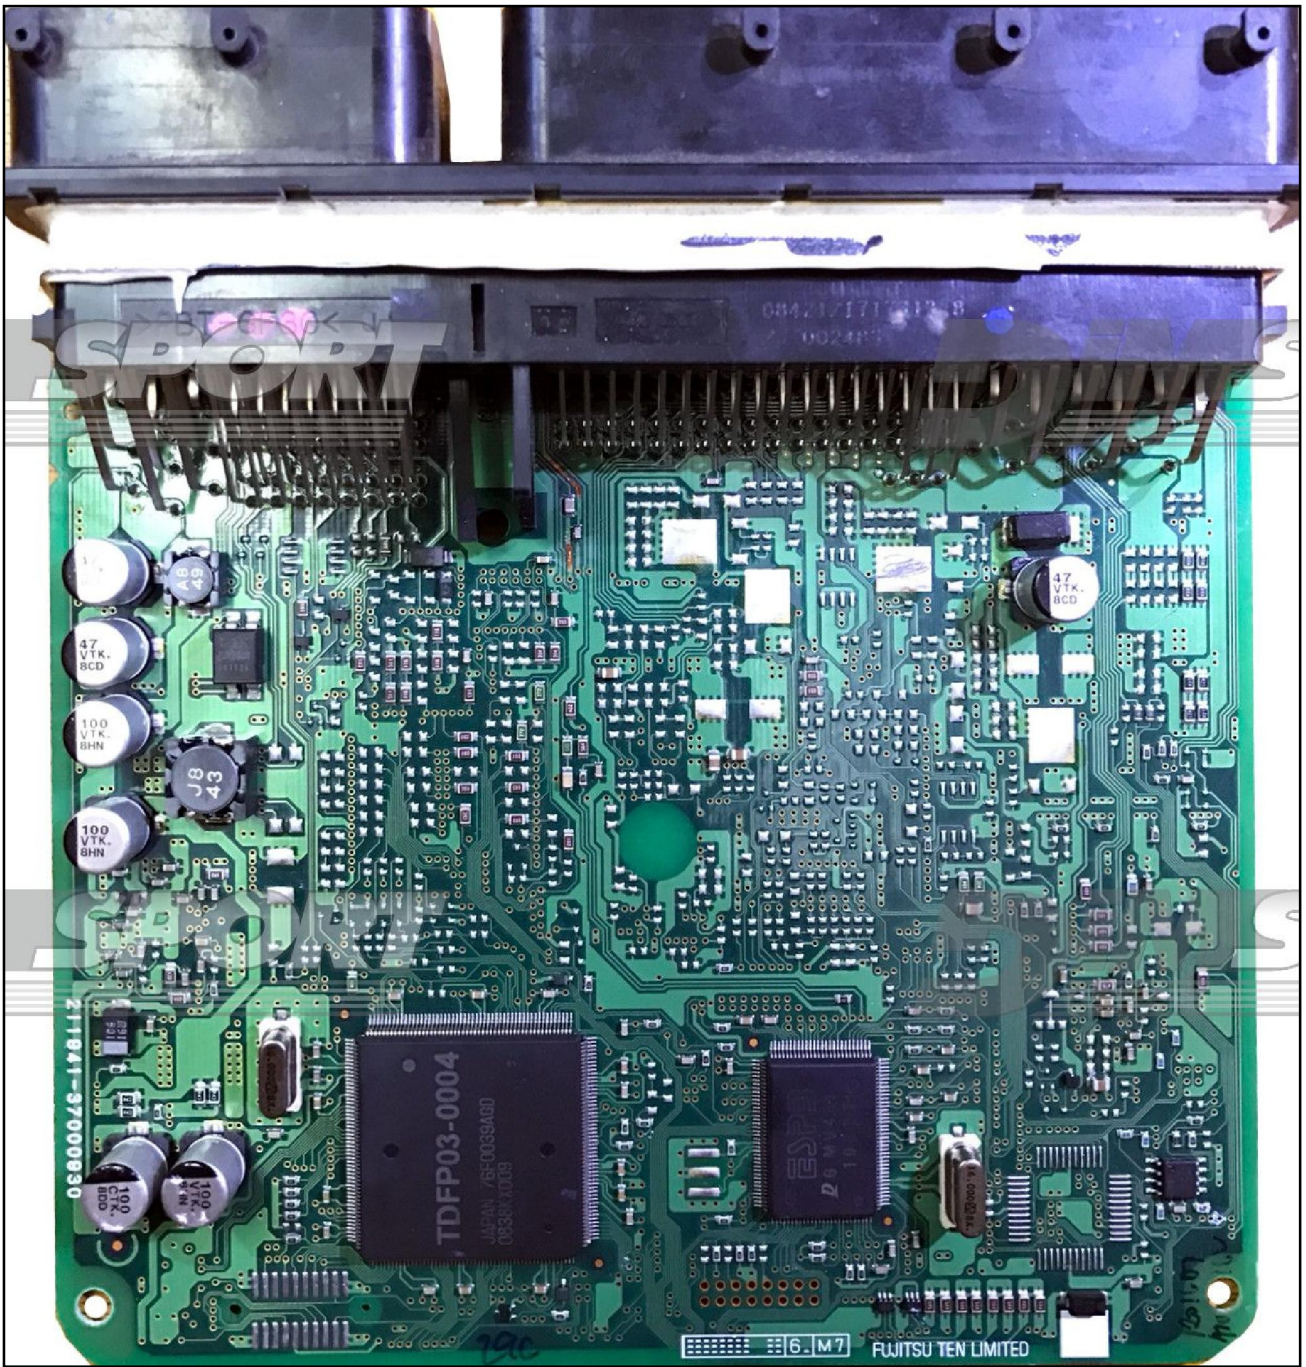


DENSO FUJITSU NEC76F0039AGD 275036-1152 TOYOTA

DIRECT CONNECTION

For the connection use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

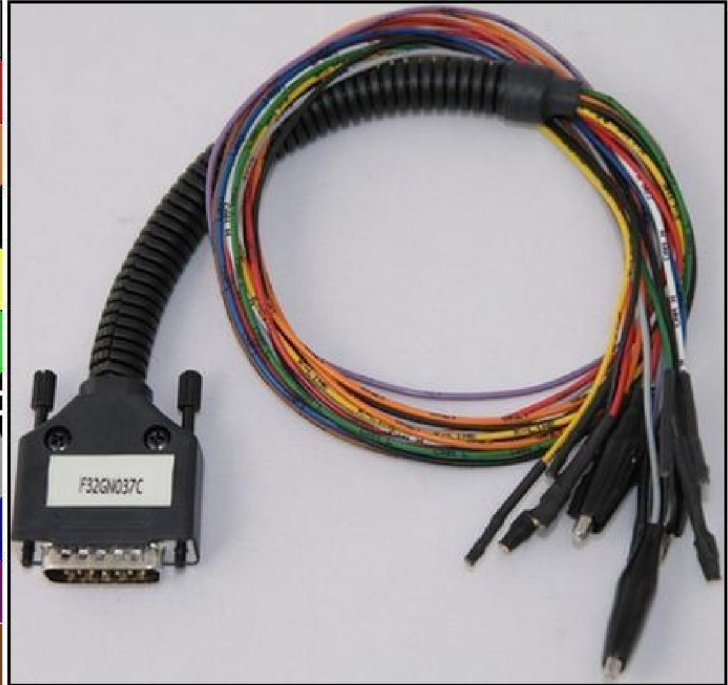


ECU CONNECTOR




LOOSE WIRES CONNECTION:

For the READING and WRITING procedure use the FLAT cable F34NTF53

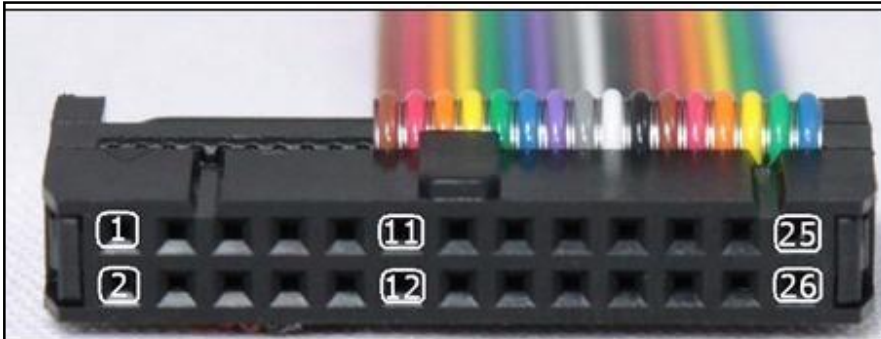

Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Verde Green
16	Non usato Not used
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

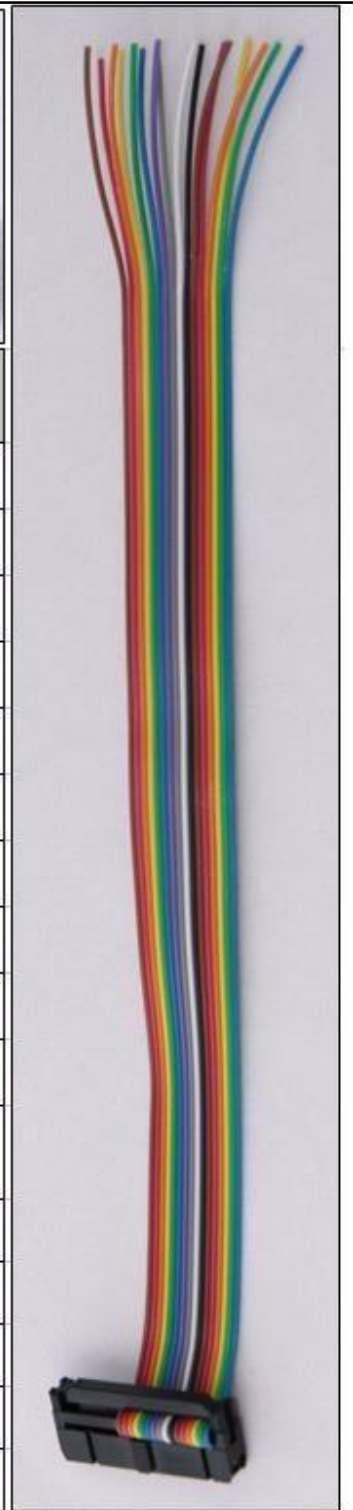

DENSO FUJITSU NEC76F0039AGD 275036-1152 TOYOTA

WARNING: for a correct reading and writing operation it is necessary to perform a LINK between the pads displayed in the picture below. Remove the LINK before placing back the ECU into the car.

