DENSO SH7058 1RC-8591A-XX YAMAHA

plugin 646




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

ECU CONNECTOR

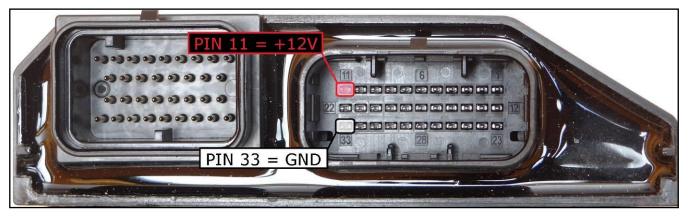

WARNING :

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:


For the READING procedure use the FLAT cable F34NTF53


Pin	Colore Colour	
11	Non usato	
	Not used	
12	Non usato	
and an	Not used Non usato	
13	Not used	
- 10 m	Non usato	
14	Not used	
15	Non usato	
15	Not used	
16	Blu Blue	
	Viola	
17	Violet	
18	Grigio	
18	Grey	
19	Bianco	
	White	
20	Nero Black	
	DIGUN	
21	Marrone	
	Brown	
22	Rosso Red	
	Arancio	
23	Orange	
24	Giallo	
	Yellow Verde	
25	Green	
20	Non usato	
26	Not used	

To get access to the communication pads for the reading procedure you must remove part of the silicon that covers the ECU board.



After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

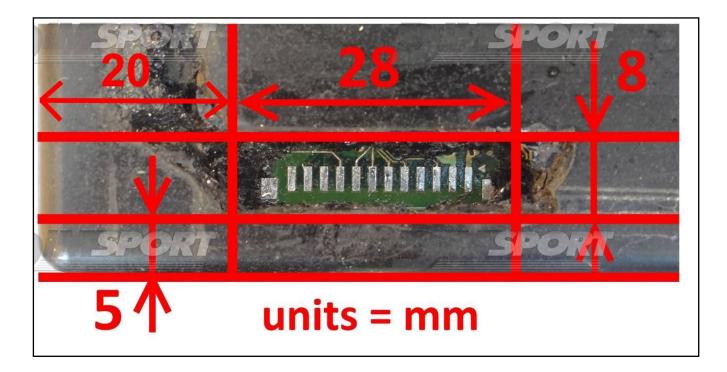

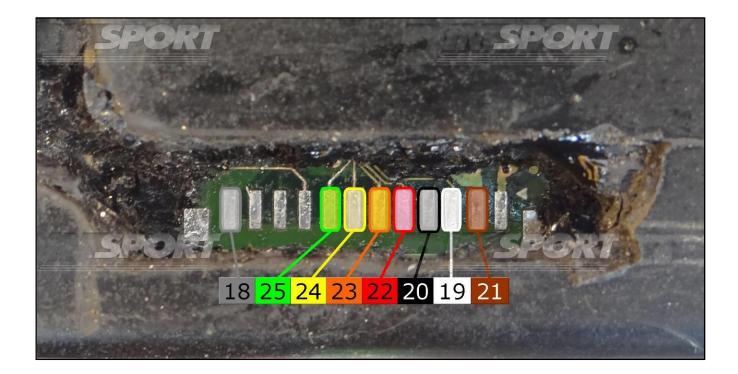

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION	F34NTA13
	RONE OWN	BOOT	WWW dimspet com
	BLU LUE	CNF	
NERO BLACK	GIALLO YELLOW OR	RXD	
GIALLO YELLOW			and a second sec
GRIGIO GREY	VERDE GREEN	TXD	
)SSO RED	POSITIVO DIRETTO POWER BATTERY	
	ero .ack	MASSA GND	

