

MARELLI 8DF MPC5565 MSM FCA

Plugin 1535 MARELLI MJD8F2 MPC5565 MSM FCA
Plugin 1539 MARELLI MJD8F3 MPC5565 MSM FCA
Plugin 1540 MARELLI IAW8DFI1 MPC5553 MSM FCA




MARELLI 8DF MPC5565 MSM FCA


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHYTE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE GREY	RESET

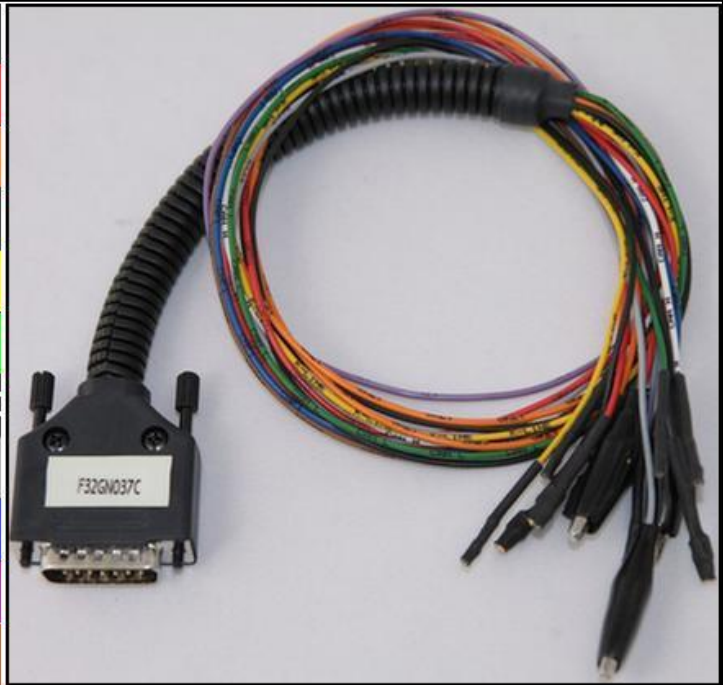

ECU CONNECTOR

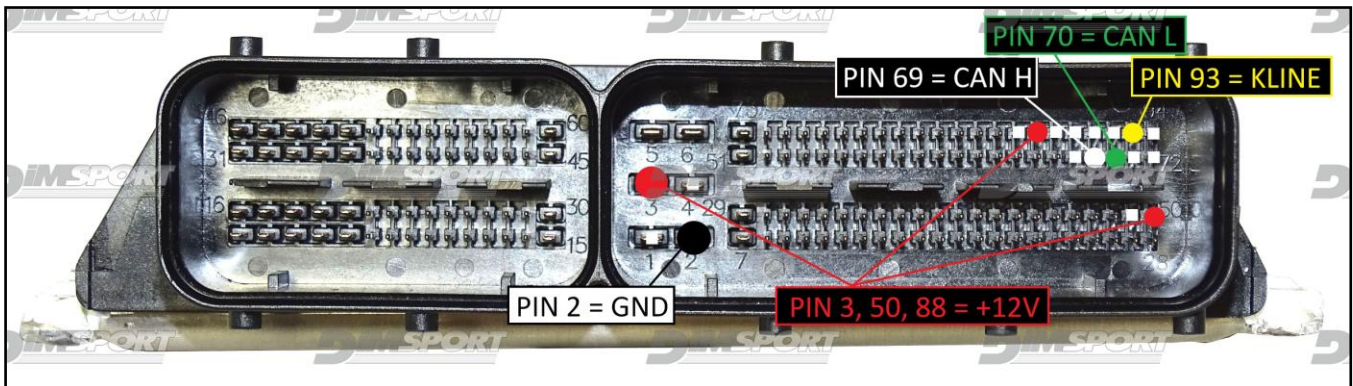

To the power feeding pins 3,50,88 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C-D cable, they both have 12V signal