**WARNING:** on this ECU it is possible ONLY the DIRECT connection, it is not possible to use the METAL FRAME with the F34DM011 adapter.

plugin 708 BOSCH ME17.8.3 IROM TC1797 GPT ME-CLAREN

To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT.

#### **GPT** connection with loose wires

Connect the F32GN037 cable to the **ANALOG PORT**Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.



#### ME17.8.3






#### **ECU CONNECTOR**

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32CN/037C
BLU BLUE	POL5 CNF1	
	TENSIONE PROG. PROG. VOLTAGE	- WHITE
MARRONE BROWN	RESET	

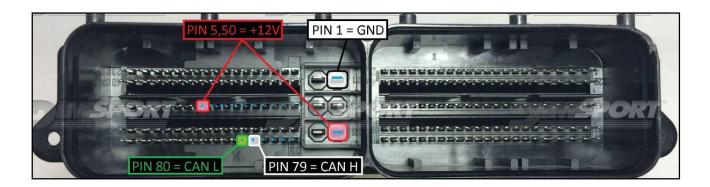

### **DIRECT BOOT&CNF1 CONNECTION**

Connect the GREY and BLUE wires of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	



#### **GPT CONNECTION**

Connect the GPT S1 & GPT S2 pins to the specific wires of the F34NTA15 flat cable as shown in the following picture.

PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION
	GPT_S2
	GPT_S1



## **DIMA BNP CONNECTION**

