plugin **207**



DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. Do not use this connection with the metal positioning frame kit.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F320x037C
BLU BLUE	POL5 CNF1	Parameter 1
VIOLA/GRIGIC	PROG. VOLTAGE	CHANNE -
MARRONE BROWN	RESET	


ECU CONNECTOR



BOOT DIRECT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below:


COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

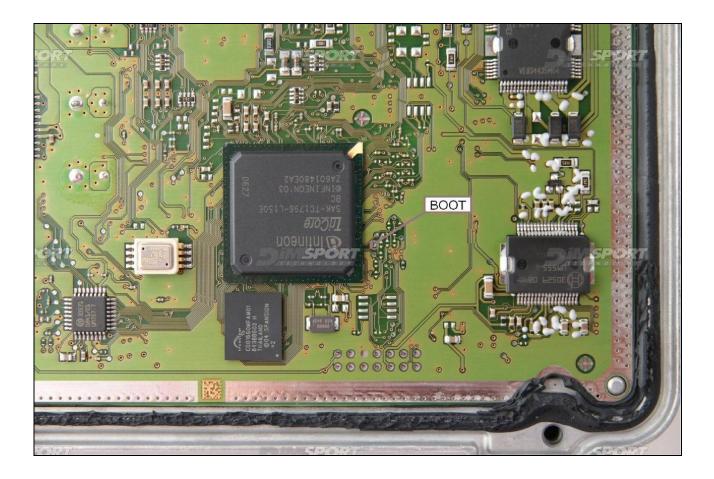

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM011 adapter.

Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.

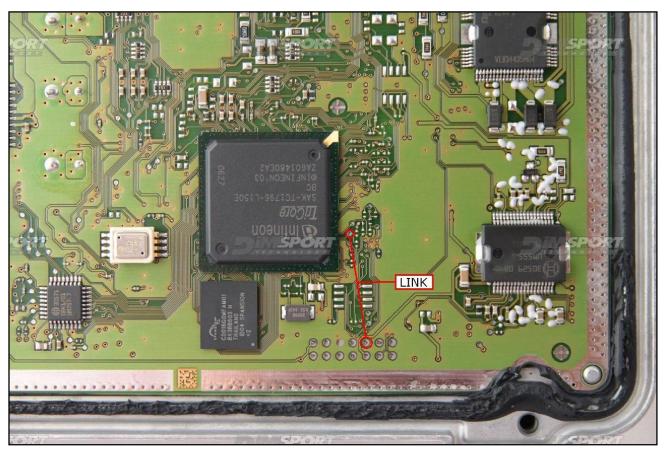

A different solution is to connect the BOOT wire directly to the orange BOOT clamp on the F34DM011 adapter. Check that the yellow BOOT jumper is set in ON position. Connect the DIMA flat cable to the Trasdata.

The following picture of the adapter F34DM011 connection is merely indicative.

