## plugin 054 - 1740

Attention! There are 2 different types of HW:

### **HW TYPE 01:**

The lay-by pins are placed in the lower part of the ECU.




#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

### DO NOT USE THIS CONNNECTION WITH THE METAL POSITIONING FRAME

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	ICAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGI PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET*


### **ECU CONNECTOR**

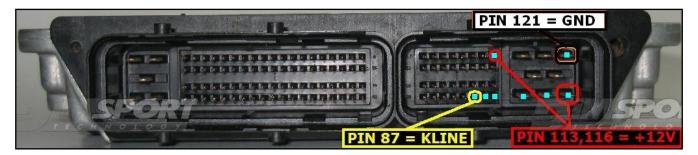

## **BOOT&CNF1 CONNECTION**


Connect GREY and BLUE wire2 of the cable F32GN037C/D as described here below:


COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

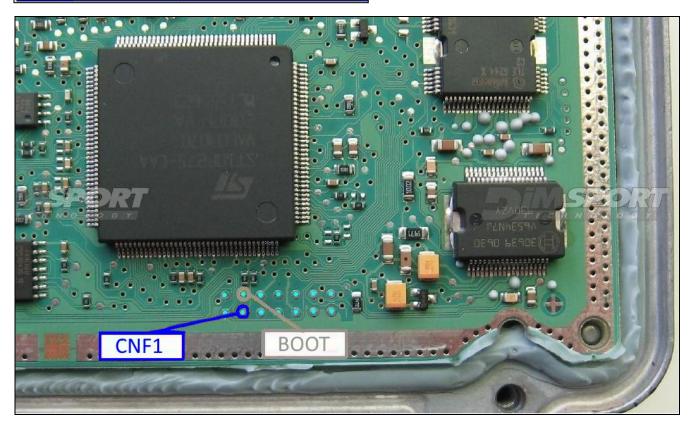

#### **METAL POSITIONING FRAME CONNECTION**


With the METAL POSITIONING FRAME it is required to solder the CNF1 as shown in the picture here below.

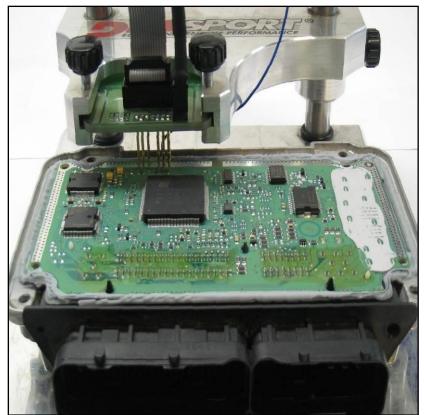

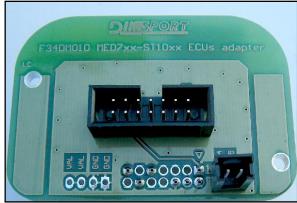




#### **HW TYPE 02:**

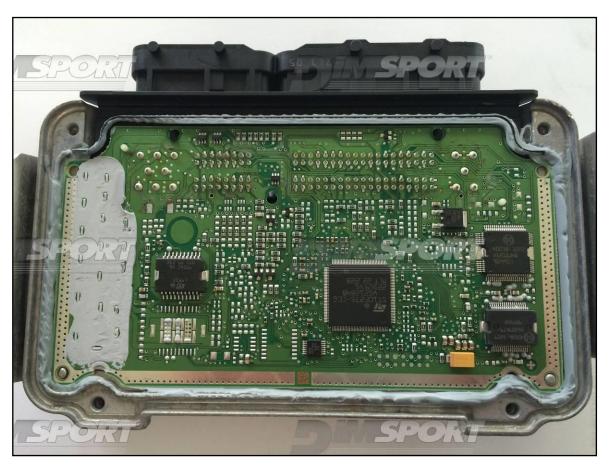

#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

#### DO NOT USE THIS CONNNECTION WITH THE METAL POSITIONING FRAME

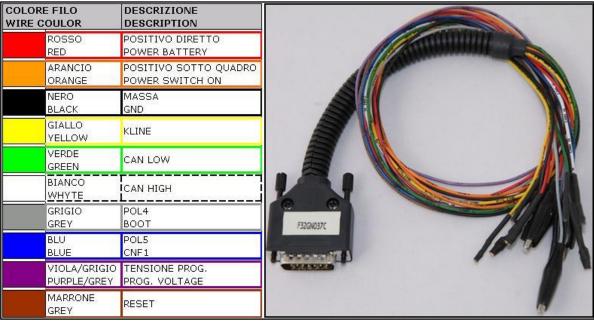


## **ECU CONNECTOR**



# **BOOT&CNF1 CONNECTION**

Connect GREY and BLUE wire2 of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COULOR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

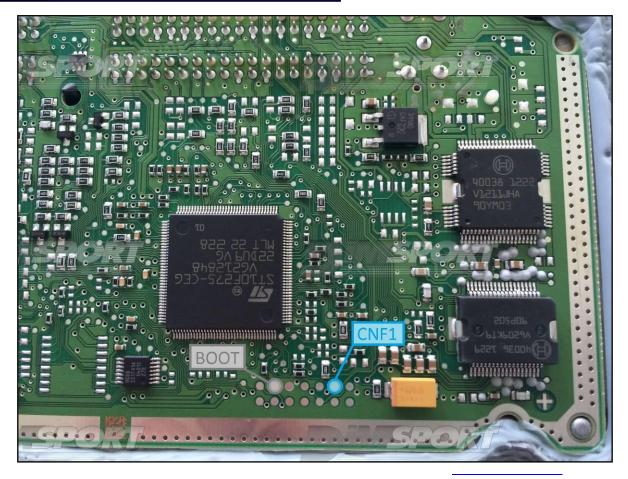

## **METAL POSITIONING FRAME**

