# plugin **1096**

Warning: for the BOOT connection it is required the use of the micro-clamps supplied in the Trasdata kit. Please read carefully the instructions here below.




# **ECU CONNECTION**

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

Do not use this connection with the DIMA, it will be the F34DM011 to power the ECU.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN03TC
BLU BLUE	POL5 CNF1	16.49
	TENSIONE PROG. PROG. VOLTAGE	CHILLS.
MARRONE BROWN	RESET	

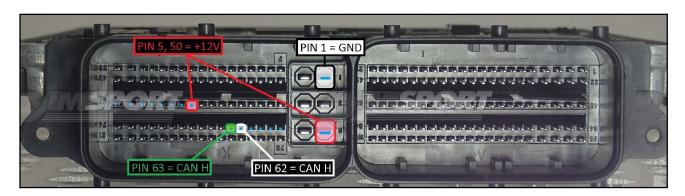


# **DIRECT BOOT CONNECTION**

Connect the GREY wire of the cable F32GN037C as shown in the picture.


COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

For a correct connection on the BOOT pin/ on the microprocessor pads you MUST/we suggest to use a/the specific micro clamps supplied in the kit K34ACD013/C34ACD012..

Warning: do not use other types of micro clamps, only these are completely insulated, otherwise the risk is to damage the microprocessor.

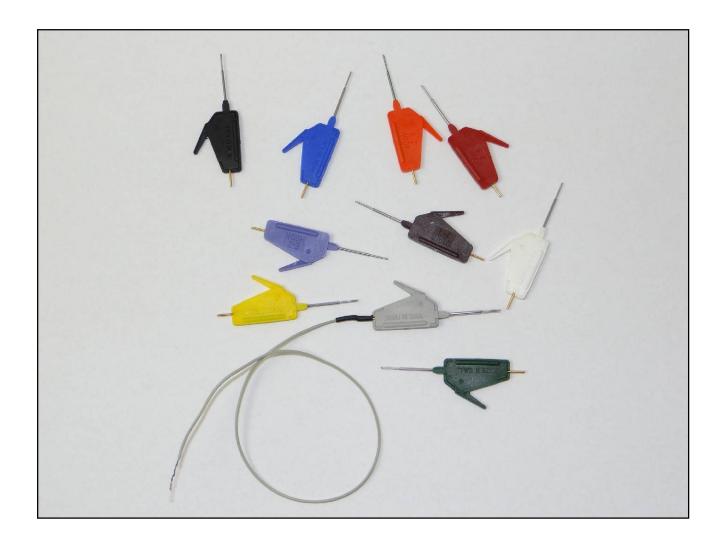


You need to clamp the sixth ball only, please check here below how to identify it.

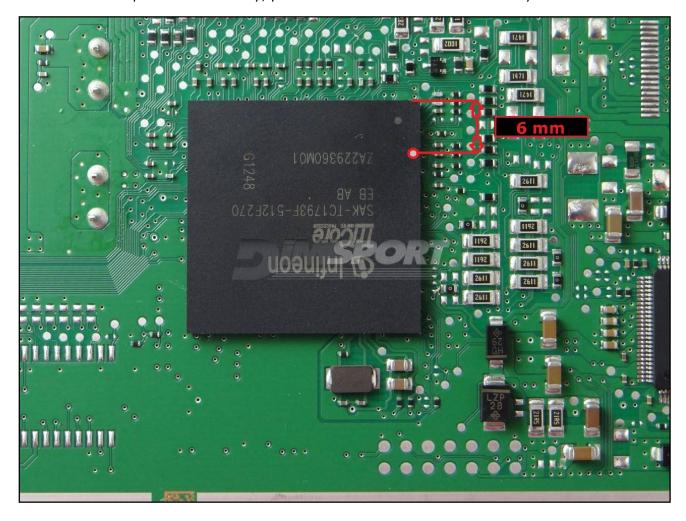

The ball to clamp is the 6th one from the right corner of the micro.





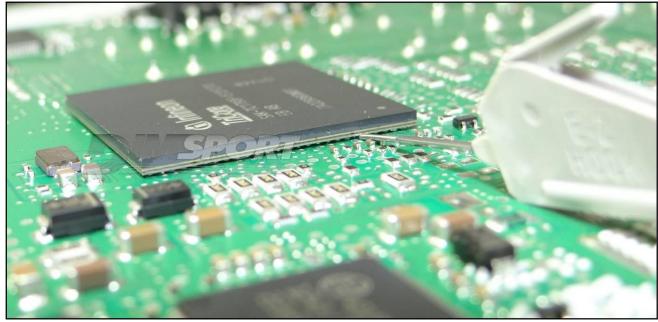



### **METAL POSITIONING FRAME CONNECTION**

For the METAL POSITIONING FRAME connection is required the F34DM011 adapter  $\pm$  the F32GN038 flat cable.

Connect the F32GN038 FLAT cable to the ANALOG PORT and to the F34DM011 DIMA adapter. Perform the connections as shown in the previous detail at pg.4-5 using for the BOOT signal the specific clamp on the F34DM011 DIMA adapter (verify that the yellow BOOT switch present on the F34DM011 is set in position ON).

