

### plugin 1051



### PROCESSOR SIDE

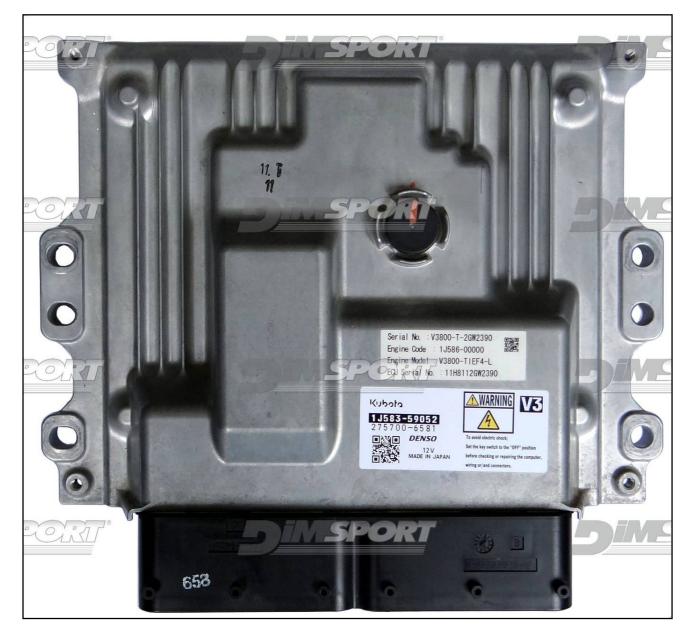


### COVER SIDE

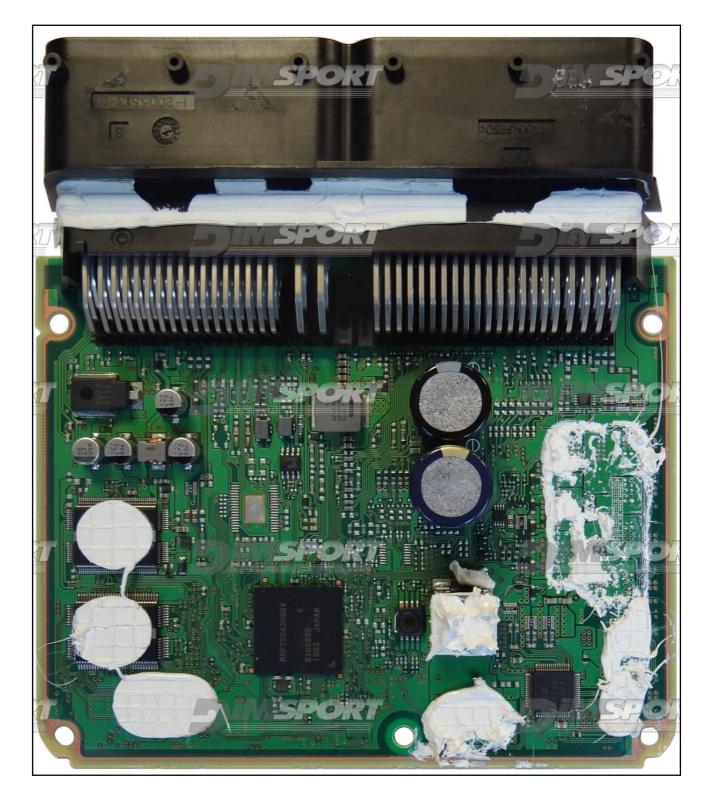

#### ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F320x097C
BLU BLUE	POL5 CNF1	Baccase Mills
VIOLA/GRIGIC PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WHENE
MARRONE BROWN	RESET	

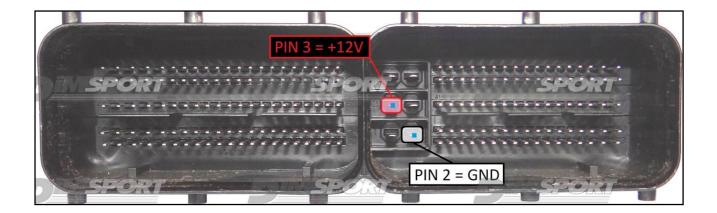

### F34NTA21 SOLDERING ADAPTER CONNECTION

In order to communicate with the ECU it is necessary to have the F34NTA21 soldering adapter and proceed with the following operations:

- identify the communication pads placed on the processor side of the motherboard




- For a correct F34NTA21 adapter base soldering procedure clean very well the lay-by pins from the plastic film. We suggest you a smoothing by gentle pressure using a fine grit glass-paper.



Solder the F34NTA21 adapter base on the motherboard taking care of the correct PIN1 positioning and avoiding any short circuits.

At the end of the work you can leave the base of the F34NTA21 adapter soldered on the ECU motherboard.

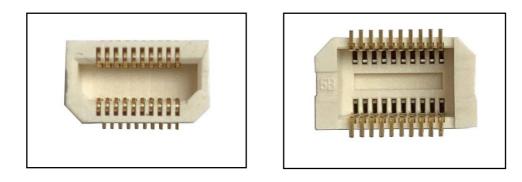



#### Warning

In order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.



Use the flat F34NTF03 to connect the F34NTA21 adapter to the digital port of the Trasdata

