


DENSO NEC76F0040GD 275036-7780 TOYOTA

plugin **934**


**WARNING :** for a correct identification of the ECU it is necessary to open the ECU and always check that the ECU numbers printed on the motherboard are the same as the numbers declared on the manual. Do not trust the numbers on the ECU cover.



DENSO NEC76F0040GD 275036-7780 TOYOTA

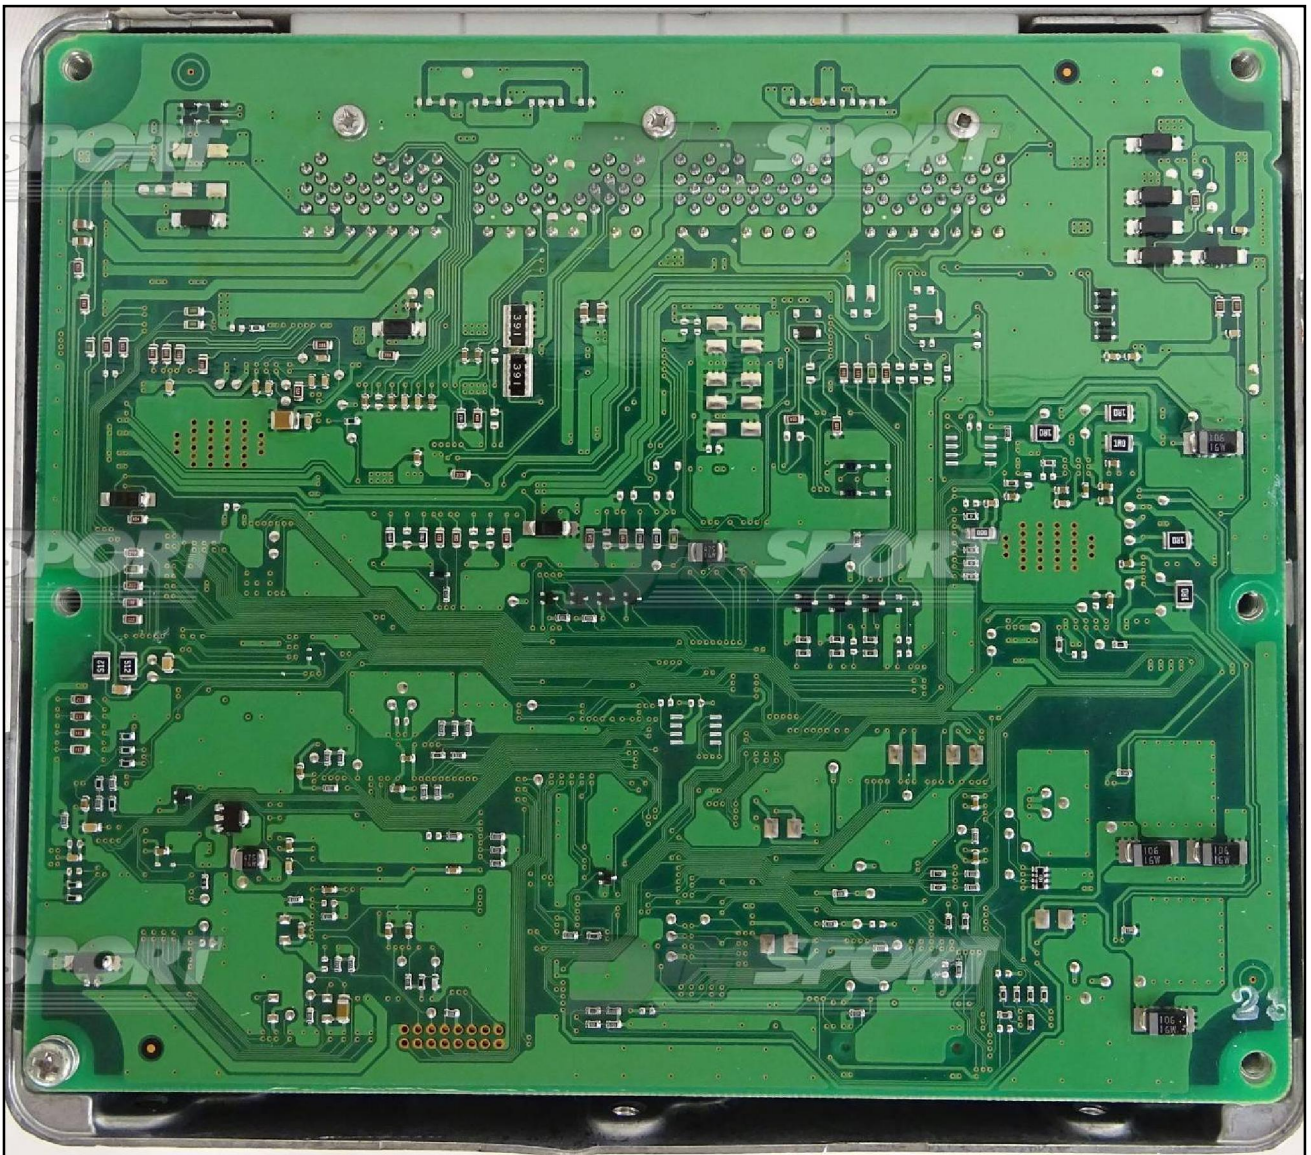

DENSO NEC76F0040GD 275036-7780 TOYOTA

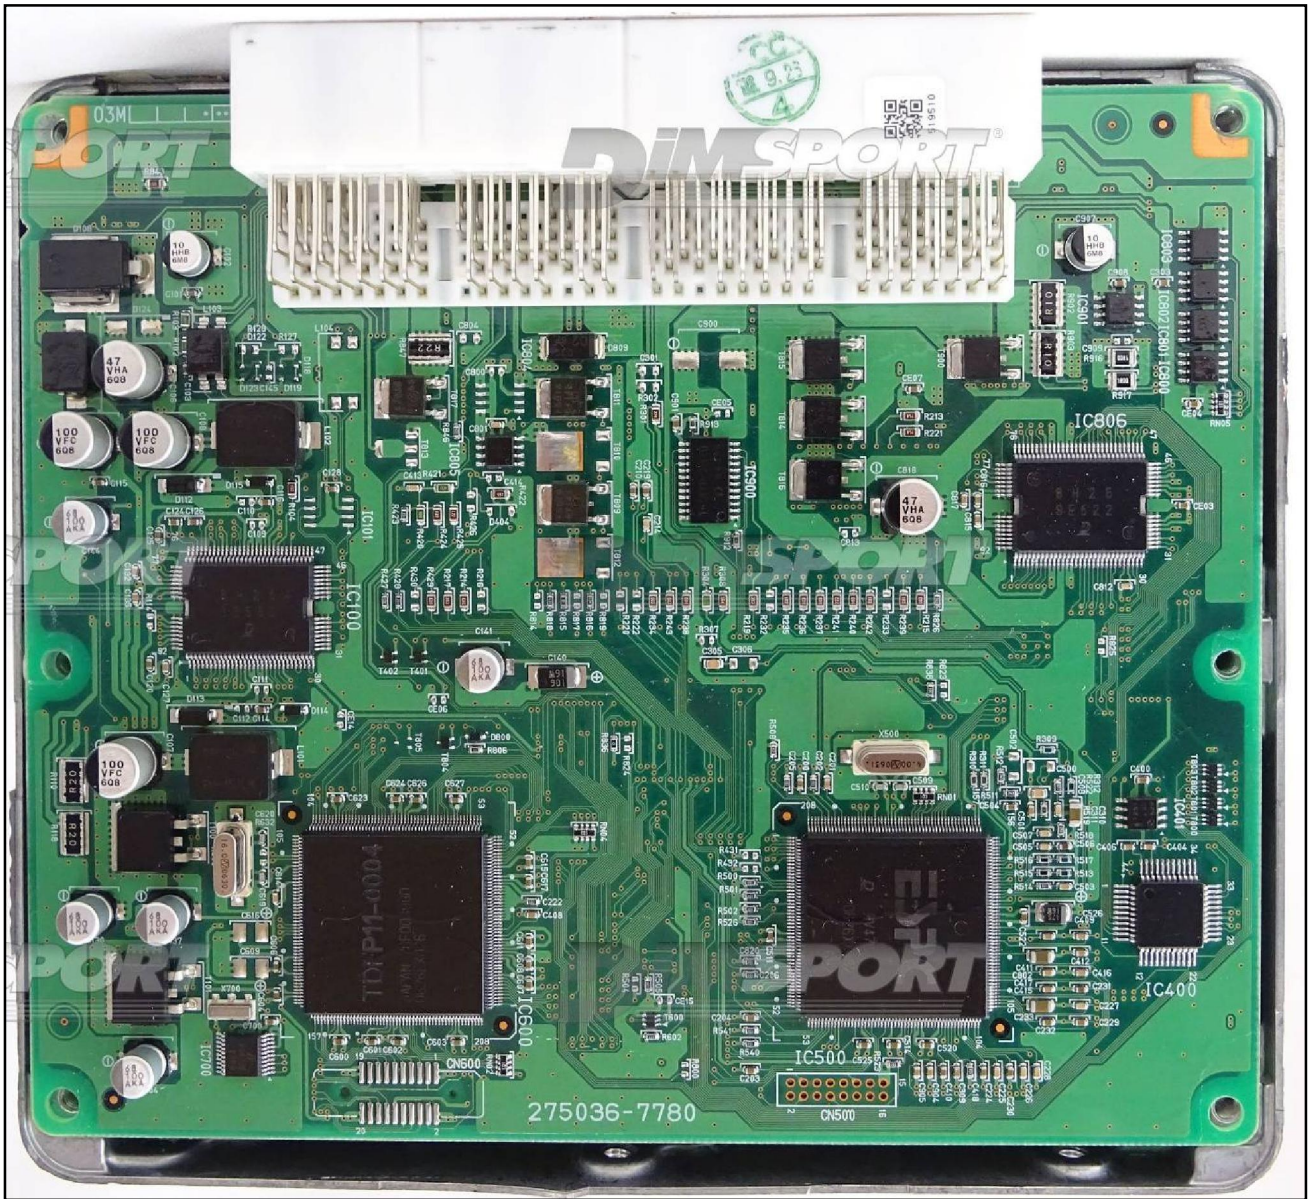

## DENSO NEC76F0040GD 275036-7780 TOYOTA


### DIRECT CONNECTION

For the connection use the cable F32GN037C connected to the ECU.


Make sure that the POWER led (red) on Trasdata is ON.

These connections are required for all the connection approaches: loose wires, soldering adapter, DIMA adapter.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

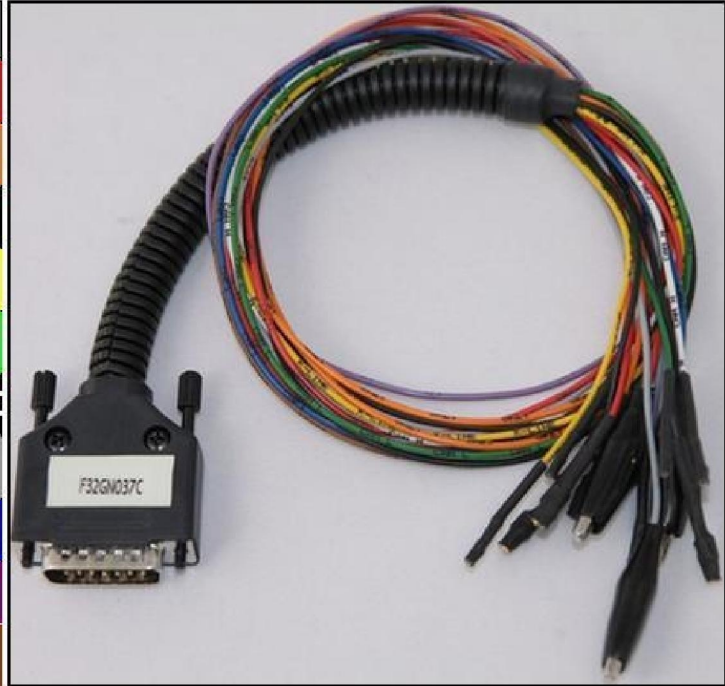



### ECU CONNECTOR

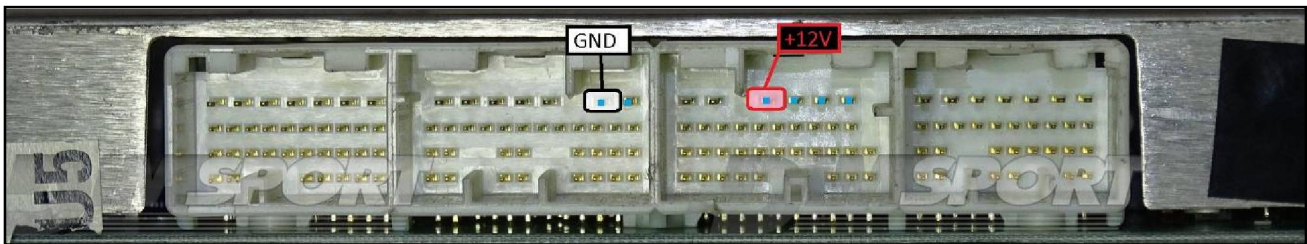

DENSO NEC76F0040GD 275036-7780 TOYOTA

**LOOSE WIRES CONNECTION:**

For the READING and WRITING procedure use the FLAT cable F34NTF53

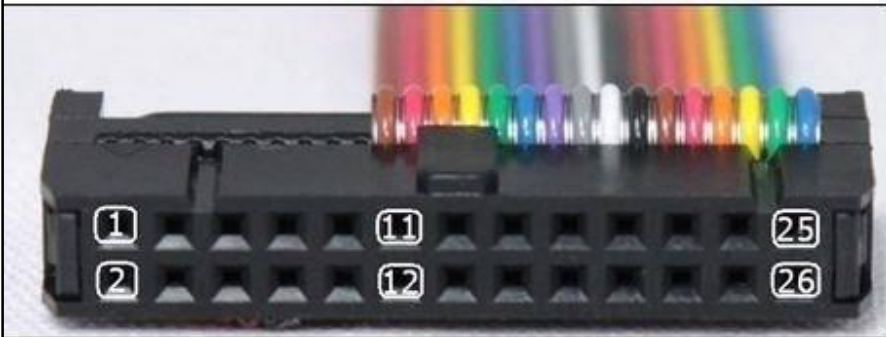



Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Verde Green
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used


DENSO NEC76F0040GD 275036-7780 TOYOTA

**WARNING:** the grey wire can be connected in two different ways to the pin 18:

- 1) directly soldered on the pad present on the upper side of the board

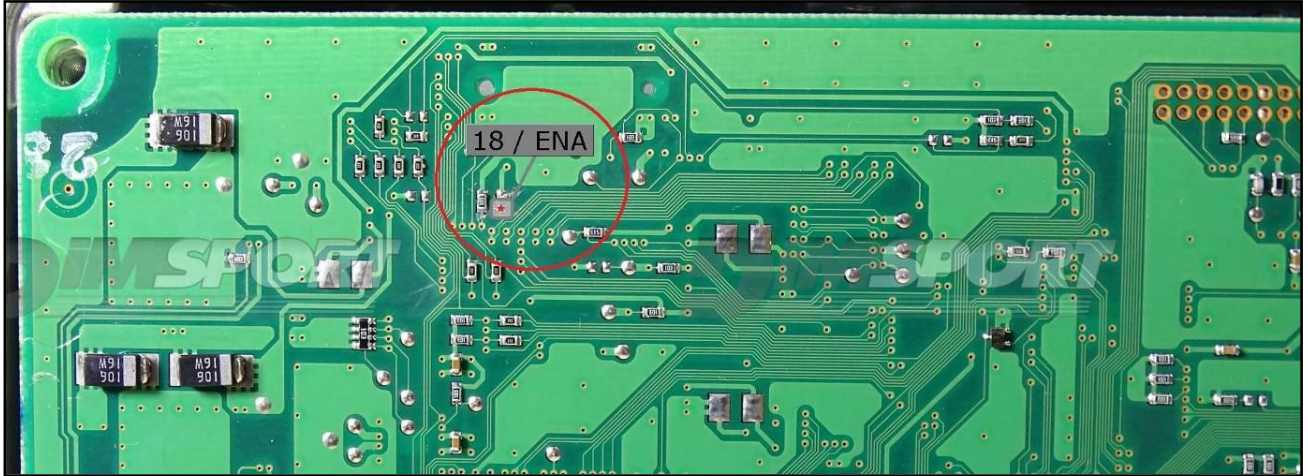


- 1) microclamp connected on the microprocessor then connect the grey wire 18 to the microclamp. (check the example picture here below)

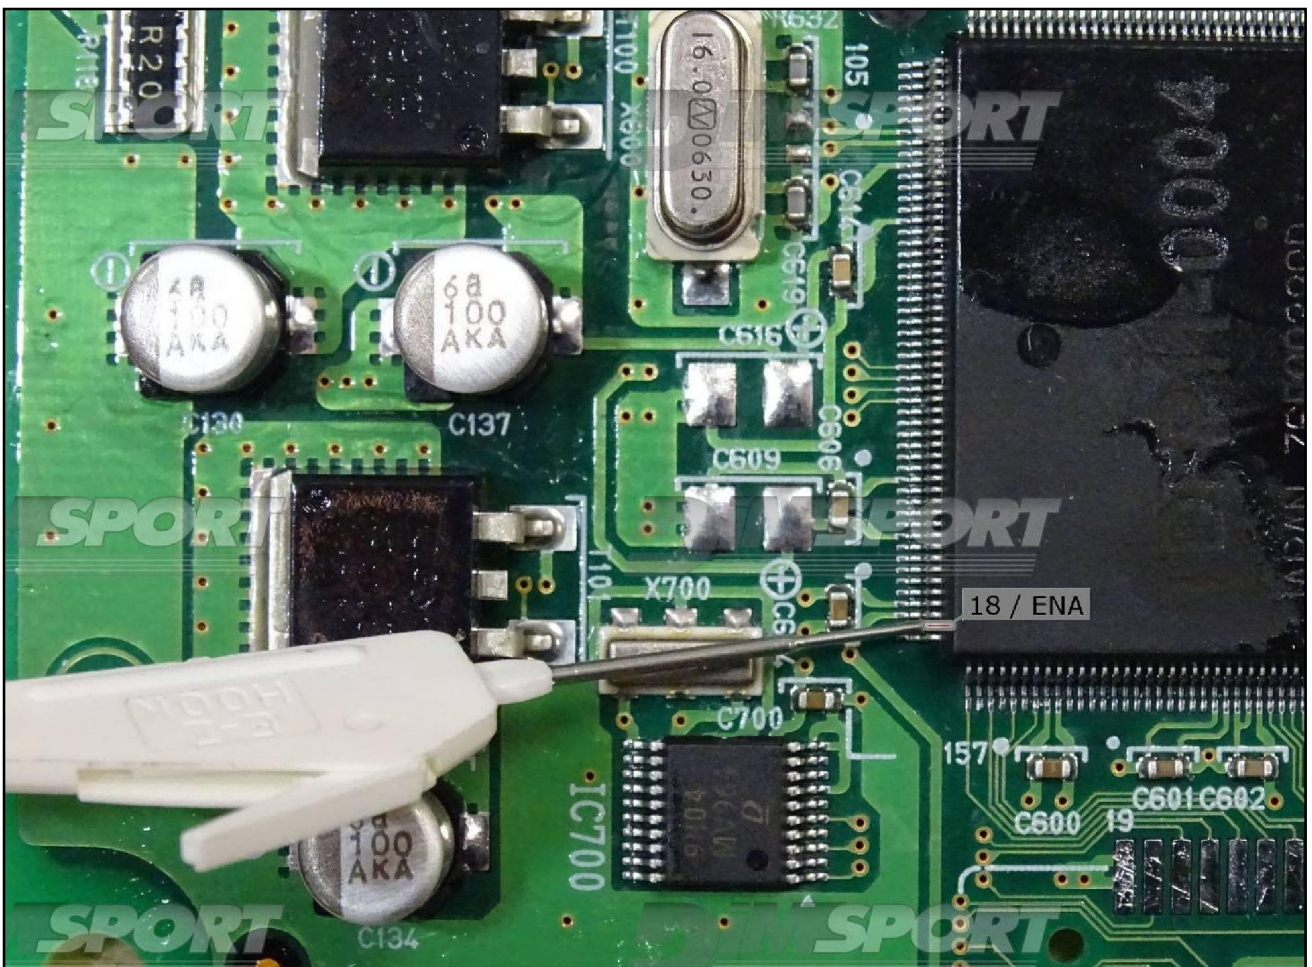

DENSO NEC76F0040GD 275036-7780 TOYOTA


**WARNING:** for a correct reading and writing operation it is necessary to perform a LINK between the pads displayed in the picture here below. Remove the LINK before placing back the ECU into the car.

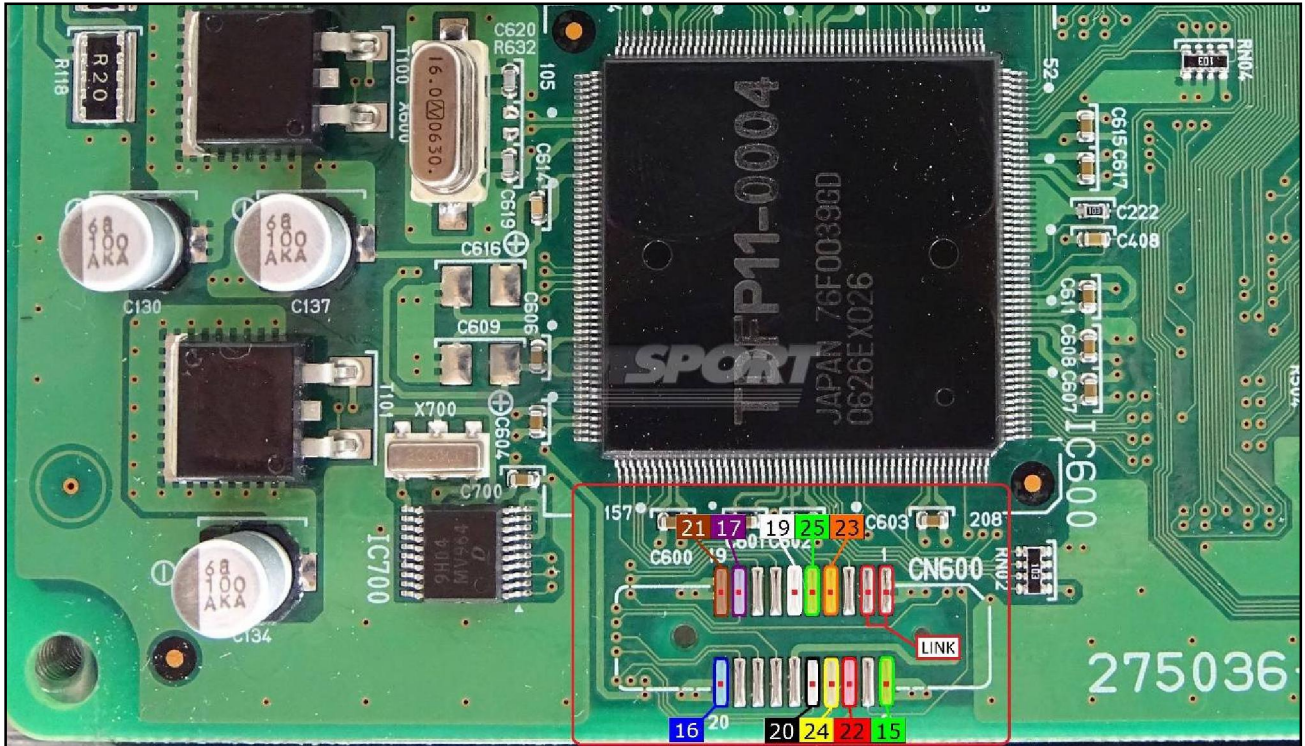

DENSO NEC76F0040GD 275036-7780 TOYOTA

**F34NTA16 Soldering adapter connection or F34DM023 adapter for metal positioning frame connection.**

In both cases, for a correct connection, it is necessary to identify the pin 1 for the reading&writing procedures and the pin 18 to enable the Microprocessor communication.

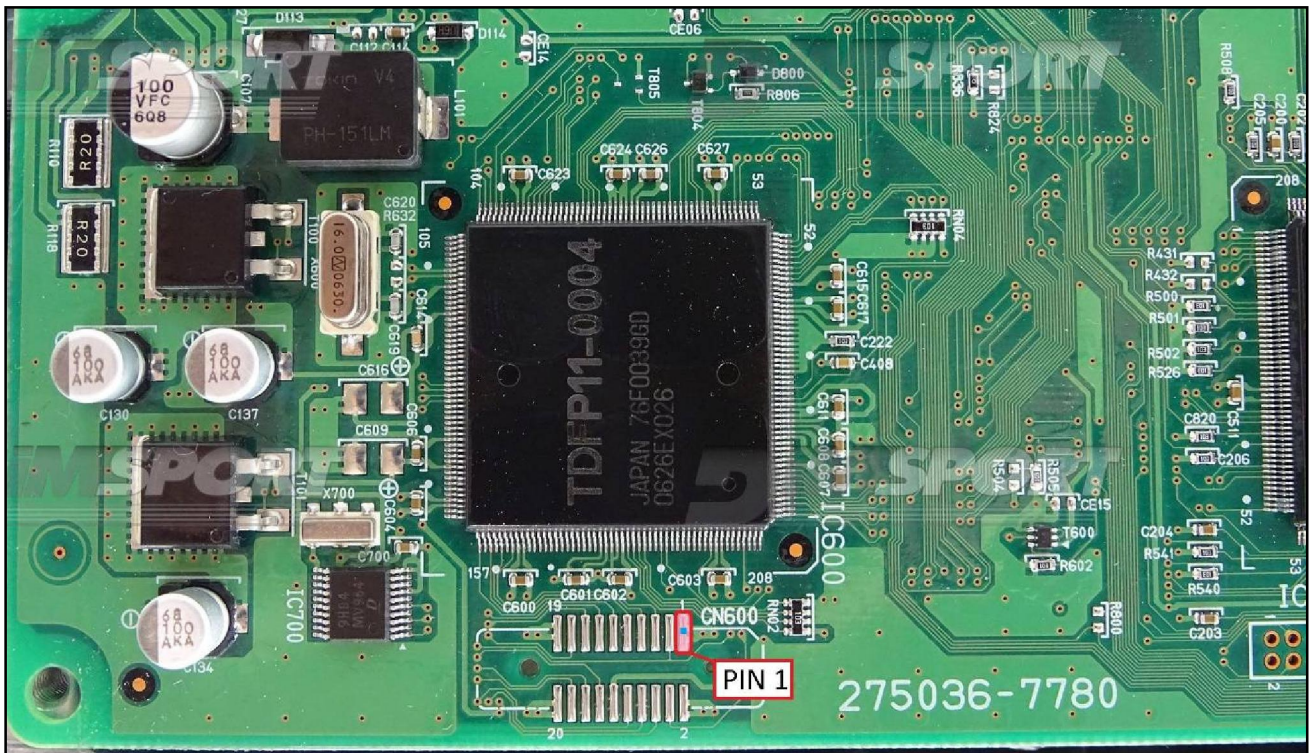


Identify the pin n.18 for the grey wire connection in order to enable the communication with the microprocessor, as explained in the following pages.




DENSO NEC76F0040GD 275036-7780 TOYOTA

**WARNING:** the grey wire can be connected in two different ways to the pin 18:

- 1) directly soldered on the pad present on the upper side of the board

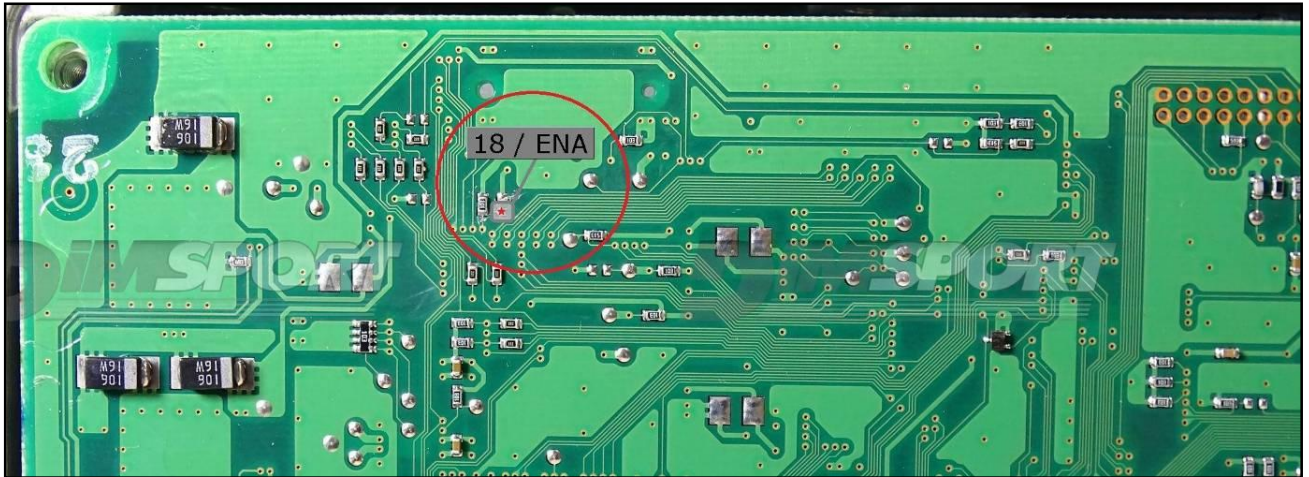


- 2) microclamp connected on the microprocessor then connect the grey wire 18 to the microclamp. (check the example picture here below)

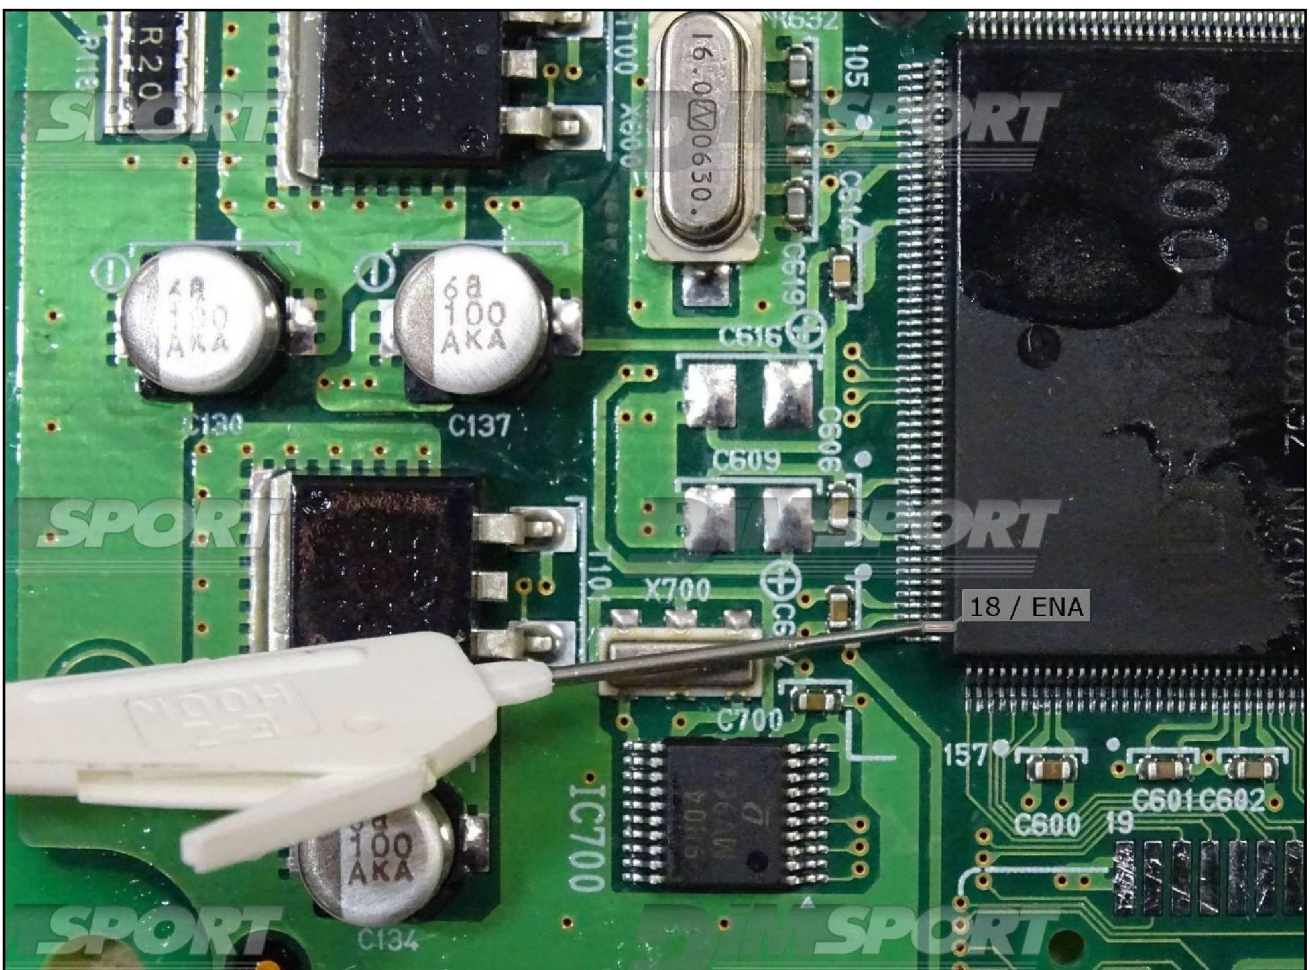


DENSO NEC76F0040GD 275036-7780 TOYOTA

### F34NTA16 Soldering adapter connection

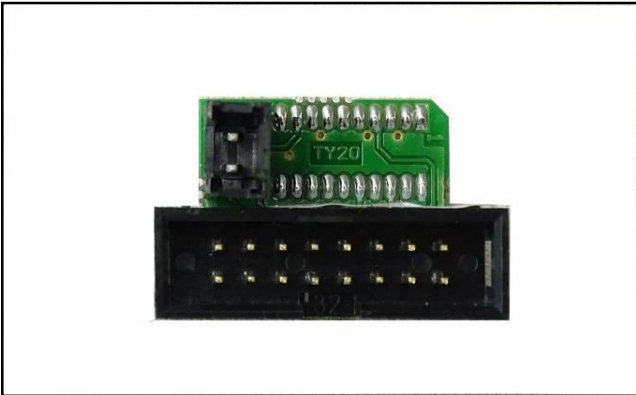



By using the grey wire supplied with the adapter connect the pad 18 (see pg.8-9) to the specific connector on the adapter itself.

The following picture of the F34NTA16 adapter connection is merely indicative.

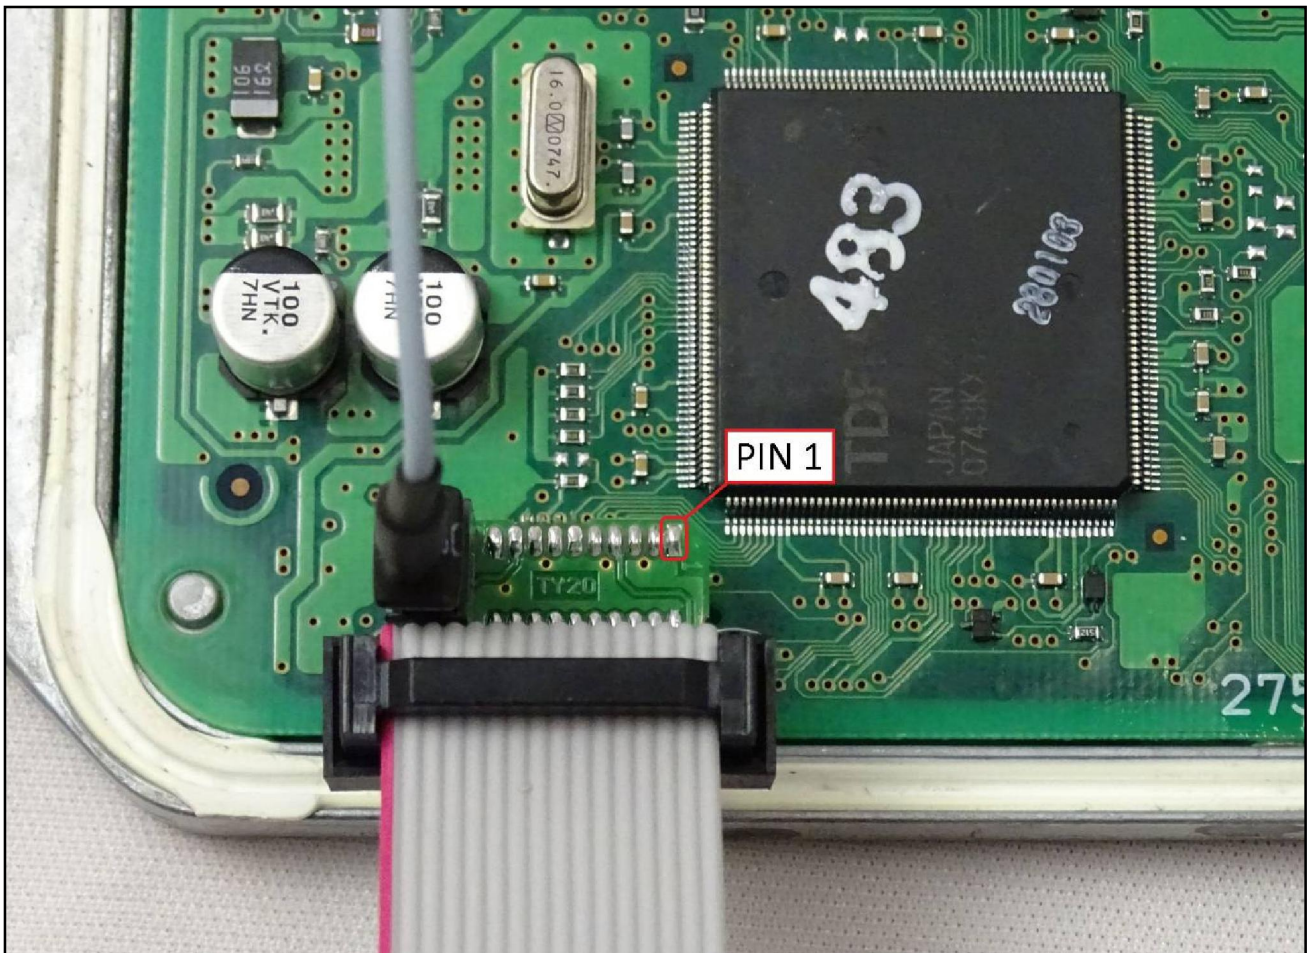

DENSO NEC76F0040GD 275036-7780 TOYOTA

### F34DM023 adapter for metal positioning frame connection

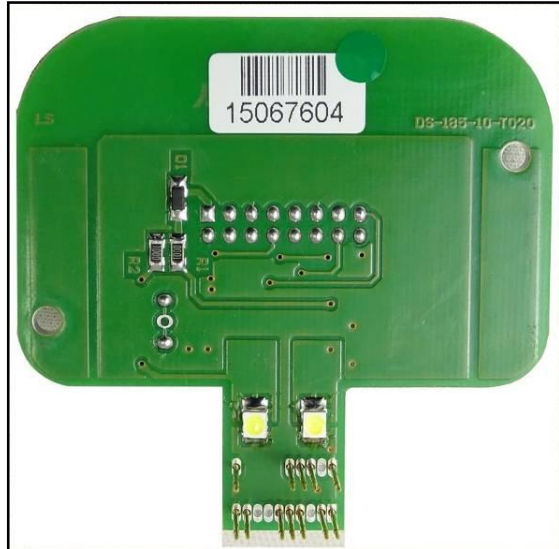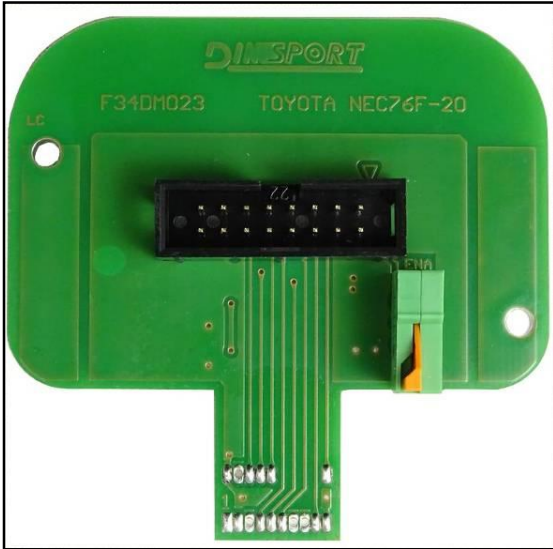

By using a wire connect the pad 18 (see pg.8-9) to the specific orange clamp ENA present on the F34DM023 adapter.

The following picture of the F34DM023 adapter connection is merely indicative.

