
# plugin 1522-1704



### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
5	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	CAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET	

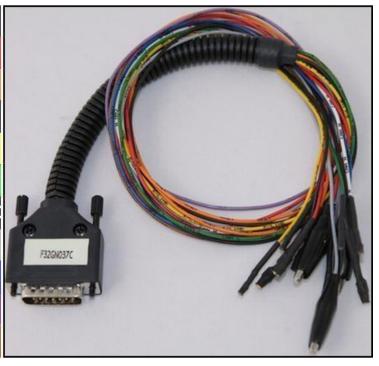

### **ECU CONNECTOR**



### WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

### **DIRECT CONNECTION - ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore	
***	Colour	
11	Non usato Not used	
70.000 K	Not used Non usato	-
12	Not used	
13	Non usato	
13	Not used	
14	Non usato Not used	
The second secon	Not used Non usato	
15	Not used	
16	Blu	
10	Blue	4
17	Viola Violet	
	Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero Black	
21	Marrone Brown	
22	Rosso	
The second secon	Red Arancio	
23	Orange	
24	Giallo	
24	Yellow	
25	Verde Green	Manager 1
507-66	Non usato	
26	Not used	

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

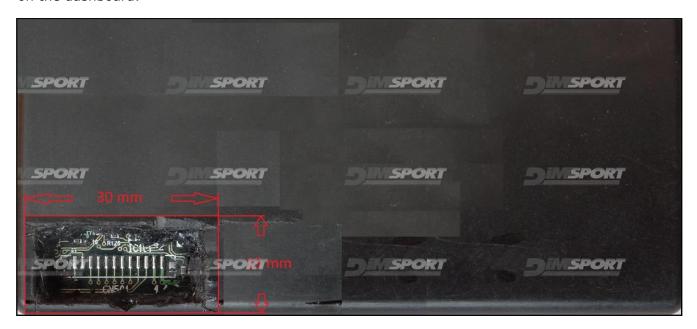



### **DIRECT CONNECTION - ECU WRITING:**

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
	BLU LUE	CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	OSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

