
# plugin **375**




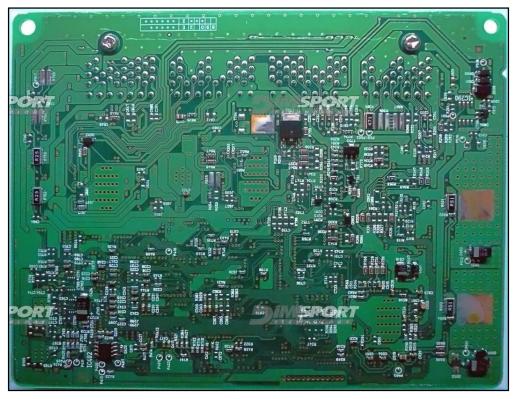


#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
VIOLA/GRIGIO	TENSIONE PROG.	
PURPLE/GREY	PROG. VOLTAGE	
MARRONE BROWN	RESET	

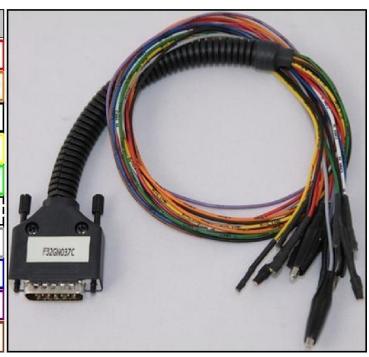

### **ECU CONNECTOR**

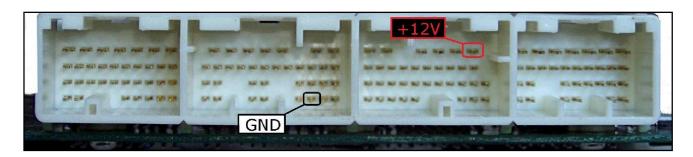

### **WARNING:**


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

### **DIRECT CONNECTION – ECU READING:**

For the READING procedure use the FLAT cable F34NTF53


	11 25 12 26	
Pin	Colore Colour	
11	Non usato	
ā da	Not used	
1.2	Non usato Not used	
PRE-SEC. 12	Not used Non usato	
13	Not used	
14	Non usato	
14	Not used	
15	Non usato	
With the second	Not used Blu	
16	Blue	
17	Viola	
17	Violet	
18	Grigio	
10	Grey	
19	Bianco White	
(a. 406-41)	Nero	
20	Black	
21	Marrone Brown	
22	Rosso	
200	Red Arancio	
23		
24	Orange Giallo	
27	Yellow	
25	Verde Green	Marie
500 GW	Non usato	
26	Not used	

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins. In order to read the ECU it is necessary to LINK the 2 pads as shown in the picture. At the end of the correct reading remove the LINK.

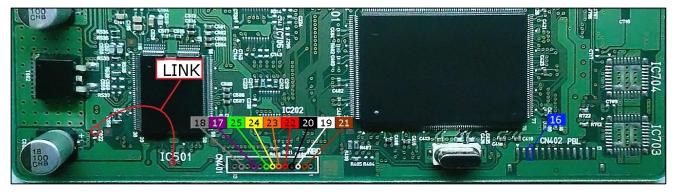

### **DIRECT CONNECTION - ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51

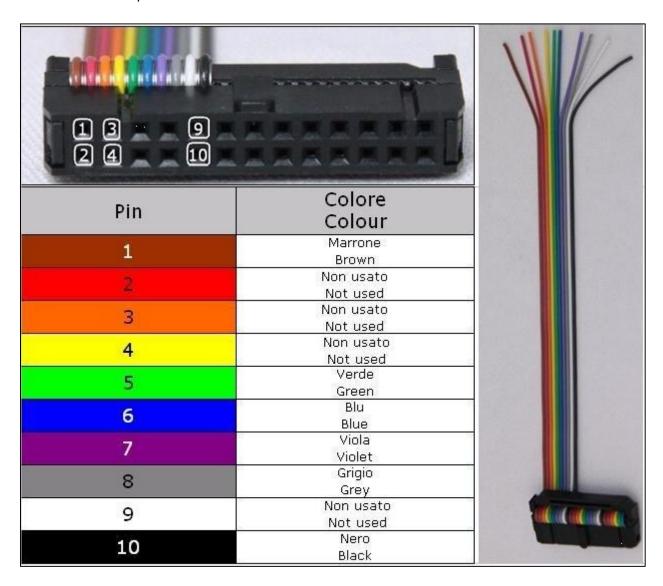

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins.

