plugin 1004

WARNING: for this ECU it <u>may be necessary</u> to recover the password by connecting the Trasdata to the OBDII socket of the vehicle.

If following the instructions of CASE 1 the communication with the control unit is not established, it is necessary to follow the instructions of CASE 2.

CASE 1: proceed with the normal bench connection, taking care to power the Trasdata unit using a stabilized external booster / power supply or an external battery.

Click on ID and follow the procedures to communicate with the ECU.

If the connection is good and you can manage the reading operations you can proceed without problems.

If you cannot communicate correctly with the control unit, follow the instructions of CASE 2.


CASE 2: if the bench connection and reading fails it is necessary to proceed with the following procedures:

- 1. connect Trasdata tool to the pc via USB
- 2. connect F34NTA14 cable to the Trasdata DB25 port
- 3. connect the F34NTA14 cable to the vehicle OBDII port
- 4. run the sw to manage the Trasdata tool
- 5. select the correct connection mode for the vehicle
- 6. click on ObdData button
- 7. wait until the end of the ObdData procedure

IF the procedure accomplish properly it is now possible to proceed with the normal bench connection and perform the standard reading/writing operations.

Required cable for ObdData operation: F34NTA14




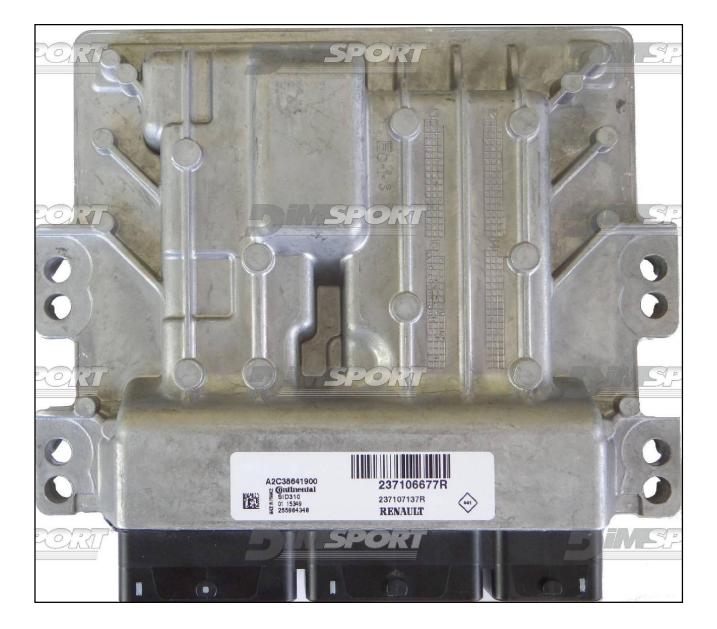


ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GND37C
BLU BLUE	POL5 CNF1	Passant 1
	TENSIONE PROG. PROG. VOLTAGE	SHANNS -
MARRONE BROWN	RESET	

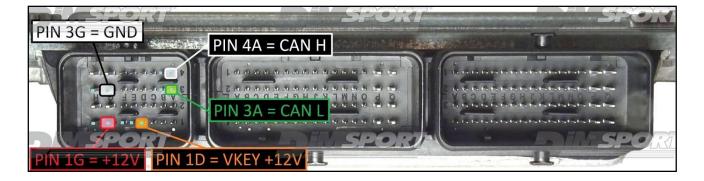

WARNING: due to the relevant power absorbed by the ECU at the beginning of the communication we suggest to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source. The ECU must be powered through the Trasdata using the F32GN037C/D cable

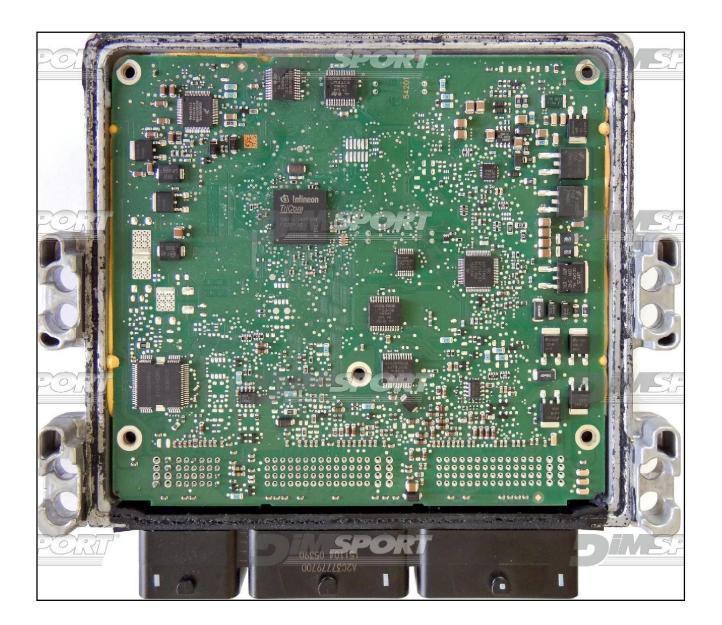

BOOT DIRECT CONNECTION

In order to read&write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

Connect the GREY wire of the cable F32GN037C/D as described here below:

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
GRIGIO	POL4
GREY	BOOT

